


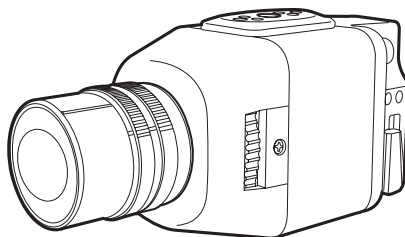

Installation/Operation

MC3651H-2 Series DSP Monochrome Camera

C1985M-E (4/03)



Pelco World Headquarters • 3500 Pelco Way, Clovis, CA 93612-5699 USA • www.pelco.com
USA & Canada: Tel: 800/289-9100 • Fax: 800/289-9150
International: Tel: 1-559/292-1981 • Fax: 1-559/348-1120

IMPORTANT SAFEGUARDS AND WARNINGS

Prior to installation and use of this product, the following WARNINGS should be observed.

1. Installation and servicing should only be done by qualified service and installation personnel.
2. Installation shall be done in accordance with all local and national electrical and mechanical codes utilizing only approved materials.
3. Use only installation methods and materials capable of supporting four times the maximum specified load.
4. Use only UL listed class 2 power supply.
5. To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

REGULATORY NOTICES

This equipment has been tested and found to comply with the limits of a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

DESCRIPTION

The MC3651H-2 and MC3651H-2X are high resolution, monochrome video cameras with a 1/3-inch EXviewHAD™ CCD imager. The cameras feature digital slow shutter (DSS) mode, a direct drive/auto iris lens connector, adjustable back focus, backlight compensation, automatic gain control, and an adjustable C/CS lens mount.

Models

MC3651H-2 High resolution, 570 TV lines, minimum illumination of 0.002 lux at f1.2 and 50 IRE, NTSC format

MC3651H-2X High resolution, 570 TV lines, minimum illumination of 0.002 lux at f1.2 and 50 IRE, PAL

CAMERA LAYOUT

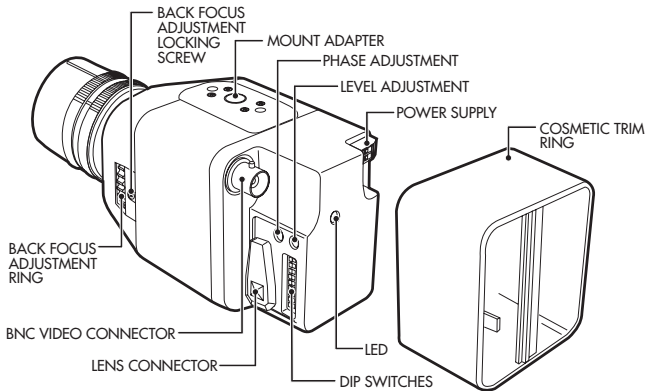


Figure 1. Camera Layout


NOTE: The cosmetic trim ring conceals the LED light for more discreet surveillance operations. The trim ring also hides the power connectors and protects the DIP switches.

INSTALLATION

Lens Mounting

The camera can use a fixed iris, manual iris, or auto iris. The camera is factory set for a CS-mount lens, but is easily adjusted for a C-mount lens.

1. **C-Mount Lens Only** - Rotate the back focus adjustment fully counterclockwise before installing the C-mount lens (refer to the section on *Back Focus Adjustment*).
2. Remove the cosmetic trim ring from the back of the camera (refer to Figure 1). Set the lens mode selector switch on the side of the camera to AIV (auto iris video drive lens) or AID (auto iris DC drive lens). Refer to the *Switch Settings* section. Switch setting is determined by the type of lens used.
3. Screw the lens onto the lens mount. Be careful to prevent dust from entering the space between the lens and the CCD element. If necessary, use clean, compressed air to remove any foreign matter.
4. Thread the lens cable through the cosmetic trim ring.
5. Connect the auto iris lens to the four-pin connector located on the side of the camera. Pin connections for the iris drive connector are as follows:

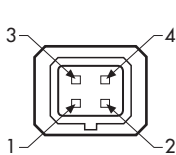

PIN	DC AUTO IRIS LENS	VIDEO AUTO IRIS LENS
1	Control coil negative (-)	Lens positive supply
2	Control coil positive (+)	Not used
3	Drive coil positive (+)	Video drive signal
4	Drive coil negative (-)	Ground

Figure 2. Lens Connections

Camera Mounting

Use a standard 1/4-20 screw (provided) with a maximum thread length of 3/8-inch (10 mm) for top or bottom camera mounting. The mount adapter may be fitted to the top or bottom of the camera. The camera is shipped with the mount adapter located on the top of the camera.

To change the mount adapter position:

- 1 Remove the four screws from the mount adapter located on the top of the camera.
- 2 Remove the trim cover from the bottom of the camera by prying it loose. Place the trim cover on the top of the camera where the mount adapter was removed. Press into place.
- 3 Install the mount adapter to the bottom of the camera. Secure with the four screws removed in step 1.

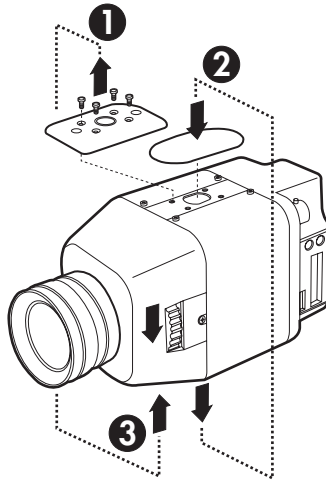


Figure 3. Camera Mounting

Power and Video Connections

The MC3651H-2 camera is designed to operate from a 12 VDC or 24 VAC power supply. The power supply connections are shown in Figure 1. The LED on the back panel of the camera indicates that power is connected. Use only a Class 2 isolated power supply. Power consumption is less than five watts.

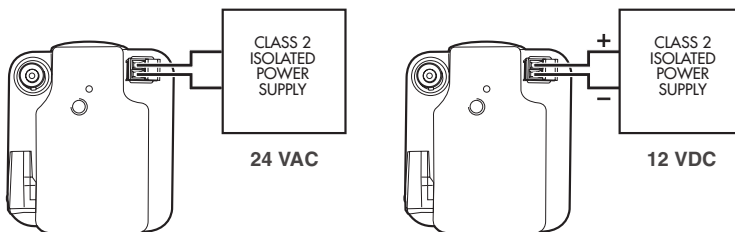


Figure 4. Power Supply Connections

To connect the camera power and video:

1. Remove the cosmetic trim ring from the camera (refer to Figure 1). Thread cabling through the rear cover.
2. Connect the power cable to the two pin power connector on the back of the camera using the terminal block connector (provided). Refer to Table A for the recommend wire gauge and wiring distances.
3. Connect a video cable to the SIGNAL OUT connector (BNC) on the back of the camera. Refer to Table B for the type of video coaxial cable to use.
4. Reattach the trim ring to the back of the camera.

AC Operation Only – If you are wiring more than one camera to the same transformer, connect one side of the transformer to the same terminal on all cameras, and connect the other side of the transformer to the remaining terminal on all cameras. Failure to connect all of the cameras the same way will cause the cameras to be out of phase with each other and may produce a vertical roll when switching between cameras.

Table A. Recommended Wire Gauge and Wiring Distances

The following are the recommended maximum distances for 24 VAC applications and are calculated with a 10-percent voltage drop. (Ten percent is generally the maximum allowable voltage drop for AC-powered devices.)

Wire Gauge

Total vA	20 (0.5 mm ²)	18 (1.0 mm ²)	16 (1.5 mm ²)	14 (2.5 mm ²)	12 (4.0 mm ²)	10 (6.0 mm ²)
10	283 (86)	451 (137)	716 (218)	1142 (348)	1811 (551)	2880 (877)

EXAMPLE: A camera that requires 10 vA and is installed 283 feet (86 m) from the transformer would require a minimum wire gauge of 20 AWG.

NOTE: Distances are calculated in feet; values in parentheses are meters.

Table B. Video Coaxial Cable Requirements

Cable Type*	Maximum Distance
RG59/U	750 ft (229 m)
RG6/U	1,000 ft (305 m)
RG11/U	1,500 ft (457 m)

* Minimum cable requirements:
 75 ohms impedance
 All-copper center conductor
 All-copper braided shield with 95% braid coverage

LENS SETUP AND FOCUS PROCEDURES

Video Drive Auto Iris Lens

When a video drive auto iris lens is used, the lens mode selector switch must be set to AIV. Switch the ESC and AGC OFF. Refer to the lens instructions and adjust the lens for the optimum picture (video output level of 1V peak-to-peak). Switch the AGC ON. To focus, fully open the iris by covering the lens with a suitable neutral density (ND*) filter. Set the lens focus to infinity (far). Select the scene to be viewed. Use the back focus adjustment ring (refer to the *Back Focus Adjustment* section) to focus on the selected scene. Remove the ND filter and set the lens focus as required.

Direct Drive (DC) Auto Iris Lens

Set the lens mode selector switch to AID. Switch the ESC ON. Use an appropriate screwdriver to turn the lens level potentiometer (refer to Figure 1) fully clockwise. Next, slowly adjust the potentiometer counter-clockwise until the optimum picture is obtained (video output level of 1V peak-to-peak). To focus, fully open the iris by covering the lens with a suitable neutral density (ND*) filter. Select the scene to be viewed. If the viewed scene is 6.5 feet (2 m) away or farther, set the lens focus to infinity (far). Use the back focus adjustment ring (refer to the *Back Focus Adjustment* section) and focus on the selected scene. Remove the ND filter and set the lens focus as required.

Fixed Lens

To focus, set the lens focus to infinity and view an image greater than 6.5 feet (2 m) away. Focus the image with the back focus adjustment ring (refer to the *Back Focus Adjustment* section). Set the lens focus as required.

Manual Iris Lens

To focus, open the iris fully and set the lens focus to infinity. View an image greater than 6.5 feet (2 m) away. Focus the image with the back focus adjustment ring (refer to the *Back Focus Adjustment* section). Adjust the lens focus, set the iris for the best picture quality. The largest aperture gives the best light sensitivity, the smallest aperture the greatest depth of field.

Zoom Lens

Set the lens focus to infinity (far) and fully open the iris by covering the lens with a suitable neutral density (ND*) filter. Zoom out to the widest field of vision and view a distant object. Adjust the back focus adjustment ring until the object is in focus (refer to the *Back Focus Adjustment* section). Next, zoom fully in and adjust the lens focus until the object is again focused. Repeat these steps until the full zoom range may be viewed with the minimum loss of focus.

***NOTE:** *For best results in outdoor lighting situations use an ND3 filter to focus the camera.*

BACK FOCUS ADJUSTMENT

The back focus adjustment is located at the front of the camera and is accessible from either side of the case.

To adjust the back focus:

1. Loosen the two back focus locking screws (one on each side).
2. Turn the back focus ring until the object is in focus.
3. When the back focus adjustment is satisfactory, tighten the locking screws. Do not over tighten locking screw or force the back focus adjustment ring.

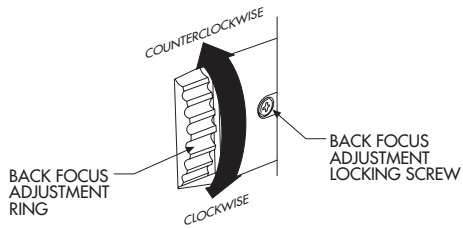


Figure 5. Back Focus Adjustment

SWITCH SETTINGS

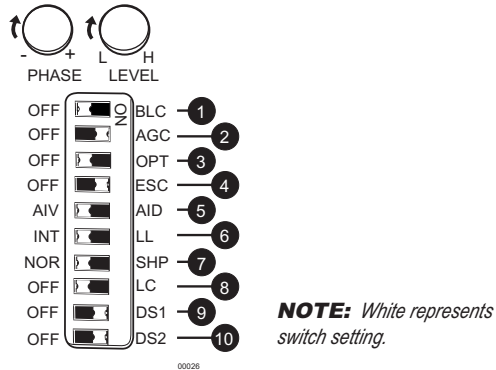


Figure 6. Default Settings

- 1 BLC** - Back Light Compensation
OFF (Default setting) - Disables the BLC mode.
BLC - Enables the BLC mode. If a bright backlight is present the subjects in the picture may appear dark or as a silhouette. BLC compensates for the bright backlight and enhances objects in the center of the picture. Set the AGC switch to ON when using the BLC function.
- 2 AGC** - Automatic Gain Control
OFF - Disables the AGC mode.
AGC (Default setting) - Enables the AGC mode. Automatically adjusts the image to compensate for changes in light levels when using fixed or manual iris lenses.
- 3 OPT** - Optima
OFF (Default setting)
OPT - Boost the video by 3dB.
- 4 ESC** - Electronic Shutter Control
OFF - Disables the ESC mode.
ESC (Default setting) - Enables the ESC mode. The ESC function automatically changes the sensitivity of the camera by varying the electronic shutter speed according to the amount of incident light. Electronic shutter speed range is 1/60 to 1/100,000.
- 5 AIV/AID** - Auto Iris Lens Mode Selector
 The switch setting is determined by the type of lens used:
AIV (Default setting) - Video controlled Auto Iris lens.
AID - DC controlled Auto Iris lens. Disable the ESC mode when using a DC controlled lens.
- 6 INT/LL** - Internal/Line Lock
Line Lock (LL) - Locks the frame rate to the power supply frequency. Eliminates vertical roll caused by multiple cameras connected to the same switching device.
Internal (Default setting) - Locks the frame rate to the internal oscillator. Use with DC or unstable AC.

7 NOR/SHP - Sharpness

NOR (Default setting) - Sets the camera to normal sharpness mode.

SHP - Enables the Sharpness mode. Enhances picture detail by increasing the aperture gain of the camera, sharpening the edges in the picture.

8 LC - Long Line Compensation

OFF (Default setting) - Disables the Long Line Compensation mode.

LC - Enables the Long Line Compensation mode. Boosts the video drive level to 1.25 Vp-p for long line transmission.

9 DS1 and 10 DS2 - Digital Slow Shutter

Digital slow shutter slows the picture frame rate and increases the camera sensitivity under low light conditions. Depending on the number of fields of integration the picture will develop a granular appearance and motion may show some lag, resulting in a stereoscopic effect or streaking on fast moving objects. These effects increase as the number of fields of integration increases.

For the DSS mode to operate correctly set the OPT switch to OFF and the AGC switch to ON. The camera has four DSS settings:

 **OFF** - Disables the DSS mode.

 **4 Fields of Integration Maximum** - 1/15-second scene update rate.

 **16 Fields of Integration Maximum** - 1/4-second scene update rate.

 **30 Fields of Integration Maximum** (Default setting) - 1/2-second scene update rate.

00028

NOTE: *White represents switch position.*

Digital slow shutter automatically adjusts the number of fields of integration depending on the light level of the viewed scene, up to the maximum determined by the settings of switches (9) and (10).

CAMERA SYNCHRONIZATION (AC OPERATION ONLY)

When using more than one camera power supply, a brief vertical roll may occur on the monitor each time a camera view is switched. To eliminate vertical roll, adjust the phase control by synchronizing, or line-locking, the cameras to one another. Use the phase potentiometer located on the side of the camera to make adjustments.

It may be necessary to have two people in communication when synchronizing the cameras: one person at the camera and another person at the monitor to observe the vertical roll and the effect of any adjustments made at the camera.

To synchronize the cameras do the following:

1. Choose a reference camera to which all other cameras will be phased.
2. Select a camera and synchronize it to the reference camera by turning the phase adjustment control clockwise and/or counterclockwise.
3. Each time an adjustment is made, switch back and forth between the camera you are adjusting and the reference camera. Repeat this process as many times as necessary, until the roll between the cameras is no longer noticeable.
4. Adjust the phase of all other cameras by repeating steps 2 through 3. Always adjust to the reference camera selected in step 1.

NOTE: *The preferred method for camera phase adjustment is to use a dual trace oscilloscope to align the vertical sync pulses of the reference camera to the selected camera(s).*

SPECIFICATIONS

GENERAL

CCD Sensor:	1/3-inch interline transfer
Picture Elements	
MC3651H-2:	768 (H) x 494 (V)
MC3651H-2X:	795 (H) x 596 (V)
Sensing Area:	6 mm diagonally
Synchronize System:	INT/AC line lock
Horizontal Resolution	570 TV lines
Iris Control:	Electronic/passive
Minimum Illumination	0.0035 lux at f1.2, 50 IRE 0.002 lux at f1.2, 35 IRE
ESC:	1/60-1/100,000 second
Signal-to-Noise Ratio:	50 dB (AGC off)
Vertical Phase:	Adjustable 0° ±170°
Automatic Gain Control:	Selectable by DIP switch setting
Backlight Compensation:	Selectable by DIP switch setting
Scanning System	
MC3651H-2:	525 lines, 2:1 interlace
MC3651H-2X:	625 lines, 2:1 interlace
Signal Processing:	DSP with microprocessor control
Auto Iris Lens Type:	DC/video control, selectable by DIP switch setting
Video Output:	1 Vp-p, 75 ohms 1.2 Vp-p for long-line transmission

ELECTRICAL

Power Requirements	
24 VAC:	18-30 VAC
12 VDC:	10-36 VDC
Power Consumption	3.3 watts maximum 5.4 vA maximum
Power Connector	2-pin terminal strip, push-in type
Video Connector	BNC
Lens Jack	4-pin connector (miniature square)

MECHANICAL

Lens Mount	C/CS mount (adjustable)
Camera Mount	Use 1/4-20 screw, top or bottom of camera housing

ENVIRONMENTAL

Operating Temperature:	14° to 122°F (-10° to 50°C)
Storage Temperature:	14° to 158°F (-10° to 70°C)

PHYSICAL

Dimensions:	2.48 (W) x 2.67 (H) x 4.33 (D) inches (6.3 x 6.8 x 11 cm)
Weight (without lens):	0.77 lb (0.35 kg)

(Design and product specifications subject to change without notice.)

WARRANTY AND RETURN INFORMATION

WARRANTY

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship for a period of one year after the date of shipment. Exceptions to this warranty are as noted below:

- Five years on Pelco manufactured cameras (CC3500/CC3600/CC3700 and MC3500/MC3600 Series); two years on all other cameras.
- Three years on Genex[®] Series (multiplexers, server, and keyboard) and 090 Series Camclosure[®] Camera System.
- Two years on 100/150, 200, and 300 Series Camclosure Camera Systems.
- Two years on all standard motorized or fixed focal length lenses.
- Two years on Legacy[®], CM6700/CM6800/CM6800E/CM8500/CM9500/CM9740/CM9760 Matrix, DF5 and DF8 Series Fixed Dome products.
- Two years on Spectra[®], Esprit[®], and PS20 Scanners, including when used in continuous motion applications.
- Two years on Esprit and WW5700 series window wiper (excluding wiper blades).
- Eighteen months on DX Series digital video recorders.
- One year (except video heads) on video cassette recorders (VCRs). Video heads will be covered for a period of six months.
- Six months on all pan and tilts, scanners or preset lenses used in continuous motion applications (that is, preset scan, tour and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to Pelco, Clovis, California. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800) 289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

1. Model and serial number
2. Date of shipment, P.O. number, Sales Order number, or Pelco invoice number
3. Details of the defect or problem

If there is a dispute regarding the warranty of a product which does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

RETURNS

In order to expedite parts returned to the factory for repair or credit, please call the factory at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair).

All merchandise returned for credit may be subject to a 20% restocking and refurbishing charge.

Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid. Ship to the appropriate address below.

If you are located within the continental U.S., Alaska, Hawaii or Puerto Rico:

Service Department
Pelco
3500 Pelco Way
Clovis, CA 93612-5699

If you are located outside the continental U.S., Alaska, Hawaii or Puerto Rico:

Intermediate Consignee	Ultimate Consignee
American Overseas Air Freight	Pelco
320 Beach Road	3500 Pelco Way
Burlingame, CA 94010	Clovis, CA 93612-5699
USA	USA

® Pelco, the Pelco logo, Spectra, Genex, Esprit, Camclosure, and Legacy are registered trademarks of Pelco.

™ EXview HAD is a trademark of Sony Corporation.

© Copyright 2003, Pelco. All rights reserved.

REVISION HISTORY

Manual #	Date	Comments
C1985M	10/00	Original version.
C1985M-A	12/00	Added note for cosmetic trim ring. Revised switch setting illustration to depict default settings.
C1985M-B	7/01	Added camera model MC3651H-2X.
C1985M-C	6/02	Revised the lens connector wiring chart.
C1985M-D	8/02	Revised the <i>Direct Drive (DC) Auto Iris Lens</i> in the <i>Lens Setup and Focus Procedures</i> section.
C1985M-E	4/03	Added S-mark certification.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>