


SAMSUNG

Installation and Operating Instructions

Built-In Oven

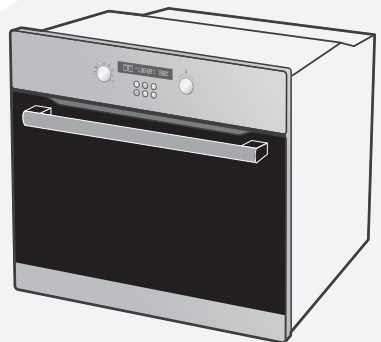

BF62CCBST

Owner's Manual

Contents

Using This Manual	2
Safety Instructions	2
Electrical safety	2
Safety during operation	3
Disposal Instructions	3
Installing the Oven	4
Safety instructions for the installer	4
Installing into a low cabinet	4
Connecting to the mains power supply	5
Installing into a high cabinet	6
Parts and Features	7
Oven	7
Oven controls	8
Accessories	9
Using the accessories	10
Safety shutoff	10
Cooling fan	10
Before You Begin	11
Setting the clock	11
Initial cleaning	12
Oven functions	13
Test dishes	21
Oven Use	22
Setting the Cooking Function mode	22
Setting the oven temperature	23
Switching the oven off	24
End time	24
Cook time	25
Delayed start	26
Kitchen timer	28
Auto Cook	29
Oven lamp on/off	30
Child safety function	31
Switching the beeper off	31
Cleaning and Care	32
Catalytic enamel surface	33
Cleaning the oven door	34
Side Runners	37
Changing the lamp	40
Warranty & Service	41
FAQs and Troubleshooting	41
Technical data	43

Using This Manual

Thank you for choosing a SAMSUNG Built - In Oven.

This Owner's Manual contains important information on safety and instructions intended to assist you in the operation and maintenance of your appliance.

Please take the time to read this Owner's Manual before using your oven and keep this book for future reference.

The following symbols are used in the text of this Owner's Manual.



Important



Note

Safety Instructions

Installation of this oven must be performed only by a licensed electrician. The installer is responsible for connecting the appliance to the mains power supply in observance of the relevant safety recommendations.

Electrical safety

If the oven has been damaged in transport, do not connect it.

- This appliance must be connected to the mains power supply only by a **specialty licensed electrician**.
- In the event of a fault or damage to the appliance, do not attempt to operate it.
- **Repairs** should be performed by a **licensed technician** only. Improper repair may result in considerable danger to you and others. If your oven needs repair, contact a SAMSUNG Service Centre or your dealer.
- If the supply cord is defective, it must be replaced by a special cord or assembly available from the manufacturer or an authorised service agent.
- Electrical leads and cables should not be allowed to touch the oven.
- The oven should be connected to the mains power supply by means of an approved circuit breaker or fuse. Never use multiple plug adapters or extension leads.
- The rating plate is located on the right side of the door.
- The power supply of the appliance should be turned off when it is being repaired or cleaned.
- Take care when connecting electrical appliances to sockets near the oven.

WARNING

The appliance should be powered down before replacing the lamp to avoid the possibility of electric shock. During oven operation, the interior surfaces become very hot.

WARNING

Accessible parts may become hot during use. Young children should be kept away.

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass. (if provided)
- When moving heating elements, make sure to use the equipment designed to move heating element while wearing safety gloves provided with the product, and see if temperature drops sufficiently (at least 10 minutes after grill or combination cooking operation) after operation.

Safety Instructions (Continued)

EN

Safety during operation

- This oven has been designed only for the cooking of household foods.
- During use, the oven interior surfaces become hot enough to cause burns. Do not touch heating elements or interior surfaces of the oven until they have had time to cool.
- Never store flammable materials in the oven.
- The oven surfaces become hot when the appliance is operated at a high temperature for an extended period of time.
- When cooking, take care when opening the oven door as hot air and steam can escape rapidly.
- When cooking dishes that contain alcohol, the alcohol may evaporate due to the high temperatures and the vapour can catch fire if it comes into contact with a hot part of the oven.
- For your safety, do not use high-pressure water cleaners or steam jet cleaners.
- Children should be kept at a safe distance when the oven is in use.
- Frozen foods such as pizzas should be cooked on the wire grill. If the baking tray is used, it may become deformed due to the great variation in temperatures.
- Do not pour water into the oven bottom when it is hot. This could cause damage to the enamel surface.
- The oven door must be closed during cooking.
- Do not line the oven bottom with aluminium foil and do not place any baking trays or tins on it. The aluminium foil blocks the heat, which may result in damage to the enamel surfaces and cause poor cooking results.
- Fruit juices will leave stains, which can become indelible on the enamel surfaces of the oven. When cooking very moist cakes, use the deep pan.
- Do not rest bakeware on the open oven door.
- This appliance is not intended for use by young children or infirm persons without the adequate supervision of a responsible person ensuring that they are using the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

Disposal Instructions

Disposing of the packaging material

- The material used to package this appliance is recyclable.
- Dispose of the packaging materials in the appropriate container at your local waste disposal facility.

Disposing of old appliances

WARNING

Before disposing of old appliances, make them inoperable so that they cannot be a source of danger.

To do this, disconnect the appliance from the mains supply and remove the mains lead.

To protect the environment, it is important that old appliances are disposed of in the correct manner.

- The appliance must not be disposed of with household rubbish.
- You can obtain information about collection dates and public refuse disposal sites from your local refuse department or council.

Installing the Oven

EN

- ⚡ Electrical installation of this appliance must be performed only by a licensed electrician.





The oven must be installed according to the instructions supplied.
Remove the protective vinyl from the door after installation.

Safety instructions for the installer

- Installation must guarantee protection against exposure to electrically live parts.
- The unit in which the appliance is fitted must satisfy the requirements of DIN 68930 in respect of stability.

Installing into a low cabinet


- Observe minimum clearance requirements.
- Secure oven into place with screws on either side of the oven.

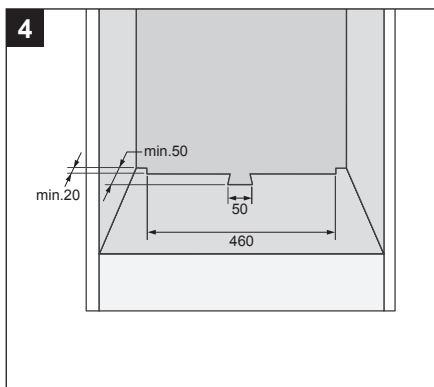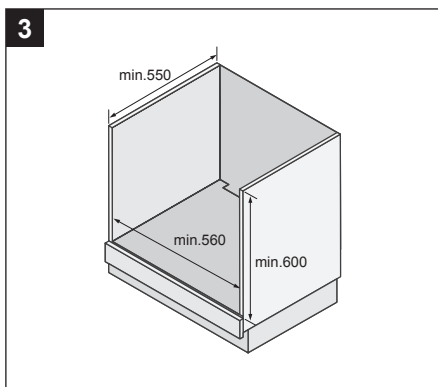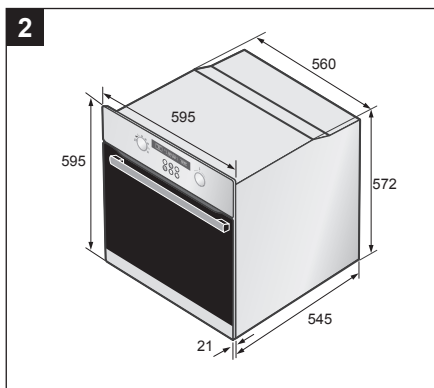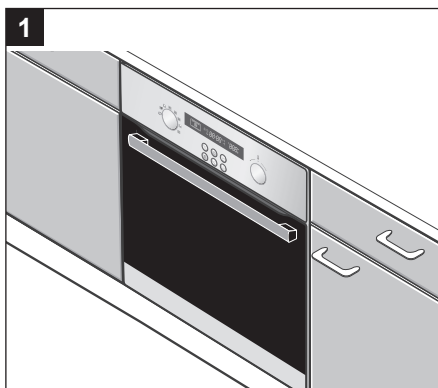

Installing the Oven (Continued)

5

Connecting the oven to the power supply
(H05VV-F, H05RR-F, Min. 1.5m, 1.5~2.5mm²)

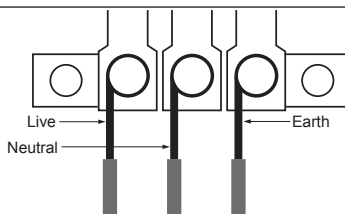

EN

Connecting to the mains power supply

Electrical connections must be made as per the connection plate fixed to the back of the appliance by an electrical fitter who must ensure that the appliance has been connected up in accordance with fitting instructions and local regulations.

Where the appliance is not connected to the mains electricity supply by a plug, an omni polar cutout device (with a contacts gap of at least 3 mm) must be fitted on the supply side of the connection to meet safety requirements.

- ⊠ When power is connected, the electronics of the oven are initialised; this neutralizes the lighting for a few seconds. The electric cable (H05 RR-F or H05 VV-F, Min. 1.5m, 1.5~2.5mm²) must be long enough for it to be connected to the built-in oven standing on the floor in front of its unit.


Open the back cover of the oven at the bottom (using a flat-bladed screwdriver) and completely unscrew the connection screw and the cable clamp before fitting conducting wires into the appropriate terminals.

The earth wire must be connected to the (\perp) terminal of the oven.


If the oven is connected to the power supply by a plug, this must remain accessible once the oven has been fitted.

We cannot accept any liability in the event of an accident resulting from non-existent or faulty earthing.

6

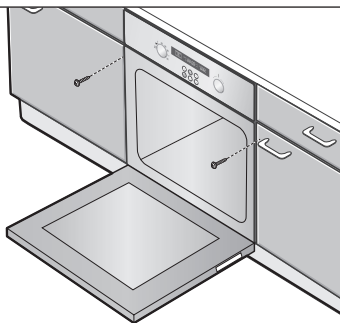

7





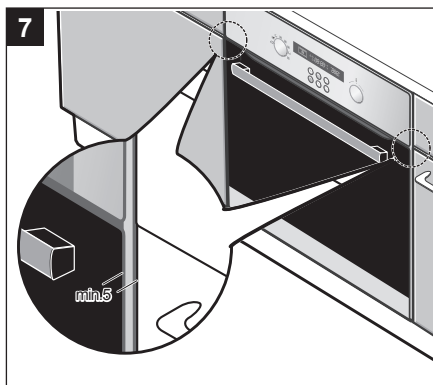


Installing the Oven (Continued)

EN

Installing into a high cabinet


- Observe minimum clearance requirements.
- The oven should be slid into place at the proper angle of alignment.

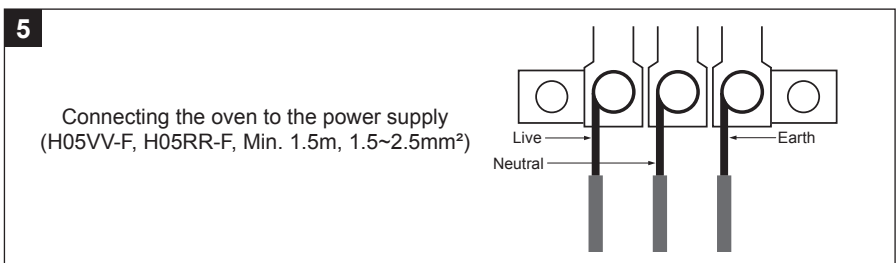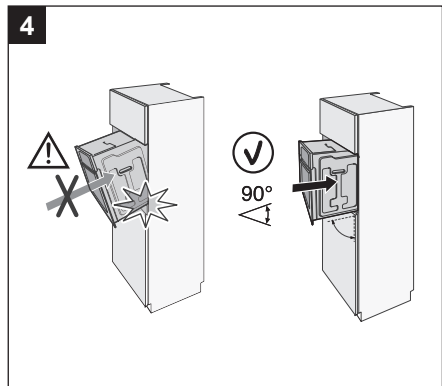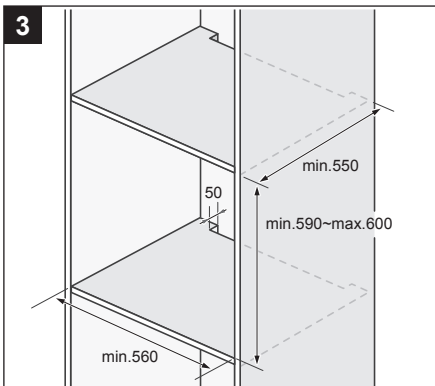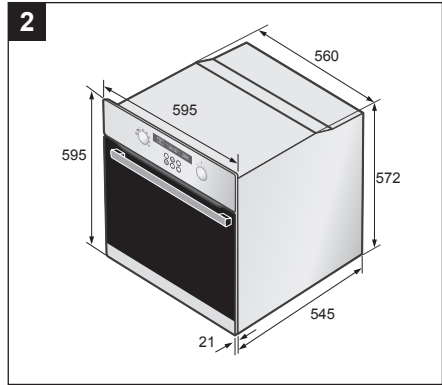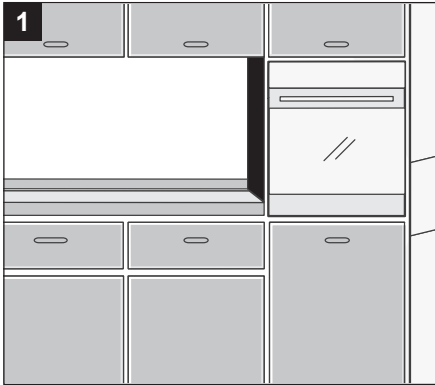

Parts and Features

Oven

EN

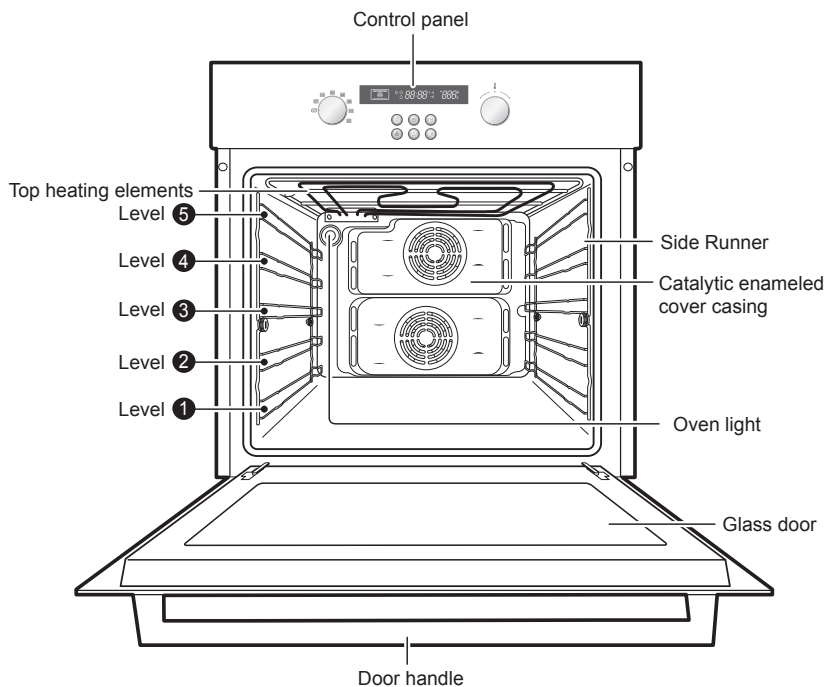


- ☒ Shelf levels are numbered from the bottom up.
Levels 4 and 5 are used mainly for the grill function.
Please refer to the cooking guides provided throughout this manual to determine appropriate shelf levels for your dishes.

Parts and Features (Continued)

EN

Oven controls

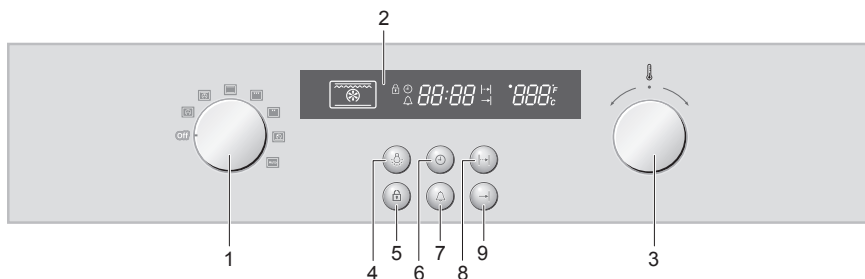

- | | |
|---------------------------------|-------------------------|
| 1. Cooking Function Select Knob | 7. Kitchen Timer Button |
| 2. Window Display | 8. Cook Time Button |
| 3. Time / Temp Control Knob | 9. End Time Button |
| 4. Lamp Button | |
| 5. Child Lock Button | |
| 6. Clock Button | |


✉ The **Cooking Function Select Knob** and the **Time / Temp Control Knob** are pop-up knobs. Simply push to turn.

Parts and Features (Continued)


Accessories

EN


The following accessories are provided with your oven.

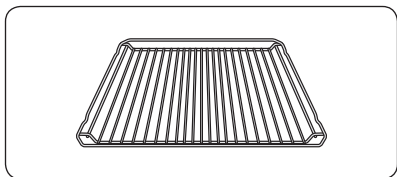

1 **Wire grill**, for dishes, cake tins, roasting and grilling trays.

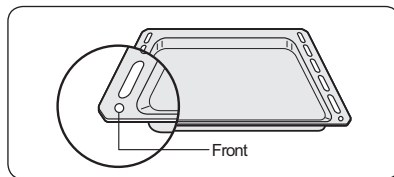


2 **Baking tray**, for cakes and biscuits.

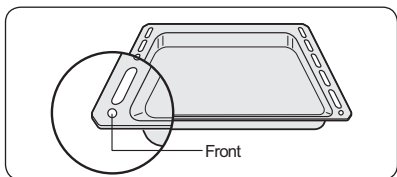

3 **Deep pan**, for roasting or collecting meat juices or fat drippings.

Parts and Features (Continued)

EN

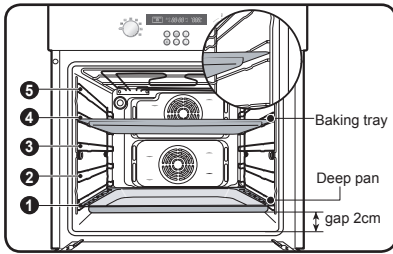

The baking tray, deep pan and wire grill should be inserted correctly into the side runners. When taking out the cooked foods from the oven, be careful of hot utensils and surfaces.

Example

Level 1: Deep pan
Level 4: Baking tray

- ☒ When using the deep pan or the baking tray to collect drippings from cooking foods, ensure that the pan or tray is properly placed in the side runners. Allowing these accessories to contact the bottom surface of the oven can damage the enamel of the surface. Trays and pans placed on level 1 should clear the bottom surface of the oven by at least 2 cm.

Using the accessories

Wire grill, baking tray and deep pan

Positioning the wire grill

Insert the wire grill at any desired level.

Positioning the baking tray or deep pan

Insert the baking tray and/or the deep pan at any desired level.

Safety shutoff

- If a cooking time is not entered, the oven will shut itself off after the lengths of time indicated below.

Shutoff times for various temperature settings


Under 105 °C	16 hours
From 105 °C to 240 °C	8 hours
From 245 °C to 300 °C	4 hours

- This oven's electrical circuitry features a thermal shutoff system. If the oven heats to abnormally high temperatures, the system will shut off the power supply to the heating elements for a period of time.

Cooling fan

During cooking, it is normal for the vent to release hot air from the front of the oven.

- The cooling fan will also continue to operate after the oven has been in use. It will turn off when the internal cabinet temperature has dropped to 60 °C or after 25 minutes.

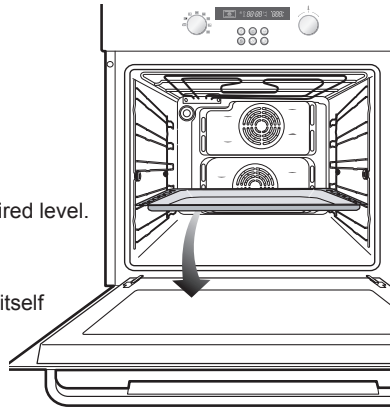


Before You Begin

EN

Setting the clock


When power is first supplied to the oven, the display on the control panel will light briefly. After 3 seconds, an icon of a clock and 12:00 will begin blinking in the display. The oven cannot be operated until the clock is set.

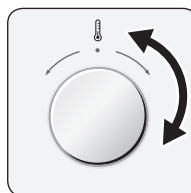

- 1** The oven is inoperable until the clock has been set. "⌚" and "12:00" will blink in the display when power is first supplied to the appliance. Press the **Clock Button**. The "⌚" and "12:" will blink.

- 2** Turn the **Time / Temp Control Knob** to set the hour of the day.

Example To set 1:30

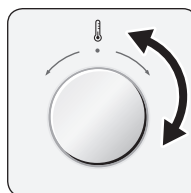

- 3** Press the **Clock Button**. The "⌚" and ":00" will blink.

- 4** Turn the **Time / Temp Control Knob** to set the minute of the time. "⌚" will blink.




- 5** Press the **Clock Button** to finish setting the clock or wait for about 10 seconds. "⌚" will disappear and "30" will stop blinking. The display shows the time of day. The appliance is now ready to use.

Before You Begin (Continued)

EN

Initial cleaning

Clean the oven thoroughly before using for the first time.

-  Do not use sharp or abrasive cleaning materials. These could damage the oven surface. For ovens with enamel fronts, use commercially available cleaning agents.

To clean the oven

1. Open the door. The oven light comes on.
2. Clean all oven trays, accessories and side runners with warm water or washing - up liquid and polish dry with a soft clean cloth.
3. Wash the oven interior in the same way.
4. Wipe the front of the appliance with a damp cloth.

Check that the clock is set correctly. Remove accessories and operate the oven at the convection setting at 200 °C for 1 hour before using. There will be a distinctive odor; this is normal, but ensure your kitchen is well ventilated during this conditioning period.

Before You Begin (Continued)

Oven functions

The features of this oven include the following functions

1. Conventional

Suggested temperature: 200 °C

The conventional function is ideal for baking and roasting foods arranged on one rack. Both the top and bottom heating elements operate to maintain the oven temperature.

We recommend to preheat the oven in conventional mode.

Food Item	Shelf Level	Accessory	Temperature (°C)	Time (min)
Frozen Lasagne (500-1000g)	3	Wire grill	180-200	40-50
Whole Fish (e.g. Dorade) (300-1000g) 3-4 cut on each side DROP OIL	3/2	Wire grill / Deep pan	240	15-20
Fish filets (500-1000g) 3-4 cut on each side DROP OIL	3	Baking tray	200	13-20
Frozen cutlets (350-1000g) minced meat & with ham, cheese or mushroom filing DROP OIL	3	Baking tray	200	25-35
Frozen cutlets from minced, carrot, beetroot or potato (350-1000g) DROP OIL	3	Baking tray	200	20-30
Pork on bone cutlets (500-1000g) DROP OIL, ADD SALT & PEPPER	3/2	Wire grill / Deep pan	200	40-50
Baked potato (cut in half) (500-1000g)	3	Baking tray	180-200	30-45
Frozen Meat roll with mushrooms filing (500-1000g) DROP OIL	3	Baking tray	180-200	40-50
Sponge Cake (250-500g)	2	Wire grill	160-180	20-30
Marble Cake (500-1000g)	2	Wire grill	170-190	40-50
Yeast Cake on Tray with fruit & crumbles topping (1000-1500g)	2	Baking tray	160-180	25-35
Muffins (500-800g)	2	Wire grill	190-200	25-30

Before You Begin (Continued)

2. Top Heat + Convection

Suggested temperature: 190 °C

The top heating element is in operation and the fan operates to constantly circulate the hot air.

We recommend to preheat the oven with Top Heat + Convection mode.

Food Item	Shelf Level	Accessory	Temperature (°C)	Time (min)
Pork on bone (1000g) BRUSH WITH OIL&SPICES	3/2	Wire grill / Deep pan	180-200	50-65
Pork shoulder in foil (1000-1500g) MARINATE	2	Baking tray	180-230	80-120
Whole chicken (800-1300g) BRUSH WITH OIL & SPICES	2/1	Wire grill / Deep pan	190-200	40-65
Meat or fish steaks (400-800g) DROP OIL, ADD SALT & PEPPER	3	Wire grill / Deep pan	180-200	15-35
Chicken Pieces (500-1000g) BRUSH WITH OIL&SPICES	4/3	Wire grill / Deep pan	200-220	25-35
Roast Fish (500g-1000g) use ovenproof dish BRUSH WITH OIL	2	Wire grill	180-200	30-40
Roast Beef (800-1200g) BRUSH WITH OIL&SPICES	2/1	Wire grill / Deep pan Add 1 cup water	200-220	45-60
Duck Breast (300-500g)	4/3	Wire grill / Deep pan Add 1 cup water	180-200	25-35

Before You Begin (Continued)

3. Convection

Suggested temperature: 170 °C

This function bakes foods placed on up to three shelves and is also appropriate for roasting. Cooking is achieved by the heating element on the rear wall and the fan distributes the heat.

We recommend to preheat the oven in convection mode.

Food Item	Shelf Level	Accessory	Temperature (°C)	Time (min)
Lamb rack (350-700g) BRUSH WITH OIL & SPICES	3/2	Wire grill / Deep pan	190-200	40-50
Baked Bananas (3-5 pcs), cut with knife on top, add 10-15g chocolate, 5-10g nuts into cuts, drop sugar water, wrap in alu- minium foil.	3	Wire grill	220-240	15-25
Baked apples 5-8pcs each 150-200g Take out the hearts, add raisins and jam. Use ovenproof dish.	3	Wire grill	200-220	15-25
Cutlets from minced meat (300-600g) DROP OIL	3	Baking tray	190-200	18-25
Minced Meat roll with filling ,Russian style' (500g-1000g) BRUSH WITH OIL	3	Baking tray	180-200	50-65
Frozen Croquettes (500-1000g)	2	Baking tray	180-200	25-35
Frozen Oven Chips (300-700g)	2	Baking tray	180-200	20-30
Frozen Pizza (300-1000g)	2	Wire grill	200-220	15-25
Apple & Almond Cake (500-1000 g)	2	Wire grill	170-190	35-45
Fresh Croissant (200-400g) (ready-dough)	2	Baking tray	180-200	15-25

Before You Begin (Continued)

4. Large Grill

Suggested temperature: 240 °C

The large grill function grills large quantities of flat foods, such as steaks, schnitzels and fish. It is also suitable for toasting. Both the top heating element and the grill are on in this mode.

We recommend to preheat the oven using Large Grill mode.

Food Item	Shelf Level	Accessory	Temperature (°C)	Time (min)
Sausages (thick) 5-10pcs	4/3	Wire grill / Deep pan	220	5-8 turnover 5-8
Sausages (thin) 8-12pcs	4/3	Wire grill / Deep pan	220	4-6 turnover 4-6
Toasts 5-10pcs	5	Wire grill	240	1-2 turnover 1-2
Cheese Toasts 4-6 pcs	4/3	Wire grill / Baking tray	200	4-8
Frozen Pancakes with filling 'Russian Style' (200- 500g)	3	Baking tray	200	20-30
Beef Steaks (400-800 g)	4/3	Wire grill / Deep pan	240	8-10 turnover 5-7

Before You Begin (Continued)

5. Small Grill

Suggested temperature: 240 °C

This setting is for grilling smaller amounts of flat foods, such as steaks, schnitzels, fish and toast, placed in the middle of the tray. Only the top element is in operation.

We recommend to preheat the oven using Small Grill mode.

Put food in the centre of accessory.

Food Item	Shelf Level	Accessory	Temperature (°C)	Time (min)
Frozen Oven Camembert (2 – 4 each 75g) PUT IN COLD OVEN (before preheat)	3	Wire grill	200	10-12
Frozen Baguettes with topping (Tomato-Mozzarella or Ham & Cheese)	3/2	Wire grill / Baking tray	200	15-20
Frozen Fish fingers (300-700g) PUT IN COLD OVEN (before preheat) DROP OIL	3/2	Wire grill / Baking tray	200	15-25
Frozen Fish burger (300- 600g) PUT IN COLD OVEN, DROP OIL	3	Baking tray	180-200	20-35
Frozen Pizza (300-500g) PUT IN COLD OVEN (before preheat)	3/2	Wire grill / Baking tray	180-200	23-30

EN

Before You Begin (Continued)

6. Bottom Heat + Convection

Suggested temperature: 190 °C

The Bottom Heat + Convection mode is for recipes calling for a moist topping and a crisp base, as with foods like pizzas, quiches lorraine, German-style open fruitcakes and cheesecakes.

We recommend to preheat the oven in Bottom Heat + Convection mode.

Food Item	Shelf Level	Accessory	Temperature (°C)	Time (min)
Yeast dough pie with apple frozen (350-700g)	3	Wire grill	180-200	15-20
Puff pastry small pies with filling frozen (300-600g) BRUSH EGG YOLK, PUT IN COLD OVEN (before preheat)	3	Baking tray	180-200	20-25
Meat balls in sauce (250-500g) use ovenproof dish	3	Wire grill	180-200	25-35
Puff pastry fans (500-1000g) BRUSH EGG YOLK	3	Baking tray	180	15-23
Cannelloni in sauce (250-500g) use ovenproof dish	3	Wire grill	180	22-30
Yeast dough pies with filling (600-1000g) BRUSH EGG YOLK	3	Baking tray	180-200	20-30
Homemade Pizza (500-1000g)	2	Baking tray	200-220	15-25
Homemade Bread (700-900g)	2	Wire grill	170-180	45-55

Before You Begin (Continued)

7. Auto Menu Programmes

The following table presents 15 Auto Programmes for Cooking, Roasting and Baking.

It contains its quantities, weight ranges and appropriate recommendations.

Cooking Modes and times have been pre-programmed for your convenience.

You can refer to these guide lines for cooking. Always insert food in cold oven.

No	Food Item	Weight/kg	Accessory	Shelf Level	Recommendation
1	Frozen Pizza	1- 0.3 - 0.6 2- 0.7 - 1.0	Wire grill	2	Put frozen Pizza in the centre of wire grill. We recommend 0.3-0.6 kg setting for thin pizzas, 0.7-1.0 kg for pizzas with thick topping..
2	Frozen Oven Chips	1- 0.3 - 0.5 2- 0.5 - 0.7	Baking tray	2	Distribute frozen Oven Chips on baking tray. The first setting is recommended for thin French fries, the second setting is recommended for thick oven chips. Use baking paper. We recommend to turn over after 2/3 of cooking time.
3	Frozen Croquettes	1- 0.3 - 0.6 2- 0.7 - 1.0	Baking tray	2	Put frozen potato croquettes evenly on baking tray. We recommend to turnover after 2/3 of cooking time.
4	Fresh Lasagne	1- 0.3 - 0.5 2- 0.8 - 1.0	Wire grill	3	Use ovenproof glassware. Put chilled or homemade lasagne in the middle of oven on wire rack.
5	Steamed Fish	1- 0.2 - 0.4 2- 0.5 - 0.7 3- 0.8 - 1.0	Wire grill	2	Put prepared fresh fish (e.g. trout, haddock, codfish) in a suitable sized ovenproof glassware with lid. Add liquid until bottom of dish is covered e.g. 3-4 tbsp. lemon juice, white wine or water and cover with lid. Put dish on wire grill. If you prefer roasted appearance, brush skin of fish with olive oil and do not cover.
6	Roast Chicken	1- 0.8 - 1.0 2- 1.1 - 1.3	Wire grill Deep pan	2 1	Brush chilled chicken with oil and spices and put breast-side-up on the wire grill.
7	Beef Steaks	1- 0.3 - 0.6 2- 0.6 - 0.8	Wire grill Deep pan	4 3	Put 2-6 beef steaks side by side evenly on wire grill. The first setting is for thin steaks, the second setting is for thick steaks. Turn over after beep sounds. Press COOK TIME button to continue automatic cooking.
8	Roast Beef	1- 0.6 - 0.8 2- 0.9 - 1.1 3- 1.2 - 1.4	Wire grill Deep pan	2 1	Marinate Roast Beef and put on wire grill. Add 1 cup of water into deep pan. Turn over after beep sounds. After cooking wrap in aluminium foil and let stand for 5-10 min.

Before You Begin (Continued)

7. Auto Menu Programmes

No	Food Item	Weight/kg	Accessory	Shelf Level	Recommendation
9	Cake	1- 0.5 - 0.6 2- 0.7 - 0.8 3- 0.9 - 1.0	Wire grill	2	Put dough into suitable sized deep round baking pan for bundt cake/ ring cake. This programme is suitable for batter such as marble cake, lemon cake and hazelnut cake.
10	Muffins	1- 0.5 - 0.6 2- 0.7 - 0.8	Wire grill	2	Put muffin dough in metal muffin dish, suitable for 12 muffins. Set dish on rack. 0.5 -0.6 kg weight range is recommended for muffins of each 45g, 0.7-0.8 kg weight range is recommended for medium sized muffins of each 65g.
11	Dough Fermentation	1- pizza dough 2- yeast dough 3- leaven	Wire grill	2	The first setting is to rise yeast dough for pizza, cake, or to pre-rise bread dough. Put into a big round dish and cover with cling film. Setting 2 is for bread dough like yeast dough or sour dough. Setting 3 is for leaven. Knead pre-rised dough manual, put into baking dish and cover with cling film.
12	White Bread	1- 0.75-0.85	Wire grill	2	This programme is suitable for bread mixtures using 500 g wheat flour. Follow instruction on package. Put yeast dough into rectangular baking dish. Brush top of dough with water. Cut length with a knife.
13	Wholemeal Bread	1- 0.75-0.85	Wire grill	2	This programme is suitable for bread mixtures using 500 g wheat and rye flour. Follow instruction on package. Put leaven (sour dough) into suitable rectangular baking dish. Brush top of dough with water. Cut length with a knife.
14	Bread Rolls / Ciabatta	1- 0.2 - 0.4 2- 0.6 - 0.8	Baking tray	3	The first setting in suitable for dough used for small pieces such as bread rolls or fresh dough for croissants (4-8 pcs). Setting 2 is suitable for dough used for homemade ciabatta breads or baguettes (2-6 pcs). Use baking paper.
15	Homemade Pizza	1- 0.2 - 0.6 2- 0.8 - 1.2	Baking tray	2	The first setting is suitable for Pizza Snacks (7-9 pcs). Setting 2 is suitable for one round or tray sized Pizza. The weight ranges are including topping such as sauce, vegetables, ham and cheese. If you prefer strong crust, we recommend to preheat oven with bottom heat plus convection mode for 5 min.

Before You Begin (Continued)

EN

Test dishes

According to standard EN 60350

1. Baking

The recommendations for baking refer to preheated oven.

Type of Food	Dish & Notes	Shelf level	Cooking Mode	Temp. °C	Cooking time min
Small Cakes	Baking tray	2	Conventional	170-190	15-25
	Deep pan + Baking tray	1+4	Convection	150-170	20-30
Fatless Sponge Cake	Baking tin on Wire grill (Dark coated, ø 26 cm)	1	Conventional	160-180	25-35
Apple Pie	Wire grill + Baking tray + 2 Springform cake tins (Dark coated, ø 20 cm)	1+3	Convection	170-190	80-100
	Wire grill + 2 Springform cake tins (Dark coated, ø 20 cm)	1 Placed diagonally	Conventional	180-200	75-90

2. Grilling

Preheat the empty oven for 5 minutes using the Large Grill function.


Use this function with the maximum temperature setting of 300°C.

Type of Food	Dish & Notes	Shelf level	Cooking Mode	Temp. °C	Cooking time min
White Bread Toasts	Wire grill	5	Large Grill	300	1 st 1-2 2 nd 1-1 1/2
Beef Burgers	Wire grill / Deep pan (to catch drippings)	4 / 3	Large Grill	300	1 st 7-10 2 nd 5-8


Oven Use

EN


Setting the Cooking Function mode

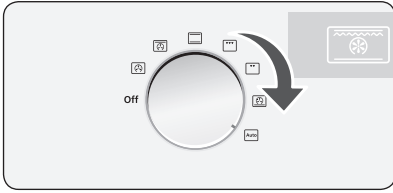


1 Turn the **Cooking Function Select Knob** to select the desired oven function.

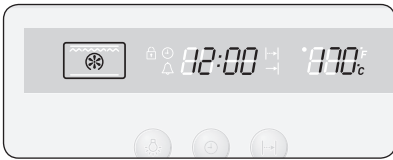


Convection

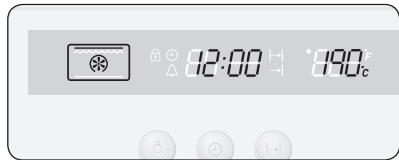


Top Heat + Convection

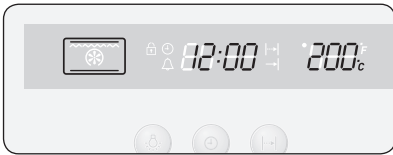


Conventional

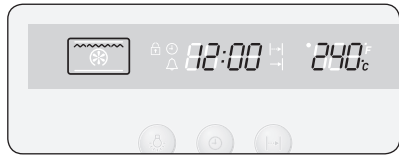


Large Grill

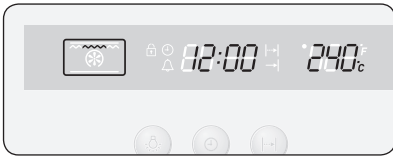

Small Grill

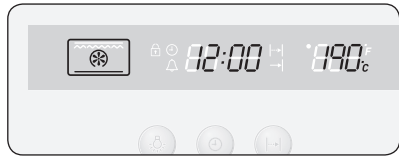

Bottom Heat + Convection

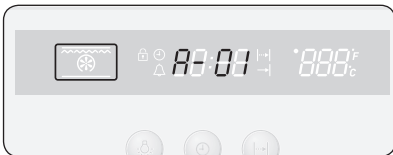


Auto Cook

Oven Use (Continued)

Setting the oven temperature

EN

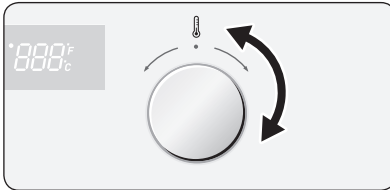

- 1 Turn the **Time / Temp Control Knob** to adjust the temperature in increments of 5 °C.


40 °C – 250 °C
40 °C – 300 °C (Large & Small Grill)

- The temperature may be adjusted during cooking.

Oven Use (Continued)

EN


Switching the oven off

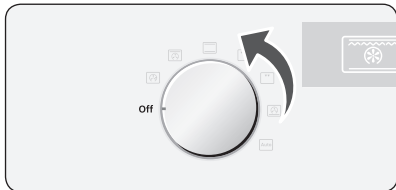


To switch the oven off, turn the **Cooking Function Select Knob** to the "Off" position.

End time


You can set the end time during cooking.

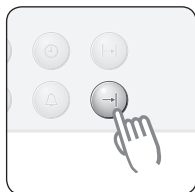

- 1** Press the **End Time Button**.
Example Current time is 12:00

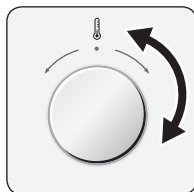

- 2** Turn the **Time / Temp Control Knob** to set the desired end time.

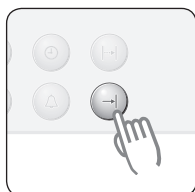

- 3** Press the **End Time Button**.
The oven operates with the selected end time automatically unless the **End Time Button** is pressed within 5 seconds.


- ☒ During cooking, you can adjust the previously set end time with the **Time / Temp Control Knob** for better results.

Oven Use (Continued)

EN

Cook time

You can set the cook time during cooking.

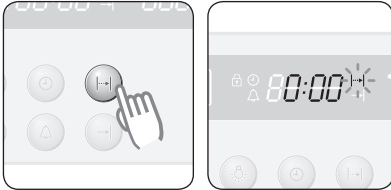

1 Press the **Cook Time Button**.



2 Turn the **Time / Temp Control Knob** to set the desired cook time.



3 Press the **Cook Time Button**. The oven operates with the selected cook time unless the **Cook Time Button** is pressed within 5 seconds.

- ✉ During cooking, you can adjust the previously set cook time with the **Time / Temp Control Knob** for better results.




Oven Use (Continued)

EN

Delayed start

Case 1 - Cook time is entered first

If the end time is entered after the cook time has already been set, the cook time and the end time are calculated and if necessary the oven sets a delayed start point.

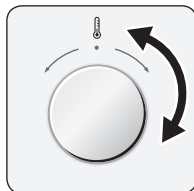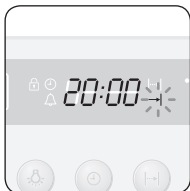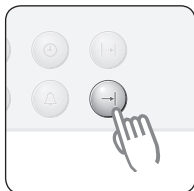

1 Press the **End Time Button**.



Example

Current time is 15:00 and the desired cook time is 5 hours.

2 Turn the **Time/Temp Control Knob** to set the end time.

Example

You want to cook for 5 hours and finish at 20:30.

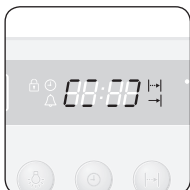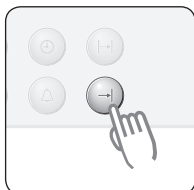


3 Press the **End Time Button**. A "Ready" symbol appears until the delayed start point.

Oven Use (Continued)

EN

Case 2 - End time is entered first


If the cook time is entered after the end time has already been set, the cook time and the end time are calculated and if necessary the oven sets a delayed start point.

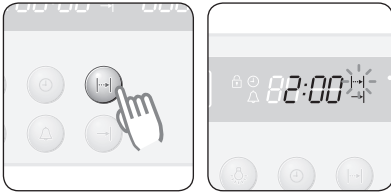

1 Press the **Cook Time Button**.

Example


Current time is 15:00
and the desired end
time is 17:00.

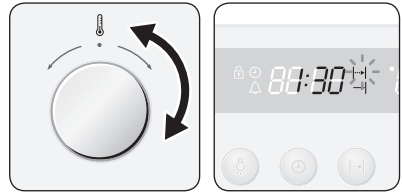

2 Turn the **Time / Temp Control Knob**
to set the cook time.

Example

You want to cook for 1
hour and 30 minutes
and end by 17:00.

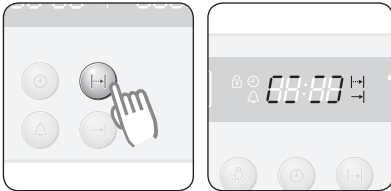



3 Press the **Cook Time Button**. A
“Ready” symbol appears until the
delayed start point.


Oven Use (Continued)

EN

Kitchen timer

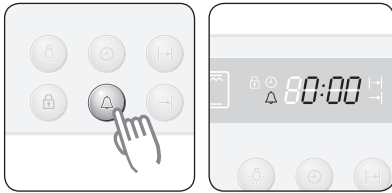


- 1** Press the **Kitchen Timer Button** once.
“” flashes.

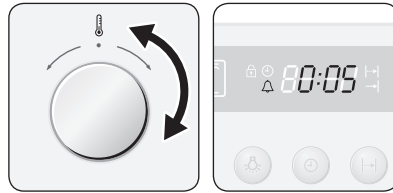

- 2** Turn the **Time / Temp Control Knob** to set the desired time.

Example 5 minutes

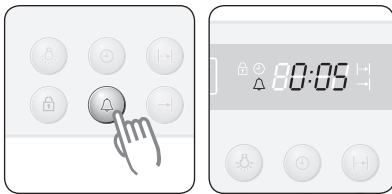


- 3** Press the **Kitchen Timer Button** to start the kitchen timer. When the set time has elapsed, an audible signal sounds.

 Press and hold the **Kitchen Timer Button** for 2 seconds each to cancel the timer.


Oven Use (Continued)

EN


Auto Cook

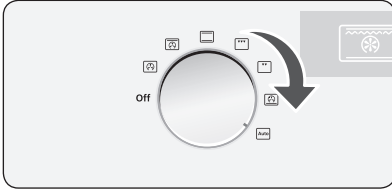

1 Turn the **Cooking Function Knob** to Auto Cook.

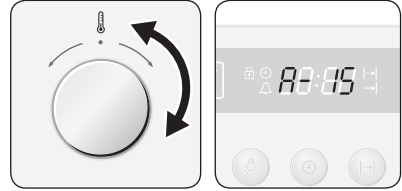

2 Select the desired recipe by turning the **Time/Temp control knob** to the right and left. Wait to select weight 5 seconds after selecting a recipe. For a recipe with weight fixed, start cooking immediately.

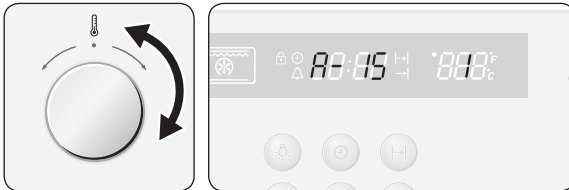


3 Select the desired weight by turning the **Time/Temp control knob** to the right and left. Preheating time(min:sec) is displayed, and countdown starts 5 seconds after the weight is selected. For a recipe without preheating, remaining cooking time(hr:min) is displayed.

Preheat countdown completed

Upon completion of preheating, the oven beeps and the remaining cooking time(hr:min) is displayed. Keep "Preheat condition" until food is inserted into the oven, and **Cook Time Button** is pressed.

Oven Use (Continued)


EN

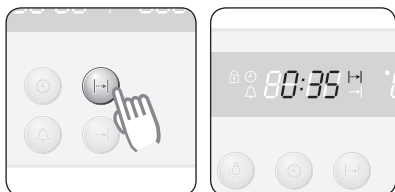

- 4** Press **Cook Time Button**. Cook time countdown is displayed. Stage-1 of cooking starts.


When it reaches the time for “Turn Over/Around”

It beeps to inform the time for “Turn Over/Turn Around”. After “Turn Over/Turn Around”, stop cooking and wait until **Cook Time Button** is pressed.

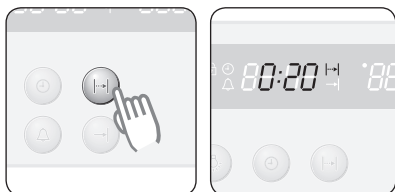

- 5** Press **Cook Time Button**. It stops beeping, and the cooking restarts.

Oven lamp on/off

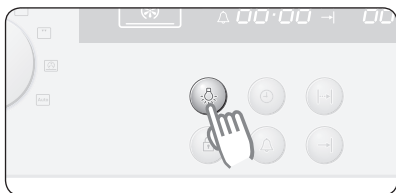

- 1** Press the **Lamp Button**.

1st Off
2nd On




The lamp automatically turns off after 5 minutes.

Oven Use (Continued)


EN

Child safety function

You can use child lock function in stand-by status.

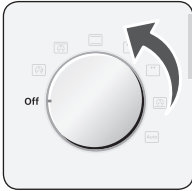


1 Turn **Cook Function Select Knob** to "Off" position. Press the **Child Lock Buttons** hold for 3 seconds. (🔒) will appear in the display field.

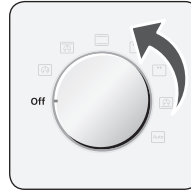


2 Turn **Cook Function Select Knob** to "Off" position. Press the **Child Lock Buttons** hold for 3 seconds again to unlock.

✉ If locked, buttons and dials except unlock function button fail to operate.

Switching the beeper off

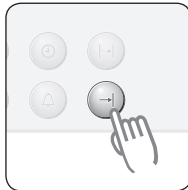

1 To turn the beeper off, press the **Clock** and **End Time Buttons** at the same time and hold for 3 seconds.

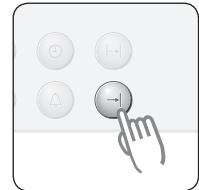

2 To turn the beeper back on, press the **Clock** and **End Time Buttons** again at the same time and hold for 3 seconds.

Cleaning and Care

EN

Oven exterior

- For cleaning both the interior and exterior of the oven, use a cloth and a mild cleaning agent or warm soapy water.
- Dry with kitchen paper or a dry towel.
- Do not use scourers, caustic cleaners or abrasive products.

Stainless steel oven fronts

- Do not use steel wool, scouring pads or abrasives. They may damage the finish.

Aluminium oven fronts

- Wipe the plate gently with a soft cloth or microfiber cloth and a mild window cleaning detergent.

WARNING

Make sure the oven is cool before cleaning.

Oven interior

- Do not hand - clean the door seal.
- Do not use coarse scouring pads or cleaning sponges.
- To avoid damaging the enameled oven surfaces, use commercially available oven cleaners.
- To remove stubborn soil, use a special oven cleaner.

Accessories

Wash all bakeware and accessories after each use and dry with a kitchen towel.

To clean easily, soak in warm soapy water for about 30 minutes.

Cleaning and Care (continued)

EN

Catalytic enamel surface

The removable cover casing is coated with a dark gray catalytic enamel that can become coated with oil and fat distributed by circulating air during convection heating. These deposits will burn off at oven temperatures of 200 °C and higher, for example, when baking or roasting. Higher temperatures will result in faster burning.

The oven and accessories should be cleaned after each use. Otherwise further baking and roasting will cause the deposits to bake on even harder and cleaning may become difficult and in extreme cases impossible.

Cleaning by hand

Make sure the oven is cool before cleaning.

- The catalytic enameled cover casing should be cleaned using a solution of hot water and washing-up liquid applied with a soft nylon brush.

Do not use abrasive cleaning agents, hard brushes, scouring pads or cloths, steel wool, knives or other abrasive materials. Do not use oven spray on catalytic enamel as the chemicals used in oven sprays will damage catalytic enamel and render it ineffective.

If using oven sprays on the interior oven surfaces, the catalytic cover casing must first be removed from the oven.

Cleaning with high temperatures

Before cleaning the catalytic cover casing with high temperatures, make sure that all interior oven surfaces have been cleaned as described above. Otherwise, the high temperatures can bake deposits onto the interior oven surfaces and make them impossible to remove.

If, after manual cleaning, the oven is still heavily soiled, heating it to a high temperature will help remove soiling caused by oil and grease splashes.

Note that deposits of spices, syrups and similar substances are not removed by this process. These should be removed by hand with a mild solution of hot water and washing-up liquid applied with a soft brush.

- Remove all accessories from the oven.
- Set the oven to conventional function.
- Set the heat to 250 °C.
- Run the oven for approximately 1 hour. The length of time will depend on the degree of soiling.

It is a good idea to set the finish time for the process using the end time setting, in case you forget to switch the oven off at the end.

Any remaining soil will gradually disappear with each subsequent use of the oven at high temperatures.

Cleaning and Care (Continued)


EN

Cleaning the oven door


For normal use, the oven door should not be removed but if removal is necessary, for example, for cleaning, follow these instructions. The oven door is heavy.

Removing the door

1. Flip open the clips at both hinges.

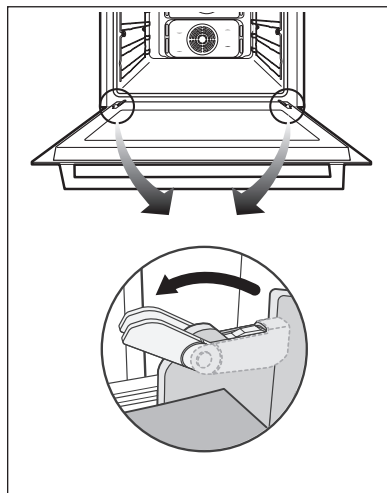

2. With both hands, grasp the sides of the oven door at its middle.
3. Rotate the door by approximately 70° until the hinges can be taken out completely from the hinge holes.

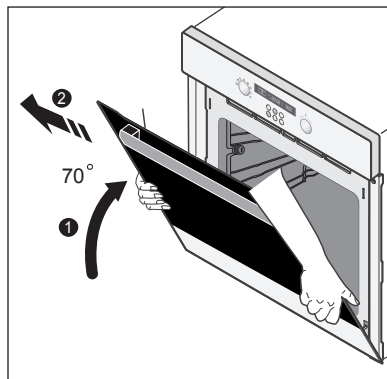


Cleaning and Care (Continued)



EN

Attaching the door

1. With the clips still flipped open, align the door hinges into the hinge holes.

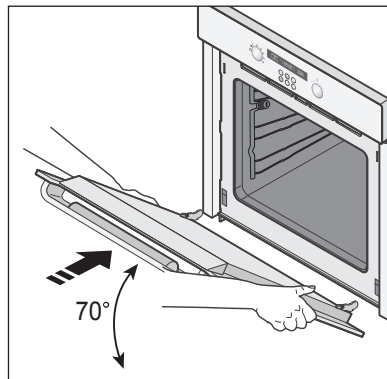

2. Rotate the door toward the horizontal line and flip the clips closed.

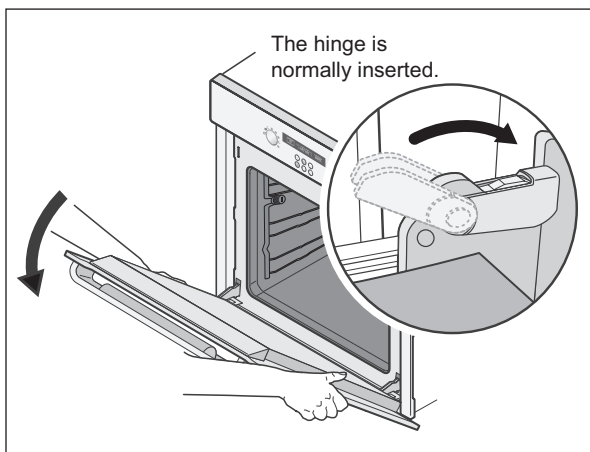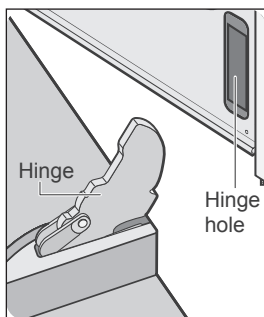

Cleaning and Care (Continued)

EN

Oven door glass

The oven door is equipped with three sheets of glass placed against each other. The inner & middle sheets can be removed for cleaning.

WARNING



- Whenever the door is separated from the oven, the clips should be flipped open.
- Do not use harsh abrasive cleaners or metal scrapers to clean the oven door; they can scratch the surface, which may cause the glass to shatter.
- When the door is mounted, removing some of the parts (the door glass or some other part) from the door may result in injury.

Attention




The glass may break if you use excessive force especially at the edges of the front sheet.

Disassembling the door

1. Remove the two screws on the left and right sides of the door.
2. Remove the two supports and the door bracket and remove the two screws attaching the handle.

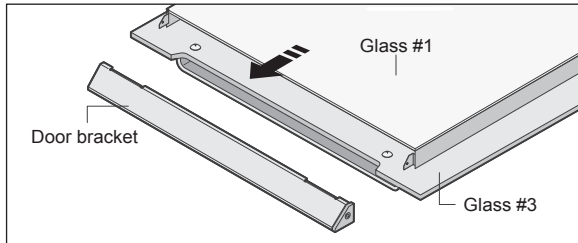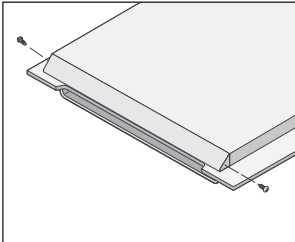

3. Detach the inner sheet, glass #1, from the door.
4. Lift glass #2 and remove the two spring-brackets from the top of the sheet.

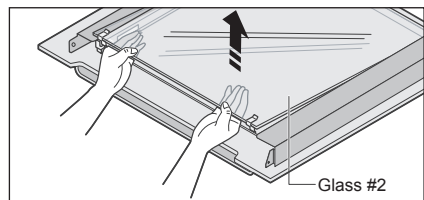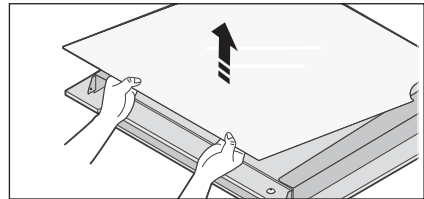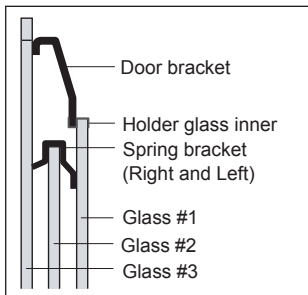

- ☒ Clean the sheets with warm water or washing-up liquid and polish dry with a soft clean cloth.


Cleaning and Care (Continued)

EN


Assembling the door

1. Clean the glass and interior parts with warm soapy water.


☒ Do not use abrasive cleaners or pan scourers. Use a sponge with liquid detergent or warm soapy water.

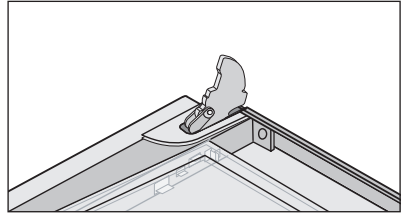

2. Attach the two spring brackets at the top of glass #2 and place glass #2 into position.

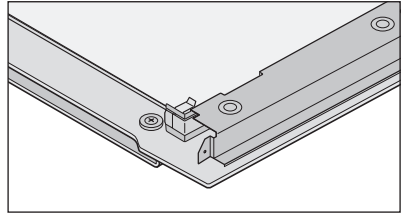

3. Attach glass #1, the door bracket and the supports to the door.

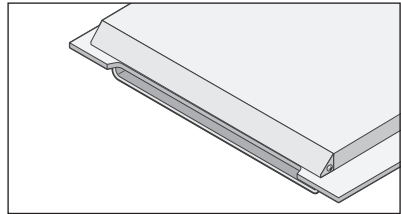


4. Secure the two screws at both sides of the door.

Side Runners

To clean the interior of the oven, the both side runners can be removed.

Detaching the Side Runners


1. Turn the screw at the back 2-3 times anti-clockwise only.

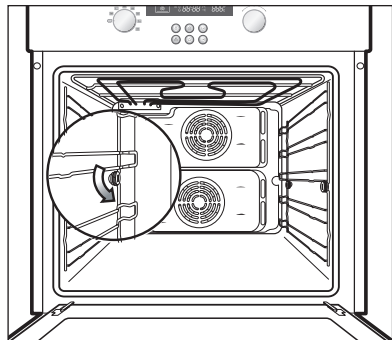


Cleaning and Care (Continued)

EN


2. Remove the screw at the front by turning it anti-clockwise after latching the side runner.

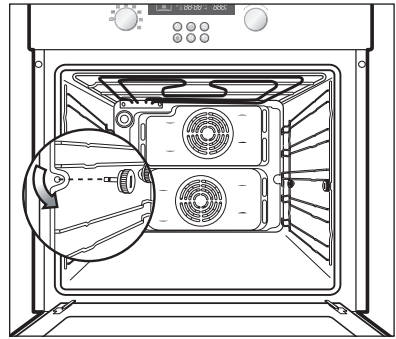

3. Pull and remove the side runner.

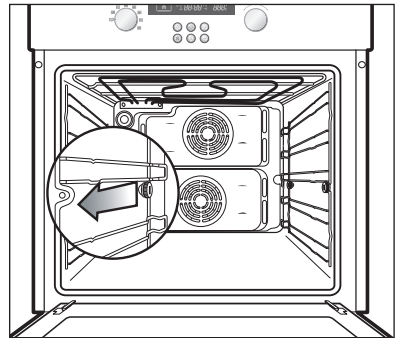

4. Remove the screw from the back by turning it anti-clockwise.

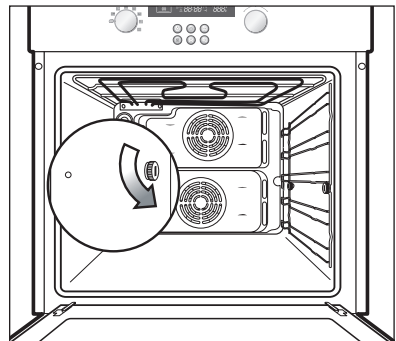


Cleaning and Care (Continued)


EN

Attaching the Side Runners


1. Insert the screw at the back and turn it clockwise 2-3 times only.

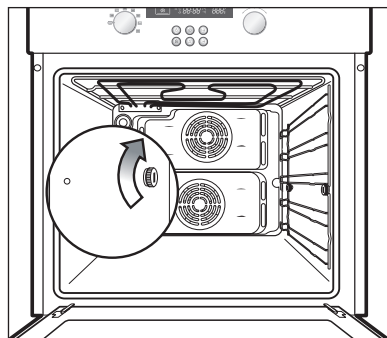

2. Insert and push the back U-form of the side runner towards the screw.

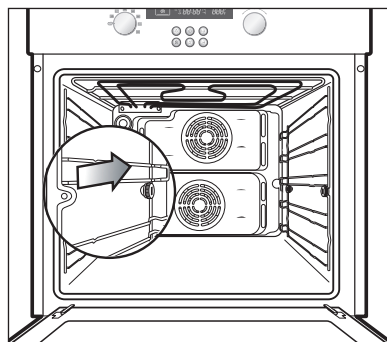

3. Insert the screw at the front, and fasten both screws.

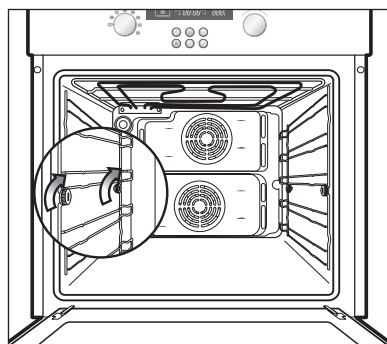

Cleaning and Care (Continued)

EN

Changing the lamp



Danger of electric shock!


Before replacing the oven light bulb, take the following steps:

- Switch off the oven;
- Disconnect the oven from the mains supply; and
- Protect the oven light bulb and the glass cap by laying a cloth on the bottom of the oven.




You can buy a lamp at SAMSUNG service centre.

Replacing the rear oven lamp and cleaning the glass cap

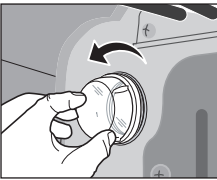

1. Take off the cap by turning counterclockwise.
2. Remove the metal ring and the sheet ring and clean the glass cap.
3. If necessary, replace the bulb with a 25 watt, 240 V, 300 °C heat - resistant oven light bulb.

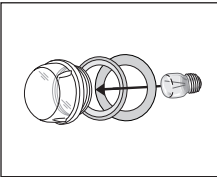

4. Fit the metal and the sheet ring to the glass cap.
5. Replace the glass cap.

FAQs and Troubleshooting

What should I do if the oven doesn't heat up?

Check to see if one of the following actions resolves the issue:

- The oven may not be switched on. Switch the oven on.
- The clock may not be set. Set the clock (see section "Setting the clock").
- Check to see if the required settings have been applied.
- A household fuse may have blown or a circuit breaker may have tripped. Replace the fuses or reset the circuit. If this happens repeatedly, call an authorised electrician.

What should I do if, even though the oven function and temperature have been set, the oven does not heat up?

There may be problems with the internal electrical connections. Call your local service centre.

What should I do if an error code appears and the oven does not heat up?

There is a fault in the internal electrical circuit connection. Call your local service centre.

What should I do if the time display is blinking?

There was a power failure. Set the clock (see section "Setting the clock").

What should I do if the oven light doesn't illuminate?

The oven light is faulty. Replace the oven light bulb (see section "Changing the lamp").











What should I do if the oven's fan is running without having been set?

Following use, the oven's fan runs until the oven has cooled down. Call your local service centre if the fan continues to run after the oven has cooled down.

Warranty & Service (Continued)

EN

Error and Safety codes

Error and Safety codes	General Functions	Solution
	TEMP SENSOR ERROR	Call local SAMSUNG service centre.
		
		
		
	SAFETY SHUTOFF Oven has continued operating at set temperature for prolonged time.	Turn oven off and remove food. Allow oven to cool before using again.
	An error of the oven may cause low performance and problems in safety. Stop using the oven immediately.	Call local Samsung service centre.
		
		
		
		

Technical data

Power Source	240V ~ 50Hz
Volume (usable capacity)	65 L
Output Power	MAX 3600 W
Weight	
Net	40 kg approx
Shipping	44 kg approx
Dimensions (W x H x D)	
Outside	595 x 595 x 566 mm
Oven Cavity	440 x 365 x 405 mm

EN



ELECTRONICS

**If you have any questions or comments relating to Samsung products,
please contact the SAMSUNG customer care center.**

Tel : 1300 362 603
www.samsung.com/au

Code No. DG68-00091B

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>