



SB-F-TRKCTR/1OW3 Stealthbox™

Fits Full-Size Ford Pickup Trucks Equipped with a Center Console

Installation Guide:

This Stealthbox is a product which requires professional installation skills and tools. Please read this installation guide thoroughly before beginning the project. It will guide you step by step through the installation. Several of the steps in this process may require two people to accomplish.

It is absolutely vital that the enclosure be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems: 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer and 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

STEP 1: Remove the rubber pad & cup holder from the factory center console.



Cup holder size may differ depending on vehicle year.

STEP 2: Remove the four nuts holding the console to the floor. There are two in the front edge and two in the back edge of the console..



STEP 3: Remove the console from the vehicle.



STEP 4: Cut the carpet between each set of mounting studs in the vehicle. The Stealthbox should sit directly on the metal floor of the vehicle.



STEP 5: Remove the six screws holding the outer shell of the console to the storage unit. There are two screws in the cup holder and two in each side near the bottom of the unit. Remove the outer shell.



STEP 6: Place the outer shell over the Stealthbox. Bolt the shell to the Stealthbox using the six factory screws.

IMPORTANT: Only screw into the predrilled holes in the Stealthbox, do not drill new holes!

STEP 7: Run speaker wire to the mounting location of the Stealthbox. Trim to length and attach to the Stealthbox.

STEP 8: Test the operation of the enclosure.

STEP 9: Place the Stealthbox in the vehicle. The brackets on the bottom of the Stealthbox should fit over the studs in the floor of the vehicle.

STEP 10: Using the nuts removed in Step 2, bolt the Stealthbox into place. This step will require an open end wrench. Tighten securely.



This completes the installation.




Specifications:

Enclosure Type: Acoustic Suspension (Sealed)

Driver Type: JL AUDIO 10W3-D6 Subwoofer

Cont. Power Handling: 250 Watts

Nominal Impedance: 3Ω

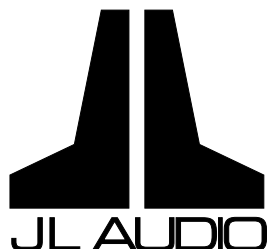

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>