

# **SNOW CAB #1694921**

FOR

Regent, LT 200 Series,  
500 Series Lawn Tractors,  
2500 Series Lawn Tractors

## **PARTS LIST – ASSEMBLY INSTRUCTIONS**

### **IMPORTANT !**

READ THIS MANUAL CAREFULLY AND KEEP FOR FUTURE REFERENCE

### **CAUTION !**

REMOVE THE VINYL PANELS FOR TRANSPORT IN AN OPEN TRUCK OR TRAILER

### **WARNING !**

THIS CAB WILL NOT PROTECT OPERATOR FROM INJURIES CAUSED BY ROLLOVER,  
COLLISION, OR OTHER ACCIDENTS



# WARNING

This cab is designed to provide foul weather protection only. It does not provide protection from noise, exhaust fumes, chemicals or injury from collision, roll-over or other accidents.

1. Do not operate machine in confined areas without proper ventilation
2. Thoroughly check area of operation before using machine
3. The cab adds height to the machine. Low tree limbs and other overhead structures that did not interfere with the operation of the machine before, may now be obstacles

## IMPORTANT!

USE OF THIS CAB WITH DOORS REMOVED IS NOT RECOMMENDED.

## MAINTENANCE INSTRUCTIONS

Periodically check all bolts to see that they are tight. If bolts become loose, failure of cab parts may occur.

Door latches and hinges should be lubricated with light machine oil for proper operation.

**DO NOT CLEAN THE CLEAR PLASTIC WINDOWS WHEN THE PLASTIC IS DRY.  
THE CLEAR PLASTIC WILL SCRATCH.**

Avoid contact with plastic windows. Keep plastic windows clean by washing them with clear running water and rubbing with your bare hands, only. The use of a rag, sponge or brush will scratch the plastic. Liquid soap may also be used for window cleaning. During freezing weather, an automotive windshield washer solvent may be used.

Use liquid soap and water to clean colored vinyl portions. Scrubbing with a brush or rag is also permitted on the colored vinyl portions

## STORAGE INSTRUCTIONS

Prior to storage clean the windows and colored vinyl parts with a mild automotive detergent, rinse with clean water and allow to thoroughly dry, Store cab in a clean dry place out of direct sunlight. Avoid folding plastic windows.

**READ THIS MANUAL COMPLETELY BEFORE BEGINNING INSTALLATION.**

- The right side of the machine is determined from the operators seated position.
- The words "bolt" will refer to a 1/4"x5/8" bolt and "lock nut" will refer to a 1/4" locknut unless specified otherwise.
- Do not tighten bolts during assembly unless instructed to do so.
- Lower all attachments to the ground and remove the start key before beginning installation.

## For Replacement Parts and Accessories Contact:

**Original Tractor Cab Co., Inc.**

**P.O. Box 97 6849 W. Front St.**

**Arlington, IN 46104**

**Phone 765-663-2214**

**Fax 765-663-2101**

**Email [Sales@originalcab.com](mailto:Sales@originalcab.com)**

**Visit us on the web to see our other products.**

**[www.originalcab.com](http://www.originalcab.com)**

**Cabs for Lawn Tractors, Garden Tractors, Compact Tractors, Snow Blowers, Utility Vehicles**

**Sunshades for Tractors, Mowers, & Utility Vehicles**

**Storage Covers for Lawn and Garden equipment. .**

---

## LIMITED WARRANTY

### COVERED BY WARRANTY

ORIGINAL TRACTOR CAB CO., INC., (the "Company") warrants to the owner that each new product listed below is merchantable and free of defects in workmanship and material.

During the warranty period, the dealer from whom the product was bought, or the Company, will provide, free of charge, parts and the shipping costs of parts necessary to correct any defect in workmanship and material.

### WARRANTY PERIOD

The company products listed below are warranted for the stated period from the date of the original purchase:

- |  |        |
|--|--------|
| 1. Cabs for tractors and snow removal equipment    | 1 Year |
| 2. Company manufactured accessories for above cabs | 1 Year |
| 3. Sunshades for lawn and garden tractors          | 1 Year |
| 4. Repair parts                                    | 1 Year |

### OWNER'S RESPONSIBILITIES

The owner of a new Company manufactured product must do the following to qualify for warranty service:

1. Retain the original invoice or other proof of purchase to avoid unnecessary difficulties in determining eligibility for warranty work.
2. Notify the dealer from whom the product was bought, or the company, as soon as possible after discovery of a possible defect, and provide proof of original purchase.

To notify the company write to: Original Tractor Cab Co., Inc., P.O. Box 97, Arlington, IN 46104.

3. the owner may, upon notification by the Company, be required to return the defective part, or parts, to the Company for inspection and warranty service.

### NOT COVERED BY WARRANTY

The following are not covered by this warranty:

1. Transportation charges to and from servicing dealer or the Company;
2. New products that have been subject to misuse, negligence or accident, or have been altered or repaired in a manner not authorized by the company;
3. Windshield wipers, lights, or accessories that are warranted separately by their respective manufacturers, except Company agrees to make available to the owner whatever warranty benefits may be made available to the Company by the manufacturers.

**All implied warranties, except to the extent prohibited by any applicable law, shall have no greater duration than the warranty period for the applicable product, some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.**

**The Company's liability arising out of warranties representation, instructions, or defects from any abuse, shall be limited exclusively to repair or replacing parts under the condition in the warranty, and in no event will Company be liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.**

**This warranty gives you specific legal rights, and you may also have rights that vary from state to state.**

## Carton Contents: Snow Cab #1694921

Key #	Part #	Qty.	Description
1	11594	1	Front Panel Frame
2	11593	2	Foot
3	11595	1	Foot Pocket Guard, RH
4	11596	1	Foot Pocket Guard, LH
5	10004	2	Front Post
6	10002	1	Top Frame Brace, RH
7	10003	1	Top Frame Brace, LH
8	11597	2	Rear Cross Bar Bracket
9	11598	1	Rear Cross Bar
10	10750	1	Rear Post, RH
11	10751	1	Rear Post, LH
12	11050	1	Rear Boxing Post, RH
13	11051	1	Rear Boxing Post, RH
14	10001	1	Top Frame
15	11600	1	Rear Curtain
16	11599	1	Front Panel Vinyl
17	10749-B	1	Windshield
18	10000	1	Plastic Top
19	11601	1	Door, RH
20	11603	1	Door Bottom, RH
21	11602	1	Door, LH
22	11604	1	Door Bottom, LH
23	9820	1	Door Hardware Package
	11605	1	Hardware Package (contents listed below)
	786	14	1/4"-20 x 5/8" HHCS
	788	6	1/4"-20 x 3/4" HHCS
	1514	4	1/4" Flat Washer
	730	20	1/4" Lock Nut
	4580	2	5/16"-18 x 1 3/4" RHMS
	1093	2	5/16"-18 x 1 1/4" HHCS
	2945	2	5/16"-18 Hex Nut
	60182	2	5/8" O.D. x 1/2" Spacer
	4902	2	Plastic Protector


## Optional Cab Accessories:

- #10120 Safety Glass Windshield
- #10121 Hand Operated Wiper
- #10122 Electric Wiper
- # 9855 Flashing Amber Caution Light
- #11133 Rear View Mirror, R or L Mount

(Available only from Original Tractor Cab)



**Step 1; See Figure 1:**  
Identify the steel parts by using Figure 1.

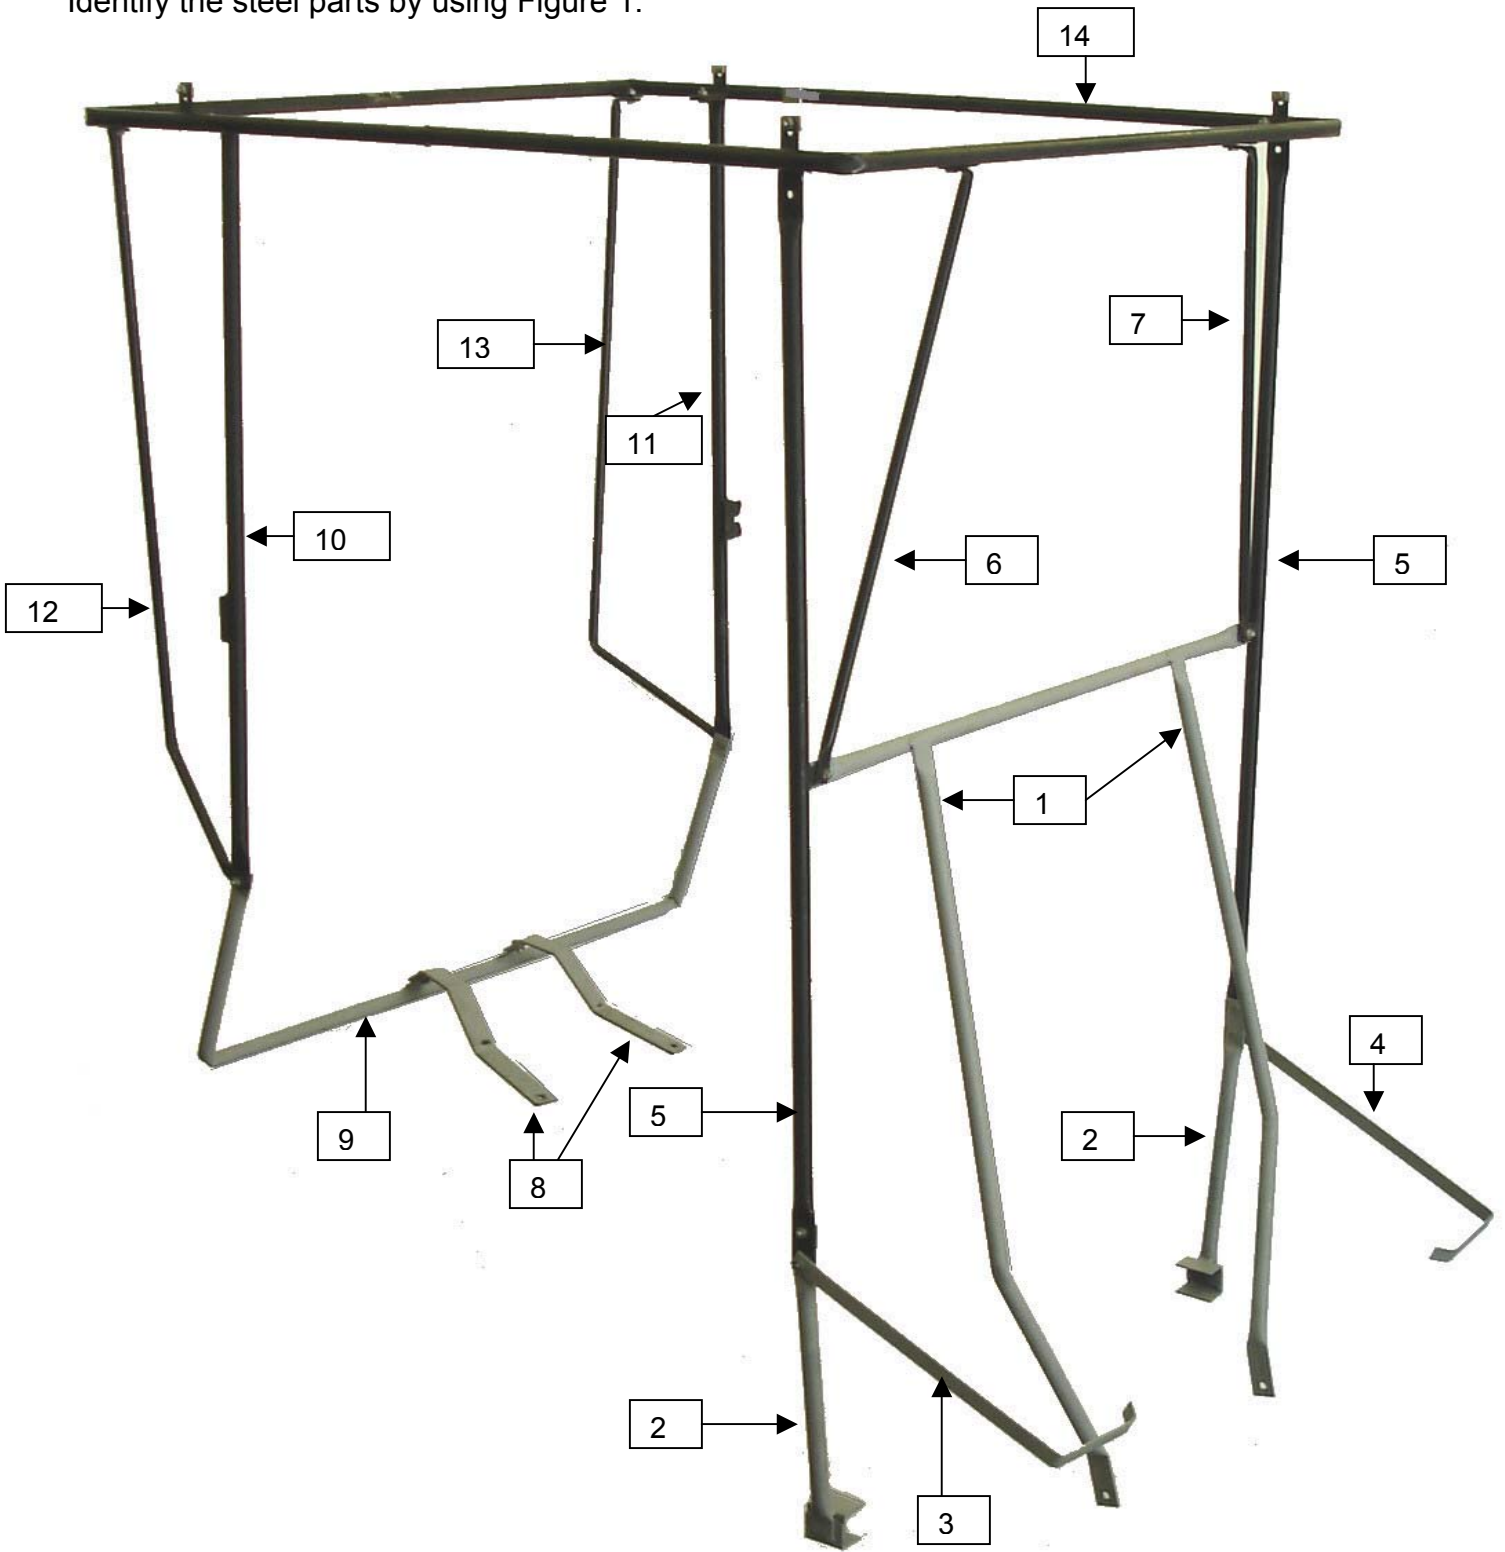


**Figure 1**


**Step 2; See Figure 2 & 2A:**  
Install Front Panel Frame (1)

**A.** Remove the bolt at reference A on both sides of the tractor. Place the Front Panel Frame over the dash from behind. Insert two 5/16" x 1 1/4" bolt inwards through the holes in the Front Panel Frame Legs.

**B.** Place a 5/8" O.D. x 1/2" spacer over the bolt. Insert the bolts into the holes at reference A. Tighten just enough to keep the frame upright.

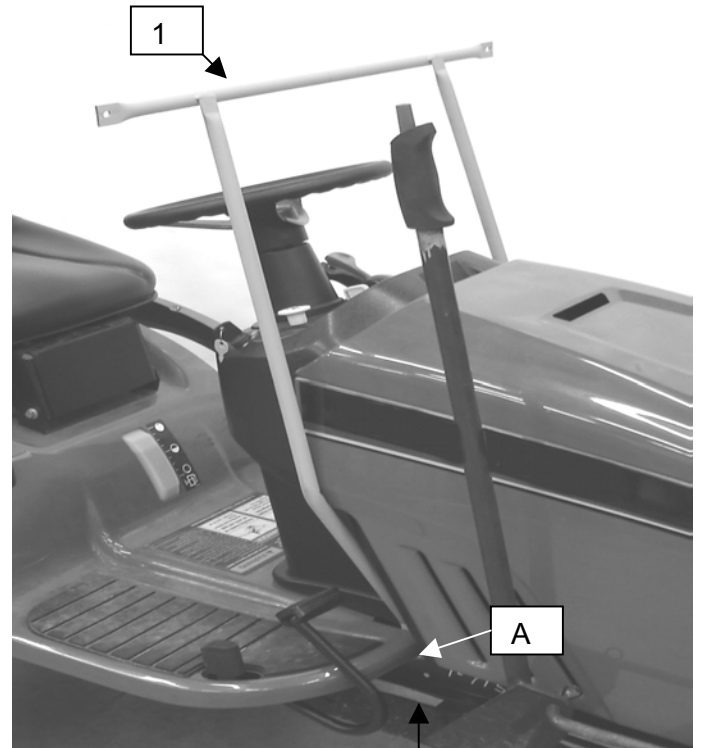

**Figure 2**

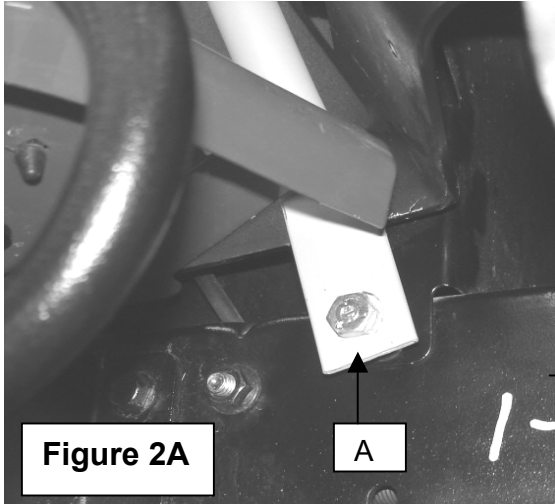


**Figure 2A**


**Step 3; See Figure 3:**  
Install right Foot (1)

**A.** Insert a 5/16" x 1 3/4" full thread screw into the clamp of one of the Feet.

**B.** Place the clamp over the edge of the step plate as shown in Figure 3A Tighten the bolt just enough to hold it in place. Repeat this step on the left side.

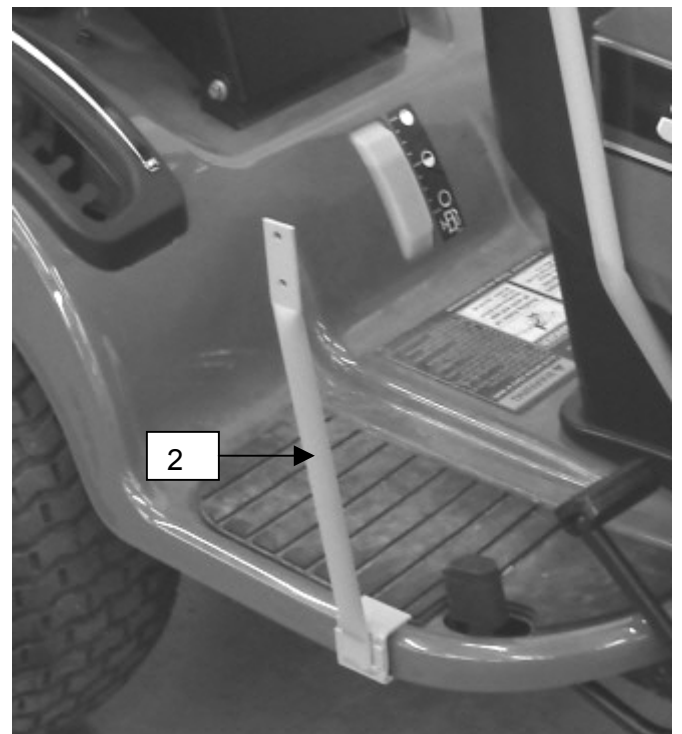

**Figure 3**

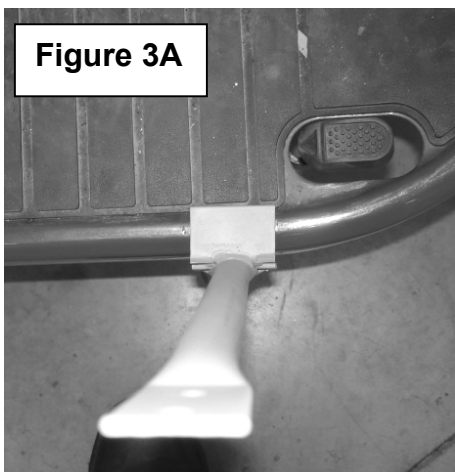

**Figure 3A**

**Step 4; See Figure 4:**

Install right & left Front Posts (5) and right & left Top Frame Braces (6 & 7).


**Note:** Bent ends of Top Frame Braces will point rearwards and lay flat when properly installed.

**A.** Insert a 1/4" x 3/4" bolt forward through the tab on the post, the end of the Front Panel Frame and then the lower end of the Top Frame Brace. Add a nut. Tighten just enough to hold the braces up.

**B.** Insert a 1/4" x 3/4" bolt outwards through the lower hole in the foot, the lower hole in the post and then the right Foot Pocket Guard (shorter than left). Add a nut. Tighten enough to hold the Foot Pocket guard as shown.

**C.** Insert a bolt out through the upper hole in the Foot and Post. Place a door hinge from the Door Hardware Package over the bolt and add a nut. Do not tighten at this time.

**D.** Repeat on left side of tractor.

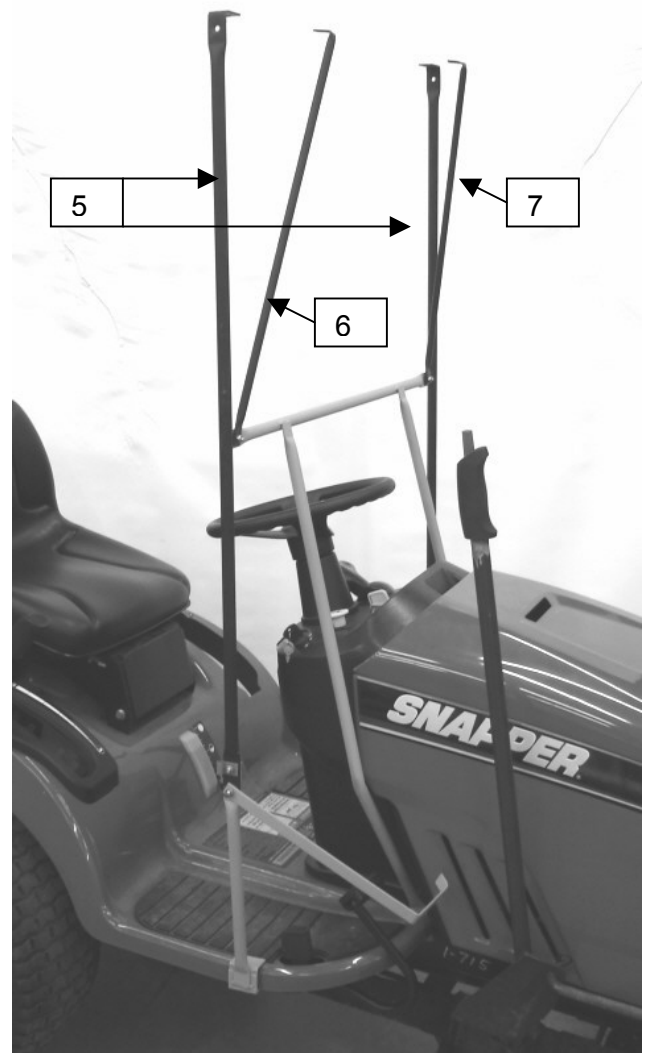

**Figure 4**


**Step 5; See Figure 5:**

Install Rear Cross Bar Brackets (8) and Rear Cross Bar (9)

**A.** Remove the bolts at Reference B.

**B.** Place the Rear Cross Bar Brackets over the holes as shown. Replace the bolts. Do not tighten at this time.

**C.** Place the tabs welded to the Rear Cross Bar over the brackets as shown. Insert two bolts down through the holes and add locknuts. Do not tighten at this time.

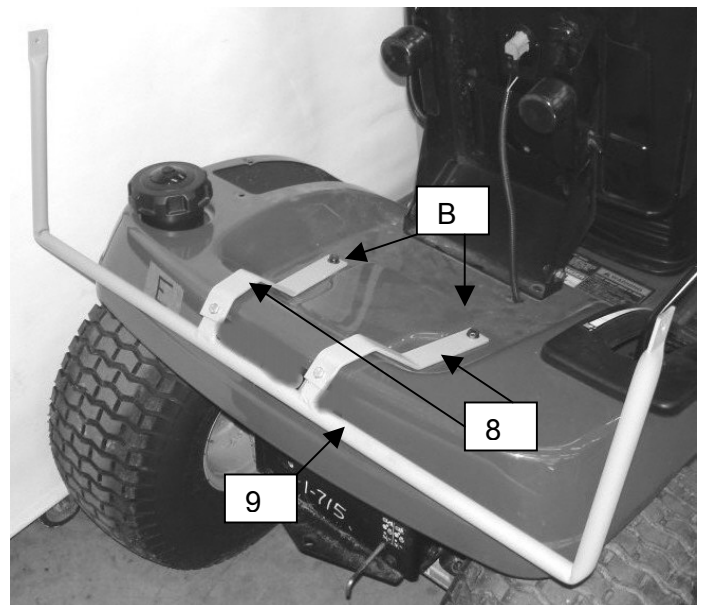

**Figure 5**


**Step 6; See Figure 6:**

Install right and left Rear Posts (10 & 11) and right and left Rear Boxing Posts (12 & 13).

**NOTE:** When properly installed Rear Post latch plates will face forward with the notch to the outside

**A.** Insert a 1/4" x 3/4" bolt outwards through the Rear Cross Bar, right Rear Post and then the right Boxing Post,. Add a nut. Tighten enough to keep the parts upright.

**B.** Repeat step 6A on the left side with left Posts.

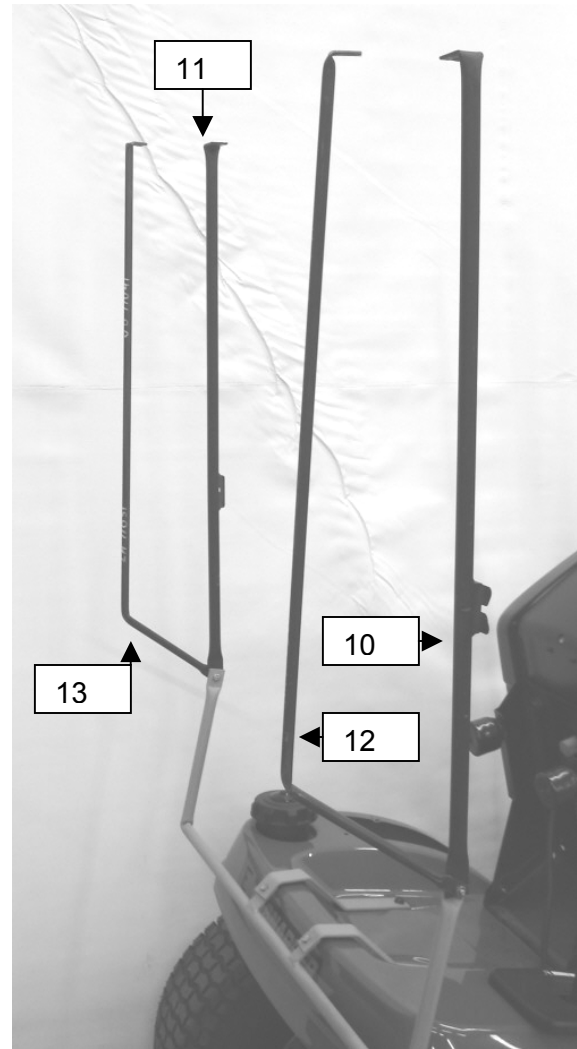


**Figure 6**

**Step 7; See Figure 7:**

Install Top Frame (14)

**A.** Place the top frame onto the bent ends of the posts.

**B.** Insert eight bolts up through the Rear Boxing Posts, the Rear Posts, Top Frame Braces and the Front Posts. Add nuts. Do not tighten at this time.

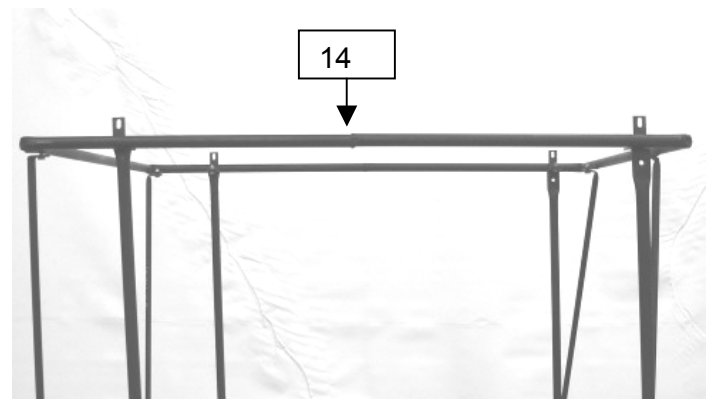

**Figure 7**



**Step 8: See Figure 8:**

Install the Doors for frame / door alignment.

**A.** Follow the instructions in the Door Hardware Package to install the Door Bottoms and the Door Latches.

**B.** Install, close and latch both Doors.

**C.** Tighten all bolts from previous steps at this time. Add two 5/16" nuts to the Front Panel Frame leg bolts at reference A. Tighten securely.

**Note:** If door latch rod does not line up with notch in latch plate loosen the Foot clamp and move Foot forward or rearward to raise or lower the rod. Tighten the clamp.

**D.** Remove the Doors to complete the installation.



**Figure 8**

**Step 9: See Figure 9:**


Install Windshield (17) and Front Panel Vinyl (16).

**A.** Place the Windshield and Front Panel Vinyl face up on a clean flat surface. Press the hook and loop fastener together.

**B.** Lay the rod sewn into the top of the windshield over the top frame. Close the snap flaps around the corners of the top frame.

**C.** Secure the ties to the cross bar and close the snap flaps around the posts.

**D.** Lock the brake pedal down. Fit the vinyl around the Foot Pocket Guards and Pedals. Connect the hook and loop fastener under the step plates .

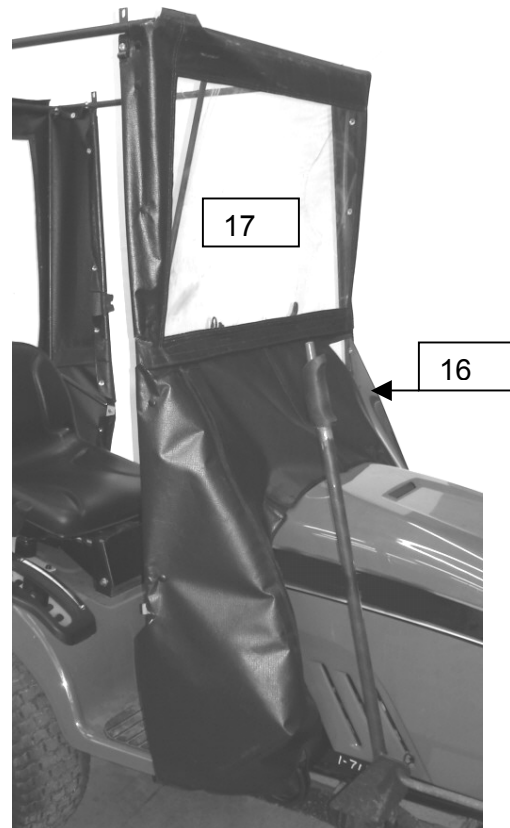

**Figure 9**

**Step 10: See Figure 10:**  
Install Rear Curtain (15).


- A.** Lay the rod sewn into the vinyl over the rear of the Top Frame. Close the snap flaps at the corners.
- B.** Close the snap flaps over the Rear Posts and Rear Cross Bar.
- C.** Secure the ties to the Rear Cross Bar.
- D.** Place a notched Plastic Protector over the bent ends of each rear post. (See inset)



**Figure 10**

**Step 10: See Figure 10:**  
Install Doors and Top (18).

- A.** Install doors per the instructions in the door hardware package. Connect the hook and loop fastener strips on the lower door & front panel.
- B.** Make sure that the rods sewn into the windshield and rear curtain are lying over the top frame. Place the top over the top frame.
- C.** Place four 1/4" flat washers over each of four bolts. Insert bolts inwards add locknuts and tighten.

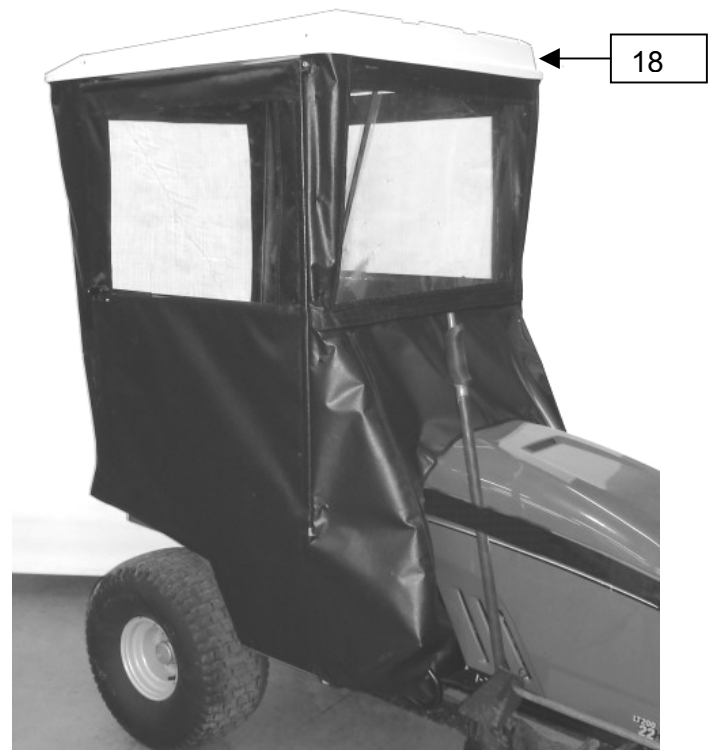

**Figure 10**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>