

**Agilent E5070BU/E5071BU Option 018
Hard Disk Drive Kit**

User's Guide

Second Edition



Agilent Part No. E5070-90119

June 2005

Printed in Japan

Notices

The information contained in this document is subject to change without notice.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of the Agilent Technologies.

© Copyright 2005 Agilent Technologies

Manual Printing History

The manual's printing date and part number indicate its current edition. The printing date changes when a new edition is printed. (Minor corrections and updates that are incorporated at reprint do not cause the date to change.) The manual part number changes when extensive technical changes are incorporated.

May 2005	First Edition
June 2005	Second Edition

Typeface Conventions

Sample (bold)	Boldface type is used when a term is defined or emphasis.
<i>Sample (Italic)</i>	Italic type is used for emphasis.
Sample key	Indicates a hardkey (key on the front panel or external keyboard) labeled "Sample." "key" may be omitted.
Sample menu/button/box	Indicates a menu/button/box on the screen labeled "Sample" which can be selected/executed by clicking. "menu," "button," or "box" may be omitted.
Sample block/toolbar	Indicates a block (group of hardkeys) or a toolbar (setup toolbar) labeled "Sample."
Sample 1 - Sample 2 - Sample 3	Indicates a sequential operation of Sample 1 , Sample 2 , and Sample 3 (menu, button, or box). "-" may be omitted.

1 **General Information**

This chapter describes the Kit, contents of the kit, and required tools to install the Option 018 into the Agilent E5070B/E5071B.

Option 018 Hard Disk Drive Kit

The purpose of this kit is to install the option 018 Hard Disk Drive into the Agilent E5070B/E5071B.

Contents of the Agilent E5070BU/E5071BU Option 018 Hard Disk Drive Kit

The kit includes the parts listed in Table 1-1. If anything is missing, contact the nearest Agilent Technologies office.

Table 1-1

Contents of the Agilent E5070BU/E5071BU Option 018 Hard Disk Drive Kit

Description	Qty.
Upgrade Manual (This manual)	1
HDD Assembly	1

2 **Option Installation**

This chapter describes the procedure to install the option 018 into the Agilent E5070B/E5071B.

Introduction

This chapter describes the procedure to install Option 018 into the E5070B/E5071B. The procedure consists of the following items.

- Installation Requirement
 - Removing Removable Hard Disk
 - Mounting Removable Hard Disk
 - Writing System Correction Data of Backup Memory to Removable HDD
 - Calibration of the Touch Screen
 - Caution for replacing the spare HDD with the original HDD
-

Update Procedure

Installation Requirement

- TORX Screwdriver T10

Removing Removable Hard Disk

Follow the steps below to remove a removable hard disk.

CAUTION

Before removing a hard disk, you *must* turn off the unit's power and then disconnect the power cord from the outlet.

- Step 1.** Unscrew the four screws that hold the cover panel (1 in Figure 2-1).
- Step 2.** Remove the panel.
- Step 3.** Unscrew the four screws that hold the removable hard disk (1 in Figure 2-2).
- Step 4.** Carefully remove the flat cable (2 in Figure 2-2^{*1}) from the removable hard disk. Release the cable's connector by pressing the locking hooks at the sides of the connector.


Mounting Removable Hard Disk

Follow the steps below to mount a removable hard disk.

- Step 1.** Connect the removable hard disk to the flat cable's connector (2 in Figure 2-2).
- Step 2.** Secure the removable hard disk in place with the four screws (1 in Figure 2-2).
- Step 3.** Secure the cover panel in place with the four screws (1 in Figure 2-1).


*1.Flat cable with connector outfitted

Figure 2-1 Mounting/Removing Removable Hard Disk -1

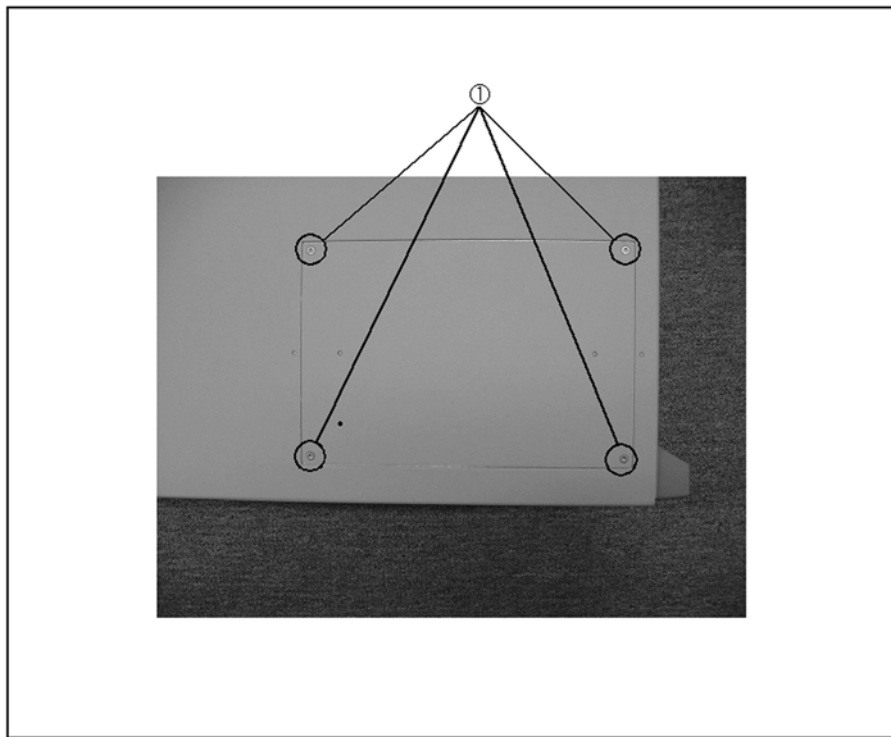

e5070bj7016

Figure 2-2 Mounting/Removing Removable Hard Disk -2

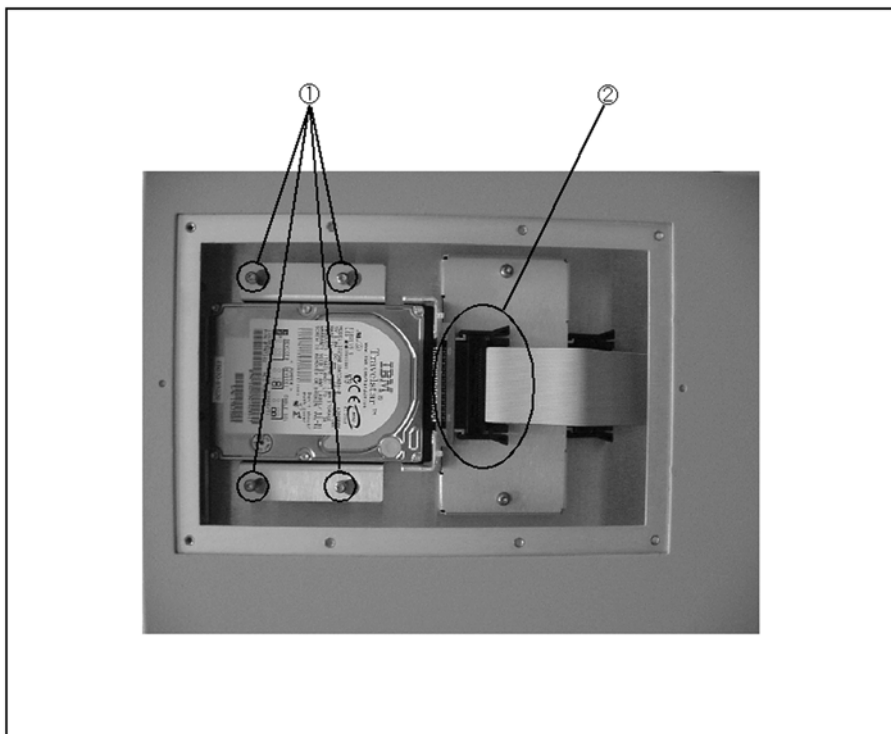

e5070bj7015

Writing System Correction Data of Backup Memory to Removable HDD

The following is a description of the procedures to write the system correction data stored in the backup memory to the mounted removable HDD.

- Step 1.** Turn on the E5070B/E5071B.
- Step 2.** Press **Macro Setup** .
- Step 3.** Press **Load Project...** on the softkey menu.
- Step 4.** A dialog box appears to allow you to select a program to be loaded. Select **RestoreSysCorFile.vba** from the D:\Agilent\Service folder, and then press **Open** button.
- Step 5.** Press **Macro Run** .
- Step 6.** **RestoreSysCorFile** dialog box appears (Figure 2-3). Click **OK**.

Figure 2-3 RestoreSysCorFile Dialog Box



CAUTION

Once the program has ended, restart the E5070B/E5071B to enable the system correction data.

Initial Registration of E5070B/E5071B

When you start up the E5070B/E5071B for the first time or after executing system recovery, you need to perform the initial registration of the Windows 2000 operating system of the E5070B/E5071B.

NOTE You cannot use the front panel keys during the initial registration of the E5070B/E5071B therefore connect the mouse and the keyboard before turning on the power.

NOTE If you perform the following procedure incorrectly, a message asking you whether to return to the previous registration screen and perform the registration appears. In this case, follow the instruction to return to the previous registration screen.

Step 1. Turns on the E5070B/E5071B.

Step 2. The Windows 2000 Professional Setup wizard appears. Click the **Next >** button (Figure 2-4).


Figure 2-4 Windows 2000 Professional Setup wizard



Option Installation Update Procedure


Step 3. In the Windows 2000 Professional Setup dialog box, select the **I accept this agreement** box and click the **Next >** button (Figure 2-5). Then, the Windows 2000 operating system is restarted automatically.

Figure 2-5 Windows 2000 Professional Setup dialog box

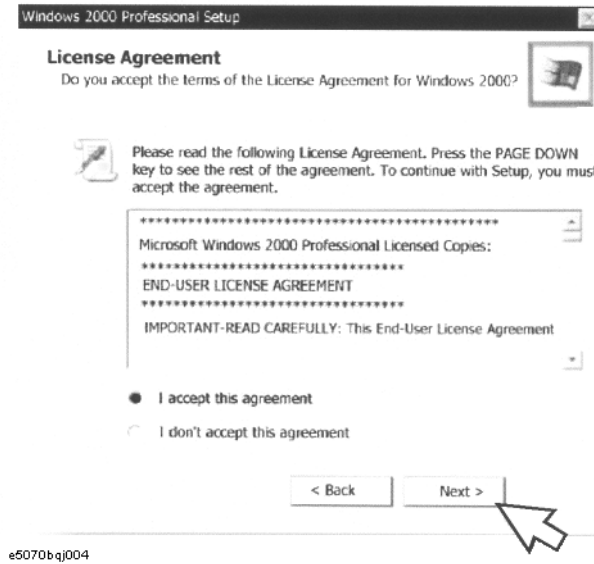


Step 4. The Network Identification wizard appears. Click the **Next >** button (Figure 2-6).

Figure 2-6 Network Identification wizard

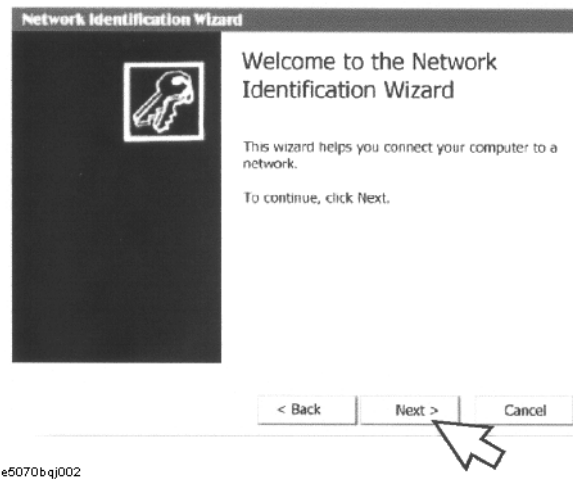


Step 5. In the Network Identification Wizard dialog box (1/2), select the **Windows always assumes the following user has logged on to this computer** box and check that **agena** is in the **User Name** box. If not, type in **agena**. Finally, click the **Next>** button (Figure 2-7).

Figure 2-7 Network Identification Wizard dialog box (1/2)

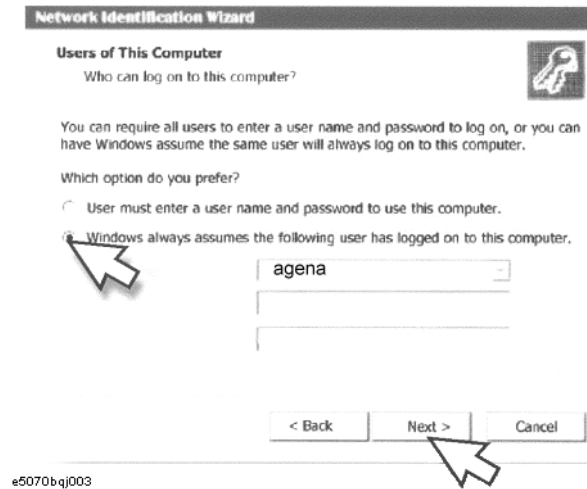

Step 6. In the Network Identification Wizard dialog box (2/2), click the **Finish** button to finish the initial registration of the E5070B/E5071B (Figure 2-8). Then, the measurement display of the E5070B/E5071B appears.

Figure 2-8 Network Identification Wizard dialog box (2/2)

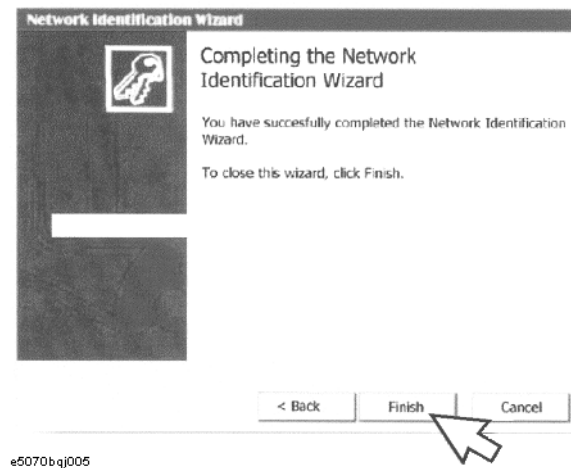

Calibration of the Touch Screen


When you have replaced the HDD on an E5070B/E5071B equipped with an Option 016 touch screen, you have to calibrate the touch screen. Follow the procedure described below to calibrate the touch screen.

- Step 1.** Press **System**.
- Step 2.** Press **Service Menu**.
- Step 3.** Press **Test Menu**.
- Step 4.** Press **Adjust Touch Screen**.

The touch screen calibration screen (Figure 2-9) appears.

Figure 2-9

Touch Panel Calibration Screen

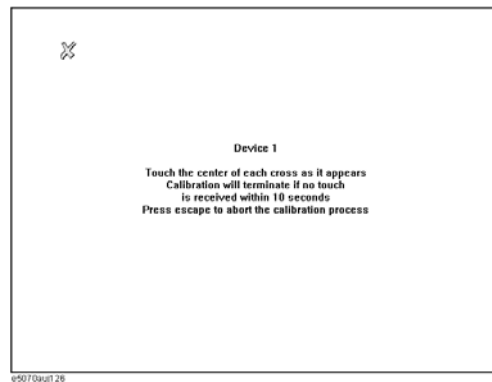

- Step 5.** Touch the x mark on the upper left with your finger. The mark x appears also on the lower left, upper right, and lower right. Touch the x marks in that order with your finger.

Touching the four locations described above with your finger automatically concludes the touch screen calibration.

NOTE

With no operation on the touch screen calibration screen for a preset time, it automatically closes and the previous measurement screen reappears.

Caution for replacing the spare HDD with the original HDD

The RestoreSysCorFile.vba is required to write the system correction data stored in the backup memory to the original HDD.

Execute the following steps to copy the RestoreSysCorFile.vba file.

- Step 1.** Copy the RestoreSysCorFile.vba file from the D:\Agilent\Service folder to a FD before replacing the spare HDD with the original HDD.
- Step 2.** Set the original HDD.
- Step 3.** Confirm that the RestoreSysCorFile.vba file exists on the D:\Agilent\Service of the original HDD.
- Step 4.** If the file does not exist, copy the RestoreSysCorFile.vba file from the FD to the D:\Agilent\Service folder of the original HDD.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>