# **WARNING!**


Warning! When lifting, transporting, or unpacking the PT7700 Series pan/tilt systems, DO NOT use the camera enclosure as a handle. Severe damage to the unit can occur.

**C997M** 



3500 Pelco Way, Clovis, CA 93612-5699 • (559) 292-1981 • (800) 289-9100 • FAX (800) 289-9150



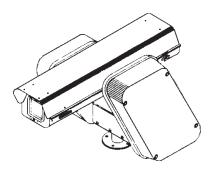

# PT7700 Series Pan and Tilt Systems

Installation/ Operation Manual

C397M (4/98)

Pelco • 3500 Pelco Way • Clovis, CA 93612-5699 • USA • www.pelco.com In North America and Canada: Tel (800) 289-9100 • FAX (800) 289-9150 International Customers: Tel (1-559) 292-1981 or FAX (1-559) 348-1120

# **CONTENTS**

Section	<u>Page</u>
1.0	GENERAL
2.0	DESCRIPTION       4         2.1 MODELS       4         2.2 CERTIFICATIONS       4
3.0	INSTALLATION       5         3.1 MOUNTING       5         3.2 CAMERA/LENS INSTALLATION       5         3.3 WIRING       7         3.4 TESTING SYSTEM AND ADJUSTING LIMIT STOPS       10
4.0	OPERATION11
5.0	TROUBLESHOOTING12
6.0	MAINTENANCE
7.0	EXPLODED ASSEMBLY DIAGRAMS15
8.0	SPECIFICATIONS
9.0	WARRANTY AND RETURN INFORMATION24

# **LIST OF ILLUSTRATIONS**

<u>Figure</u>		<u>Page</u>
1	PT7700 Series Input Wiring Diagram	8
2	PT7700 Series Connector	9
3	Tilt Limit Stop Adjustment	10
4	Pan Adjustments and Lubrication	14
5	Tilt Adjustments and Lubrication	14
6	Exploded Assembly Diagram for Blower and Circuit Board	15
7	Exploded Assembly Diagram for Heaters and Circuit Board	17
8	Wiring Diagram for Enclosure Circuit Board	18
9	Component Locations for Enclosure Circuit Board	19
10	Layout of Traces on Enclosure Circuit Board	19
11	Dimension Drawing	23

# **LIST OF TABLES**

<u>Table</u>	!	<u>Page</u>
Α	Parts List (Figure 6)	16
В	Parts List (Figure 7)	17

# **REVISION HISTORY**

Manual	# Date	Comments
C397M C397M	8/96 8/97	Original version Completely revised manual. Added models and revised pin assignments in Figure 2 per ECR #0927.
	4/98	Removed options. Added certifications. Changed pagination.

## 1.1 IMPORTANT SAFEGUARDS AND WARNINGS

Prior to installation and use of this product, the following WARNINGS should be observed.

- Installation and servicing should only be done by Qualified Service Personnel and conform to all Local codes.
- Unless the unit is specifically marked as a NEMA Type 3, 3R, 3S, 4, 4X, 6, or 6P enclosure, it is designed for indoor use only and it must not be installed where exposed to rain and moisture.
- The weight of the camera/lens and enclosure shall not exceed 75 lbs. (34.02 kg).
- 4. Only use replacement parts recommended by Pelco.
- After replacement/repair of this unit's electrical components, conduct a resistance measurement between line and exposed parts to verify the exposed parts have not been connected to line circuitry.
- 6. The installation method and materials should be capable of supporting four (4) times the weight of the enclosure, pan/tilt, camera and lens combination.

# The product and/or manual may bear the following marks:



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



# CAUTION: RISK OF ELECTRIC SHOCK. DO NOT OPEN.



# **CAUTION:**

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Please thoroughly familiarize yourself with the information in this manual prior to installation and operation.

# 2.0 DESCRIPTION

The PT7700 systems combine an environmental camera enclosure, pan/tilt assembly, and receiver/driver into a single unit that you can install indoors or outdoors. You can install 2/3-inch (1.69 cm) and 1-inch (2.54 cm) format cameras with either fixed focal length lenses or motorized zoom lenses. An adjustable camera sled will accommodate different sizes of cameras and lenses.

# 2.1 MODELS

PT7723RX-1	Pan/tilt, CX9115RX Coaxitron® receiver/driver, and EH5723-1 23-inch (54 cm) enclosure. 120 VAC input. Thermostatically controlled heater and blower.
PT7723RX-1/PP	PT7723RX-1 with preset positioning capabilities and alarm outputs.
PT7723RX-3	Pan/tilt, CX9115RX Coaxitron® receiver/driver, and EH5723-1 23-inch (54 cm) enclosure. 230VAC input. Thermostatically controlled heater and blower.
PT7723RX-3/PP	PT7723RX-3 with preset positioning capabilities and alarm outputs.
PT7729RX	Pan/tilt, CX9115RX Coaxitron® receiver/driver, and EH5729 29-inch (74 cm) environmental camera enclosure. 120 VAC input.
PT7729RX-1	PT7729RX with thermostatically controlled heater and blower.
PT7729RX-1/PP	PT7729RX-1 with preset positioning capabilities and alarm outputs.
PT7729RX-1/SL	PT7729RX-1 with 360° pan rotation.
PT7729RX-3	Pan/tilt, CX9220RX Coaxitron® receiver/driver, and EH5729-3
11720100	29-inch (74 cm) enclosure. 230 VAC input. Thermostatically controlled heater and blower.
PT7729RX-3/PP	PT7729RX-3 with preset positioning capabilities and alarm outputs.
PT7723WX-1	Pan/tilt, WX8115RX Wiretron receiver/driver, and EH5723-1 23-inch (54 cm) enclosure. 120 VAC input. Thermostatically controlled heater and blower.
PT7729WX	Pan/tilt, WX8115RX Wiretron receiver/driver, and EH5729 29-inch (74 cm) environmental camera enclosure. 120 VAC input.
PT7729WX-1	PT7729WX with thermostatically controlled heater and blower.
PT7729WX-3	Pan/tilt, WX8220RX Wiretron receiver/driver, and EH5729-3 29-inch (74 cm) enclosure. 230 VAC input. Thermostatically controlled heater and blower.

# 2.2 CERTIFICATIONS

The products identified below have been tested and certified for agency compliance as noted.

	Agency Compliance Certification			
Model	CE	FCC	UL	CSA/cUL
PT7723RX-1			Х	
PT7723RX-1/PP			Х	
PT7729RX-1			Х	
PT7729RX-1/PP			Х	
PT7729RX-1/SL			Х	
PT7723WX-1			Х	
PT7729WX			Х	
PT7729WX-1			Х	

Applicable CE, FCC, UL, and CSA/cUL directives/standards:

UL Listed to UL2044

# 3.0 INSTALLATION



**CAUTION:** When unpacking, transporting, or lifting the PT7700 Series systems, DO NOT use the camera enclosure as a handle. Severe damage to the unit can occur.

**NOTE:** To insure proper wiring and operation of your equipment, it is recommended that you test the PT7700 system and its controller in your facility before installing them in the field. Refer to Sections 3.2 through 3.4.

# 3.1 MOUNTING



**CAUTION:** The PT7700 systems are designed to operate in an upright position only. Do not mount the systems horizontally or in an inverted position.

Attach the base of the pan/tilt system to a flat surface. If you use a wall or pedestal mount, follow the instructions that are provided with the mount.

Make sure the mounting surface can support four (4) times the weight of the pan/tilt system. Refer to section 8.0, "Specifications," for unit weights (excluding camera/lens).

Proceed to Section 3.2, CAMERA/LENS INSTALLATION.

#### 3.2 CAMERA/LENS INSTALLATION

- 1. Open the enclosure lid and remove the camera sled from the rail:
  - Loosen the screws.
  - Slide the sled so that the screws are in the large part of the mounting slots.
  - c. Remove the sled.
  - d. Remove the parts tied to the sled.
- All Models Except the PT7729RX and PT7729WX If you are installing the pan/tilt system in a <u>marine or high-moisture</u> environment, make the following modifications to your enclosure:

Refer to Figure 6 in Section 7.0, "Exploded Assembly Diagram," for an exploded assembly diagram of the blower assembly.

- Remove the plastic cover over the power supply section of the circuit board.
- b. Disconnect the electrical plug from the fan.
- c. Remove the three screws that secure the fan plate and fan to the enclosure.
- d. Remove the four screws that secure the fan to the fan plate.
- e. Turn the fan around so that it blows toward the viewing window (refer to the arrows on the fan).
- f. Reinstall the fan on the fan plate.
- g. Reinstall the fan plate and fan in the enclosure.
- h. Reconnect the electrical plug on the fan.
- i. Replace the plastic cover.

- j. On the bottom of the enclosure, remove the vent grill and filters at the front of the enclosure. Replace the grill with one of the vent cover plates that was attached to the camera sled as loose equipment.
- k. On the bottom of the enclosure, attach the other vent cover plate over the grill at the rear of the enclosure.
- Mount the camera/lens to the sled with the 1/4-20 Phillips-head screws that are provided in the parts bag. You can mount the camera to either side of the sled for proper elevation of the camera inside the enclosure.
- 4. Install the sled and camera/lens in the enclosure:
  - a. If the camera's lens is adjustable, extend the lens to its maximum length.
  - b. Place the sled over the mounting screws in the enclosure.
  - c. Slide the sled forward until the camera's lens almost touches the window.
  - d. Tighten the screws to secure the camera sled to the enclosure.
- Connect the video cable in the enclosure to the video output connection on the camera.
- If your camera has a motorized zoom lens control, connect or wire the camera's lens control to the LENS or LENS CONTROL connector on the circuit board. Refer to Figure 1 to see where to connect different lens connector options.
- 7. Wire power from the circuit board to the camera. There are two ways to connect power (refer to Figure 1):
  - a. A three-pin plug with leads is supplied as loose equipment. Connect the leads from the plug to the camera as follows:

Brown - AC HI Blue - AC NT Green - Ground

Remove the plastic cover over the power supply section of the circuit board.

Connect the plug to the CAM1 socket on the circuit board.

Replace the plastic cover.

or

- b. If your pan/tilt system uses 120 VAC and you ordered the optional 120 VAC electrical outlet accessory (O/I-OUTLET), connect the 120 VAC plug to the camera. Connect the three-pin plug to CAM1 (remove the plastic cover over the circuit board and replace the cover after you plug in the connector).
- 8. Adjust the focus and iris on the camera, if necessary.
- 9. Close the enclosure lid.

Proceed to Section 3.3, WIRING.

**NOTE:** If the AC power input to your

PT7700 unit is 120 VAC, the camera must use 120 VAC. If the power in-

put is 230 VAC, the camera must use

230 VAC.

## 3.3 WIRING

- Route the six-foot power/video/control cable through the wall or pedestal mount if applicable.
- 2. Connect the end of the cable with the 16-pin connector to the mating connector in the base of the pan/tilt unit.
- 3. Connect the other end of the cable as follows:
  - a. Connect the coax cable to the video input of the controller.
  - b. For models PT7729WX, PT7729WX-1, PT7723WX-1 and PT7729WX-3, connect the Wiretron control wires (refer to Figure 2).
  - c. For models PT7729RX-1/PP and PT7729RX-3/PP, connect the alarm outputs (cable not supplied). Refer to Figure 2.
  - Plug the power cord into either 120 VAC or 230 VAC, depending on your model.

Proceed to Section 3.4, TESTING SYSTEM AND ADJUSTING LIMIT STOPS.

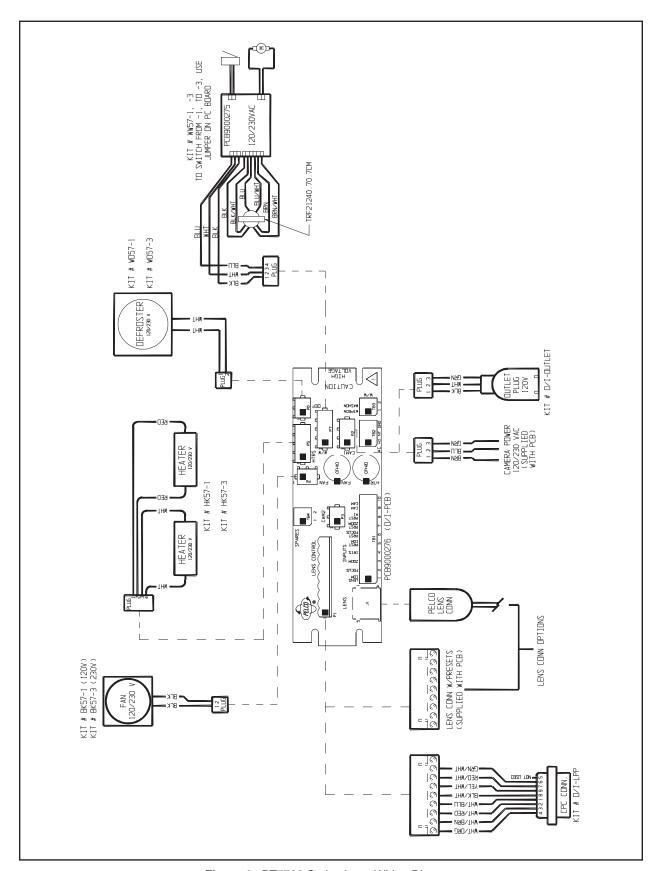



Fig e 1. PT7700 Series Input Wiring Diagram

PT7729RX PT7723RX-1 PT7729RX-1 PT7729RX-3 PT7729RX-1/SL Base Connector Pin Assignments



PIN	FUNCTION	COLOR
2	COAX CORE	RED
4	COAX SHIELD	BLK
8	GROUND	GRN
10	AUX COMMON	WHT/GRN
11	AUX1	ORG
12	AUX2	YEL
13	AUX3	BLU
15	AC NEUTRAL	WHT (2X)
16	AC HIGH	BLK (2X)

PT7729WX PT7723WX-1 PT7729WX-1 PT7729WX-3 Base Connector Pin Assignments



PIN	FUNCTION	COLOR
2	COAX CORE	RED
4	COAX SHIELD	BLK
8	GROUND	GRN
9	WIRETON INPUT SIGNAL HIGH	BRN/WHT
10	AUX COMMON	WHT/GRN
11	AUX1	ORG
12	AUX2	YEL
13	AUX3	BLU
14	WIRETRON INPUT SIGNAL LOW	BLK/WHT
15	AC NEUTRAL	WHT (2X)
16	AC HIGH	BLK (2X)

PT7729RX-1/PP PT7729RX-3/PP With Alarm Outputs Base Connector Pin Assignments



PIN	FUNCTION	COLOR
2	COAX CORE	RED
4	COAX SHIELD	BLK
8	GROUND	GRN
15	AC NEUTRAL	WHT (2X)
16	AC HIGH	BLK (2X)
1	ALARM #1	
3	ALARM #2	
5	ALARM #3	
6	ALARM #4	
7	ALARM #5	
10	ALARM #6	
11	ALARM #7	
12	ALARM #8	
13	EXTERNAL ALARMING OUTPUT (ACTIVE LO)	
	ALARM COMMON IS CHASSIS GROUND	

Figure 2. PT7700 Series Connector

## 3.4 TESTING SYSTEM AND ADJUSTING LIMIT STOPS



**WARNING:** Never remove the limit stops. Do not adjust the limit stops while the unit is moving. You may injure yourself or damage the unit.

**NOTE:** The tilt limit stops are factory set for 0° and -90° from the horizon.

To test the system and adjust the limit stops:

- 1. Loosen the two pan limit stops at the base of the pan/tilt.
- 2. Turn on power.
- Test the system by moving the pan/tilt to the left, right, up and down. Do not move the pan/tilt very far as the limit stops are not set yet. All you want to do is verify that the motors work. Also verify that the camera functions properly.
- 4. Pan the unit to the right to the desired right pan limit.
- Move the right pan limit stop until it touches the pan limit switch actuator. Continue pushing the stop until the actuator clicks, indicating the switch has opened. Lock the stop in place.
- 6. Pan the unit to the left to the desired left pan limit.
- Move the left pan limit stop until it touches the pan limit switch actuator. Continue pushing the stop until the actuator clicks, indicating the switch has opened.
  Lock the stop in place.
- 8. Remove the four screws from the right side cover of the pan/tilt.
- Refer to Figure 3 and loosen the recessed set screws on the up and down limit stop collars attached to the tilt shaft.
- 10. Tilt the unit up to the desired upward limit.
- Turn the up limit stop collar until it touches the tilt limit switch actuator. Continue turning the stop until the actuator clicks, indicating the switch has opened.
  Lock the collar in place.
- 12. Tilt the unit down to the desired downward limit.
- 13. Turn the down limit stop collar until it touches the tilt limit switch actuator. Continue turning the stop until the actuator clicks, indicating the switch has opened. Lock the collar in place.
- 14. Replace the side cover.
- 15. The installation is complete.

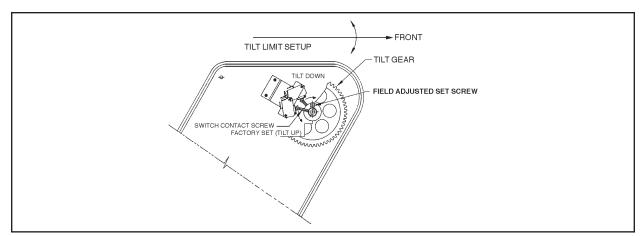


Figure 3. Tilt Limit Stop Adjustment

# 4.0 OPERATION

Refer to the manual for your control equipment for operating the pan/tilt system.

If your enclosure has a thermostatically controlled blower, the thermostat is set to turn the fan on between 77° and 93°F (25° and 34°C) and to turn the fan off between 62° and 78°F (17° and 26°C).

If your enclosure has thermostatically controlled heaters or defroster, the thermostat is set to turn them on between 42° and  $58^{\circ}F$  (6° and  $14^{\circ}C$ ) and to turn them off between 72° and  $88^{\circ}F$  (22° and 31°C).

# **5.0 TROUBLESHOOTING**

Fuses are located inside the left cover of the pan/tilt unit. Fuses F1 (mother board) and F2 (camera) are 2/10-ampere, slow-blow fuses. F3 (pan/tilt) is a 1-ampere, slow-blow fuse. To order fuses F1 and F2, specify the part number FUS2/10SB. To order fuse F3, specify the part number FUS1SB.

If you need to return the pan/tilt system and you can not place the camera enclosure in a horizontal position, remove three of the four Allen bolts that attach the enclosure to the tilt shaft. This will allow movement without damage to the gear train assembly components.

Figures 6-7 and Tables A-B show exploded assembly diagrams and parts lists for the blower and heaters, if your model is equipped with them.

Figures 8-10 show the wiring, component locations, and layout of traces for the circuit board in the enclosure.

# **6.0 MAINTENANCE**

Perform the following maintenance at six-month (or more often in harsh environments) intervals to prolong the operational life and appearance of the equipment.

#### **Window and Filters**

- Clean the window with a mild nonabrasive detergent in water and a soft cloth to maintain picture clarity.
- 2. If your enclosure has a blower, clean the foam filters as follows:
  - a. On the bottom front of the enclosure, remove the two screws in the vent grill.
  - b. Remove the vent grill and take out the filters.
  - Clean the filters with warm water and mild detergent, dry thoroughly, and replace them in the grill.
  - d. Reinstall the vent grill.

To order replacement filters, use the part number EH550010045.

#### **Pan Adjustments and Lubrication**

- 3. Tilt the enclosure so that the front points downward.
- 4. Remove the four screws at the rear, just above the base, of the pan/tilt unit.
- 5. Lift up the lid slightly and push it forward to free the lip at the front of the lid.
- 6. Check the tension of the pan drive chain. A movement of 1/32" to 3/32" in the chain is acceptable. To adjust the chain:
  - a. Refer to Figure 4. Loosen the four screws (A two shown) that secure the motor/gearbox to the mounting frame.
  - b. Use a screwdriver to pry at B to apply tension to the chain.
  - c. Tighten the screws.
- 7. If necessary, tighten the nut at C to remove any endplay in the worm (E).
- 8. Lubricate the pan gears and chain assembly with a high quality grease capable of withstanding temperatures from -50° to 170° F (-46° to 77° C):
  - a. Liberally apply grease to the chain and sprockets (D), worm (E), and worm gear (behind worm).
  - b. Pan the unit to spread the grease uniformly on the parts.
  - c. Apply additional grease if necessary.
- 9. Replace the lid over the pan housing.

# **Tilt Adjustments and Lubrication**

- 10. Remove the plastic cover on the right side of the pan/tilt unit.
- 11. Refer to Figure 5. Verify that the worm (B) is fully seated in the worm gear (A). If it is not, turn the two nuts (C) to lift the worm. Tighten the two nuts at (D).
- 12. If necessary, tighten the nut at E to remove any endplay in the worm (B).
- 13. If you can move the enclosure up and down, but the worm gear (A) does not move, push pin H further into the tilt shaft to eliminate movement.
- 14. Lubricate the tilt gears and chain assembly with a high quality grease capable of withstanding temperatures from -50° to 170° F (-46° to 77° C):
  - a. Liberally apply grease to the chain and sprockets (J), worm (B), and worm gear (A).
  - b. Tilt the unit to spread the grease uniformly on the parts.
  - c. Apply additional grease if necessary.
- 15. Replace the cover over the tilt housing.


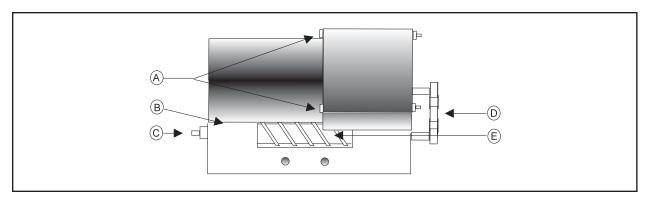


Figure 4. Pan Adjustments and Lubrication

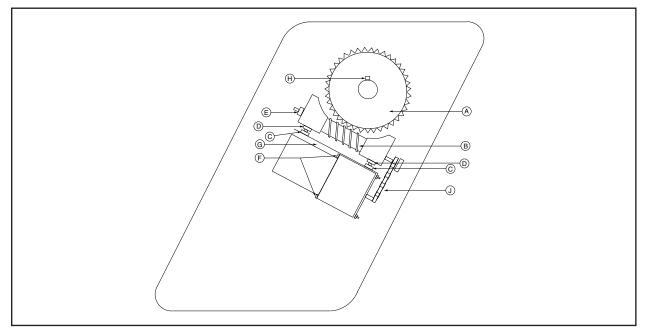

Figures 5. Tilt Adjustments and Lubrication

# 7.0 EXPLODED ASSEMBLY DIAGRAMS

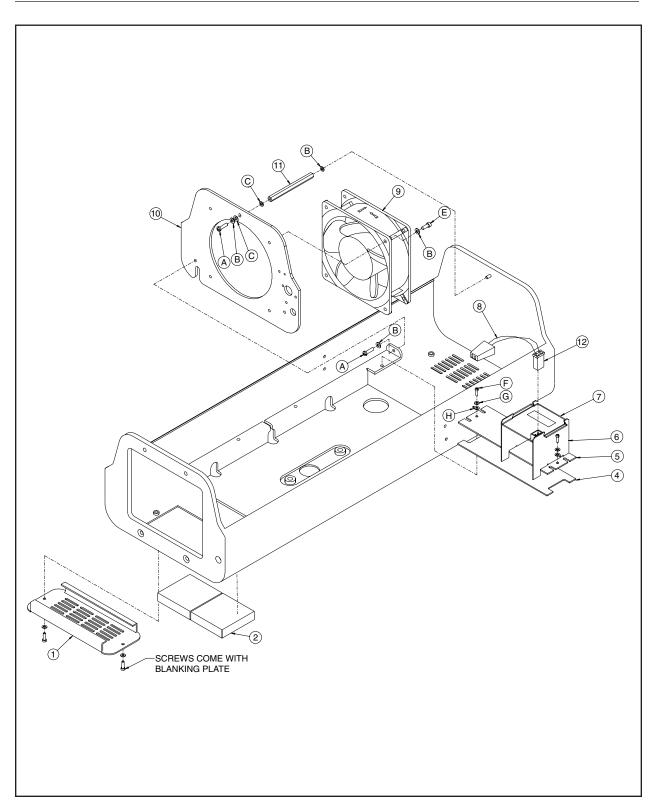


Figure 6. Exploded Assembly Diagram for Blower and Circuit Board

Table A. Parts List (Figure 6)

Item	Qty	Description	Part Number
1	1	Vent Grill	57004005COMP
2	2	Foam Filter	EH550010045
4	1	Circuit Board Insulator	EH450010256
5	1	Circuit Board	PCB9000276ASSY
6	2	Power Supply Barrier	EH47004029COMP
7	1	Power Supply Barrier Cover	EH470010019
8	1	Fan Wire Cord with Plug	WIR432000
9	1	Fan Tube, 230 VAC	ED210015
	1	Fan Tube, 120 VAC	EH18013
10	1	Fan Plate	57004010COMP
11	1	Standoff, 3.375" Length	570010007
12	1	Connector Plug	CON1-480318-0
Α	3	Screw, 6-32 x 3/8", Pan Head, Phillips	ZH6-32X.375SPP
В	8	Internal Tooth Lock Washer, #6	ZH6LWSIS
С	2	Flat Washer, #6	ZH148X375X32
Е	4	Cap Screw, 6-32 x 3/8", Allen Socket Head	ZH6-32X.375CS
F	2	Screw, 4-40 x 1/4", Pan Head, Phillips	ZH4-40X.250SPP
G	2	Split Lock Washer, #4	ZH4LWSSL
н І	2	Circuit Board Grounding Clip	570010004

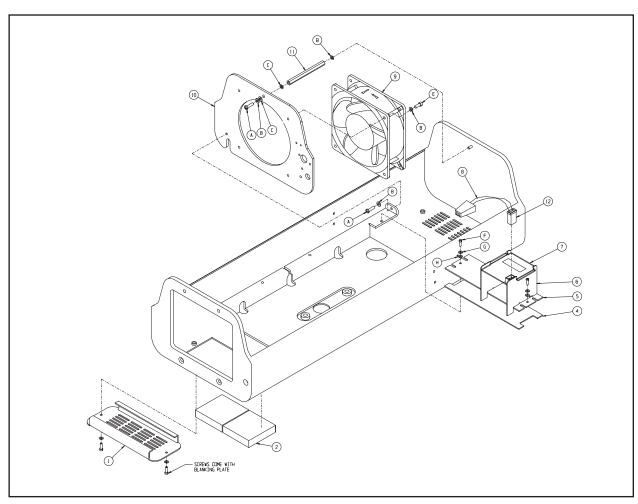


Figure 7. Exploded Assembly Diagram for Heaters and Circuit Board

Table B. Parts List (Figure 7)

Item	Qty	Description	Part Number
1	1	Bracket/Heater Sink	57004020COMP
2	2	Heater, 230 VAC	HTR40220
	2	Heater, 120 VAC	HTR50120
3	1	Connector Plug	CON1-480424-0
4	1	Power Supply Barrier Cover	EH470010019
5	2	Power Supply Barrier	EH47004029COMP
6	1	Circuit Board	PCB9000276ASSY
7	1	Circuit Board Insulator	EH450010256
А	2	Spacer, .375" Length	SPA8422
В	4	Internal Tooth Lock Washer, #4	ZH4LWSIS
	2	Internal Tooth Lock Washer, #4	ZH4LWSIS
С	4	Screw 4-40 x 1/4", Pan Head, Phillips	ZH4-40X.250SPP
	2	Screw 4-40 x 1/4", Pan Head, Phillips	ZH4-40X.250SPP
D	2	Grounding Clip	570010004
E	2	Screw, 6-32 x 1/4", Pan Head, Phillips	ZH6-32X.250SPP
F	2	Internal Star Washer, #6	ZH6LWSIS

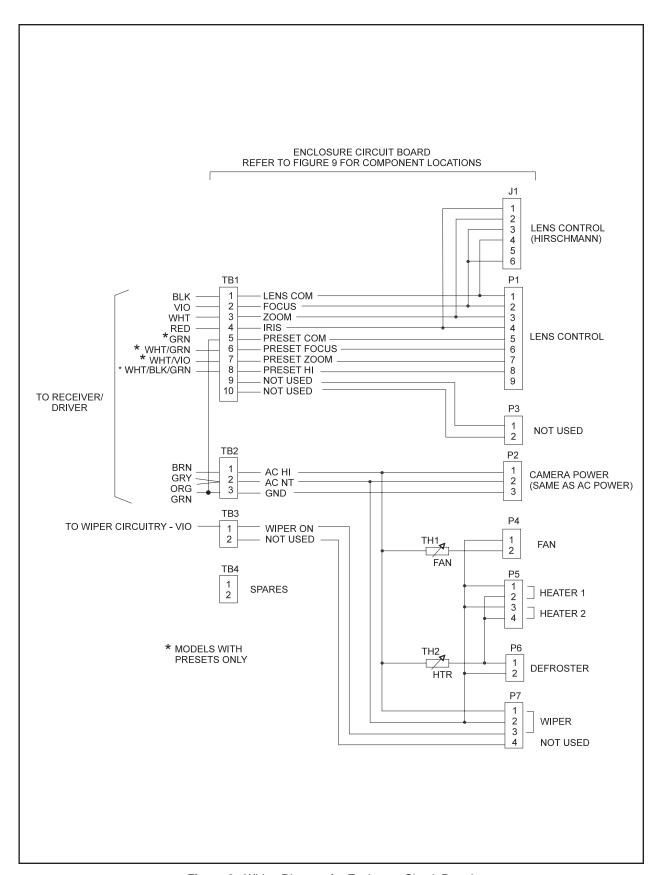


Figure 8. Wiring Diagram for Enclosure Circuit Board

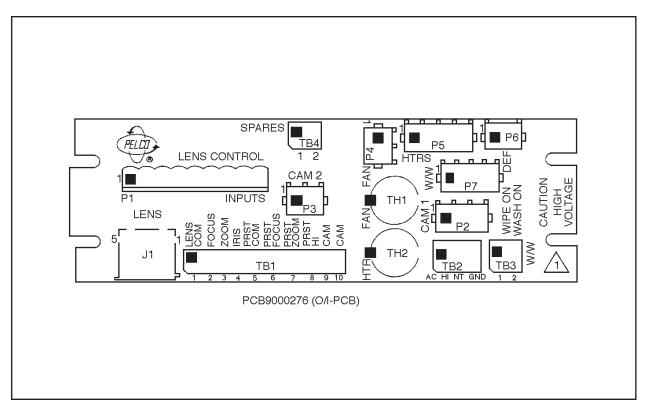


Figure 9. Component Locations for Enclosure Circuit Board

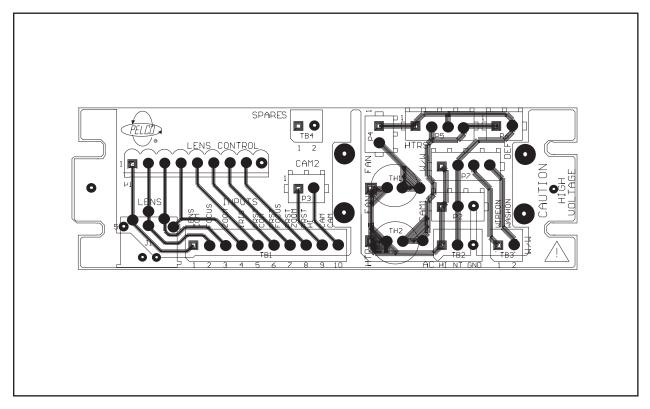


Figure 10. Layout of Traces on Enclosure Circuit Board

# **8.0 SPECIFICATIONS**

## **SYSTEM** Input Voltage: 120 or 230 VAC, 50/60 Hz Power Requirements: PT7729RX, PT7729WX 0.35 A (42 vA) PT7729RX-1, PT7723RX-1, PT7729RX-1/PP, PT7729RX-1/SL, PT7729WX-1, PT7723WX-1 1.7 A (204 vA) PT7729RX-3, PT7729RX-3/PP, PT7729WX-3 1.9 A (437 vA) Power/Control Cables All Models: Power - 3-wire grounded, 18 AWG, 6 ft (1.83 m) Video - RG59, 6 ft (1.83 m) PT7729WX, PT7729WX-1, PT7723WX-1, PT7729WX-3 Wiretron Control - 2-conductor, 18 AWG, 6 ft (1.83 m) **NEMA Rating:** 3R Environment: Indoor/outdoor -10° to 120° F (-23° to 49° C) Dimensions: See Figure 11 Unit Weight PT7723RX-1, PT7723WX-1 48 lbs (21.77 kg) PT7729RX. 49 lbs (22.23 kg) PT7729WX PT7729RX-1, PT7729RX-1/PP, PT7729RX-3, PT7729RX-3/PP,

PT7729RX-1/SL, PT7729WX-1, PT7729WX-3

53 lbs (24.04 kg)

#### **PAN/TILT**

Construction

Body: Aluminum plate

Side Covers: Vacuum-formed ABS plastic, UV protected

Pan: 0-355° movement in horizontal plane, except PT7729RX-1/SL,

which has 360° pan rotation

Pan Speed: 9°/sec ±1° (no load condition)

Tilt: +15° movement in vertical plane from horizon

-90° movement in vertical plane from horizon

Tilt Speed: 3°/sec ±5° (no load condition)

Torque

Pan: 10 ft lbs with specified voltage Tilt: 20 ft lbs with specified voltage

Gearing: Adjustable worm-gear final drive to prevent drift and minimize

backlash

Bearings: Heavy-duty ball bearings on all rotating surfaces

Motors: Instantaneous reversing

Limit Switches: Pan and tilt - 5 A each

#### RECEIVER/DRIVER

Coaxitron® Receiver/Driver

Fuses: One 1 A, 3 AG type

Two 2/10 A, 3 AG type

Control Method: 15-pulse train (pulse width modulated) superimposed on the

video signal during the vertical interval by the control transmit-

ter. Pulse train occupies one (1) TV line period.

Pulse Amplitude: Approximately 1 V p-p added to video signal; 333 KHz nominal

Input Video: 1 V p-p nominal; 2 V p-p maximum at less than 75% APL; 1.5

V p-p maximum at 90% APL

System Bandwidth: Less than 2 dB down at 10 MHz (exclusive of cable)

Maximum Operating

Distance: 750 ft (229 m) on RG59

1000 ft (305 m) on RG6 1500 ft (457 m) on RG1 (cables above are 75-ohm coax) Wiretron Receiver/Driver

Fuses: One 1 A, 3 AG type

Two 2/10 A, 3 AG type

Control Method: 15 pulse train (pulse width modulated)

Pulse Amplitude: 35 mA current loop

Cable

Requirements: Twisted pair, unshielded

Operating Distance: 22 AWG - 5 miles (8 km)

20 AWG - 10 miles (16 km)

#### **ENCLOSURE**

Construction: Aluminum

Finish: Gray polyester powder coat

Window: Glass, 0.25-inch (0.64 cm) thick

Window Viewing

Area: 3.8" H x 4.8" W (9.65 x 12.19 cm)

Camera Mounting: Removable camera than can be inverted to accommodate

various heights of cameras and lenses

Maximum

Camera/Lens Size:

EH5723 22" L x 7.5" W x 5.5" H (55.88 x 19.05 x 13.97 cm)
EH5723-1,-2,-3 15.5" L x 6.25" W x 5.5" H (39.37 x 15.88 x 13.97 cm)
EH5729 28" L x 7.5" W x 5.5" H (71.12 x 19.05 x 13.97 cm)
EH5729-1,-2,-3 21.5" L x 6.25 W x 5.5" H (54.61 x 15.88 x 13.97 cm)

Electrical

Connections: One each of the following:

3-connector terminal block for power input

6-pin lens connector

9-connector terminal block for lens wiring

10-connector terminal block for camera/lens wiring

3-pin socket for camera power input

2-pin socket for blower 2-pin socket for defroster 4-pin socket for heaters 4-pin socket for wiper 2-pin socket for wiper control

BNC for video

Accessory


Input Power: Heater (120 VAC models) 90 watts

Heater (230 VAC models) 70 watts
Defroster (all models) 30 watts
Blower (all models) 15 watts
Wiper (all models) 15 watts

(Design and product specifications subject to change without notice.)



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

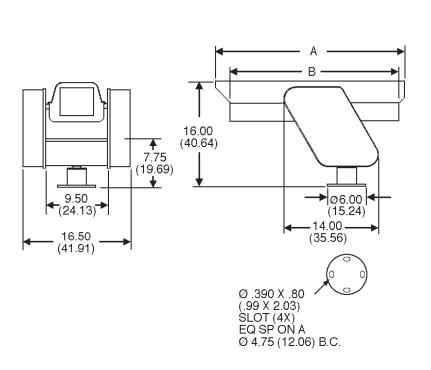

 $\underline{\mathsf{NOTE}} : \mathsf{VALUES} \ \mathsf{IN} \ \mathsf{PARENTHESES} \ \mathsf{ARE} \ \mathsf{CENTIMETERS};$  ALL OTHERS ARE INCHES.

MODEL	"A"	"B"
PT7729RX PT7729RX-1 PT7729RX-1/SL PT7729RX-1/PP PT7729RX-3 PT7729RX-3/PP PT7729WX PT7729WX-1 PT7729WX-3	32.50 (82.55)	29.00 (73.66)
PT7723RX-1 PT7723RX-1/PP PT7723RX-3 PT7723RX-3/PP PT7723WX-1	26.50 (67.31)	23.00 (58.42)

Figure 11. Dimension Drawing

## 9.0 WARRANTY AND RETURN INFORMATION

#### **WARRANTY**

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship for a period of one year after the date of shipment.

Exceptions to this warranty are as noted below:

- Five years on FT/FR8000 Series fiber optic products.
- Three years on Genex® Series products (multiplexers, server, and keyboard).
- Three years on Camclosure® and fixed camera models, except the CC3701H-2, CC3701H-2X, CC3751H-2, CC3651H-2X, MC3651H-2, and MC3651H-2X camera models, which have a five-year warranty.
- · Two years on standard motorized or fixed focal length lenses.
- Two years on Legacy®, CM6700/CM6800/CM9700 Series matrix, and DF5/DF8 Series fixed dome products.
- Two years on Spectra®, Esprit®, ExSite™, and PS20 scanners, including when used in continuous motion applications.
- Two years on Esprit® and WW5700 Series window wiper (excluding wiper blades).
- Eighteen months on DX Series digital video recorders, NVR300 Series network video recorders, and Endura™ Series distributed network-based video products.
- One year (except video heads) on video cassette recorders (VCRs). Video heads will be covered for a period of six months.
- Six months on all pan and tilts, scanners or preset lenses used in continuous motion applications (that is, preset scan, tour and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to Pelco, Clovis, California. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800) 289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

- 1. Model and serial number
- 2. Date of shipment, P.O. number, Sales Order number, or Pelco invoice number
- 3. Details of the defect or problem

If there is a dispute regarding the warranty of a product which does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

#### **RETURNS**

In order to expedite parts returned to the factory for repair or credit, please call the factory at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair).

All merchandise returned for credit may be subject to a 20% restocking and refurbishing charge. Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid. Ship to the appropriate address below.

If you are located within the continental U.S., Alaska, Hawaii or Puerto Rico, send goods to:

Service Department Pelco 3500 Pelco Way Clovis, CA 93612-5699

If you are located outside the continental U.S., Alaska, Hawaii or Puerto Rico and are instructed to return goods to the USA, you may do one of the following:

If the goods are to be sent by a COURIER SERVICE, send the goods to:

Pelco 3500 Pelco Way Clovis, CA 93612-5699 USA

If the goods are to be sent by a FREIGHT FORWARDER, send the goods to:

Pelco c/o Expeditors 473 Eccles Avenue South San Francisco, CA 94080 USA Phone: 650-737-1700 Fax: 650-737-0933

Pelco, the Pelco logo, Camclosure, Esprit, Genex, Legacy, and Spectra are registered trademarks of Pelco.

Endura and ExSite are trademarks of Pelco.

© Copyright 1998, Pelco. All rights reserved.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com