

REFRIGERATOR

ZT 25

INSTRUCTION BOOK

Before installing and using the appliance read this user's instruction book carefully. It contains safety precautions, hints, information and ideas. To ensure you use this appliance effectively and safely, please read this instruction book carefully before installing or using the appliance and retain it for future reference.

The symbols below help you to find things more easily:



Safety precautions

Warnings and information next to this symbol are for your safety and the correct functioning of the appliance.



Hints, useful information



Environmental information

Contents

Important safety instructions	4
Instructions for the User	5
General information	5
Description of the appliance, main parts	5
Using the appliance	6
Before Use	6
To Start the appliance	6
Thermostat Control	6
Hints for storage	6
Storage Shelf	7
The Ice-making Compartment	7
Hints & Tips	7
Food Storage & Frozen Food Storage	7
Energy Saving Advice	7
Maintenance & Cleaning	8
Internal cleaning	8
External cleaning	8
When the refrigerator is not in use	8
Defrosting	8
Something Not Working	9
Service and spare parts	9
Customer Care Department	10
Guarantee conditions	10
Instructions for the Installer	11
Technical data	11
Installing the appliance	11
Transportation, unpacking	11
Cleaning	11
Location	11
Ventillation Requirements	12
Door Reversal	
Electrical connection	13
Storage time chart	
Zanussi Service Force	15

IMPORTANT SAFETY INSTRUCTIONS

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or these warnings contact the Customer Care Department.

Prior to installation

• Check the appliance for transport damage. Under no circumstances should a damaged appliance be installed. In the event of damage please contact your retailer.

Installation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Ensure that the appliance does not stand on the electrical supply cable. If the supply cable is damaged, it must be replaced by a cable available from your local Service Force Centre.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall, but leaving the required distance for ventilation, as stated in the installation instructions.
- The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.

Child Safety

- Do not allow children to tamper with the controls or play with the product.
- There is a risk of suffocation! Keep packaging material away from children!

During Use

- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs. It is not intended for commercial or industrial use.
- Containers with flammable gases or liquids can leak at low temperatures. Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. in the refrigerator.
- Do not place carbonated or fizzy drinks in the icemaking compartment.
- Ice Iollies can cause "frost/freezer burns" if consumed straight from the ice-making compartment.

• Do not remove items from the ice-making compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.

Maintenance and Cleaning

- Before cleaning, always switch off the appliance and disconnect from the electrical supply.
- When unplugging always pull the plug from the mains socket, do not pull on the cable.

Servicing

- This product should be serviced by an authorised engineer and only genuine spare parts should be used.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre.

At the end of the Appliance Life

- When disposing of your appliance use an authorised disposal site.
- Remove the plug and ensure that any locks or catches are removed, to prevent young children being trapped inside.

The Appliance and the Environment

This appliance does not contain gases which could damage the ozone layer.

Avoid damaging the cooling unit.

The packaging used on this appliance marked with the symbol is recyclable.


Keep this instruction book for future reference and ensure it is passed on to any new owner.


INSTRUCTIONS FOR THE USER

General information

This appliance is designed for the refrigeration of food in a domestic home. It also has an ice-making compartment.

Description of the appliance, main parts

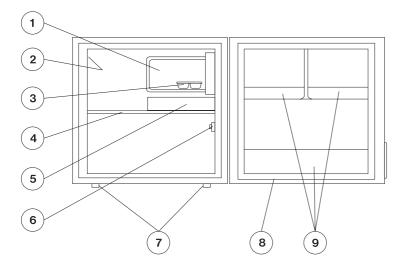

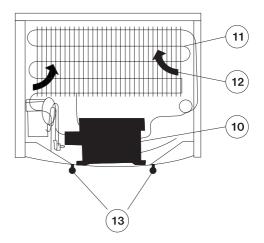

To ensure correct operation, this appliance should be located where the ambient temperature is

- 1. Ice-making compartment
- 2. Rating Plate
- 3. Ice tray
- 4. Wire shelf
- 5. Drip tray
- 6. Thermostat
- 7. Feet

8. Door gasket

between 16-32 °C.

- 9. Door compartment
- 10. Condenser
- 11. Air circulation
- 12. Compressor
- 13. Spacer

Using the Appliance

Before Use

Remove all securing tapes.

Wash the inside of the appliance with lukewarm water with a little bicarbonate of soda added (5 ml to 0,5 litre of water). Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly.

Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or products containing alcohol.

To Start the Appliance

- 1. Allow the appliance to stand for 2 hrs after installation.
- 2. Plug in the appliance and switch on at the mains supply.
- 3. Turn the thermostat control to the required setting. A setting of 4 is usually suitable for normal operation (see thermostat control).
- 4. Leave the appliance for approximately 4 hours for the correct temperature to be reached before placing food inside.

Thermostat Control


The thermostat control situated inside the refrigerator regulates the temperature of the refrigerator and icemaking compartment. Thermostat control is marked from 1-7 the higher the number, the colder the setting.


Position 0 - Off Position 1 - Cold Position 7 - Coldest

Hints for storage

Suggested storage locations for different types of food produce:

- 1. Making ice cubes.
- 2. Ready-cooked foods
- 3. Convenience foods
- 4. Opened cans
- 5. Milk, dairy products
- 6. Fresh meat, cold cuts, sausages, etc.
- 7. Fruits, vegetables, salads
- 8. Cheese, butter
- 9. Eggs
- 10. Yoghurt, sour cream
- 11. Bottles, drinks

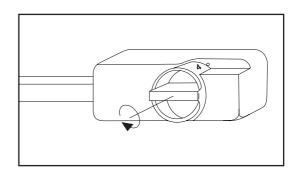

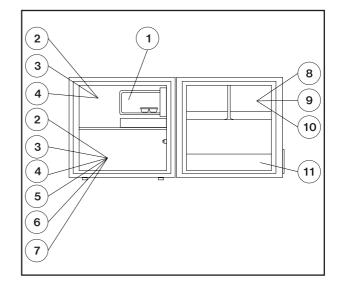

Storage Shelf

(i) The shelf inside the appliance has a backfolding part on the left side that makes storing large-sized bottles possible.

Top door shelves taken out of the appliance can be used for serving foods (fruit, salads, etc.)

The Ice-making Compartment

This compartment is suitable for the storage of commercially frozen food and for making and storing ice cubes.

Hints & Tips

Food Storage

- To obtain the best results from your appliance neither hot foods nor liquids which may evaporate, should be placed in the refrigerator.
- Keep the time between buying chilled food and placing it in your fridge as short as possible.
- Do not push food together too much, try to allow air to circulate around each item.
- Do not store food uncovered.
- Remove suspect food from your refrigerator and clean, refer to Cleaning and Maintenance.

Frozen food storage

Storing ready-frozen foods is quite straightforward. The packs can be placed beside each other or on top of each other.

You are strongly advised to place ready-frozen food in the compartment as quickly as possible after purchase and we therefore recommend that you buy them last. Also ensure that the external packaging is intact. Packaging which is swollen or has traces of refrozen water droplets on the pack could indicate that the product has not been kept at a suitable temperature and that it may have lost its original quality.

Partially thawed food must not be refrozen, it must be consumed within 24 hours.

Never exceed the storage times indicated.

Do not open the ice-making compartment door too often and do not leave open longer than necessary.

A Important

In the event of a power cut the food in the icemaking compartment will not be affected if the power cut is short and if the compartment is full. Do not open the door. Should the food begin to thaw, it must be consumed quickly and must not be refrozen.

Energy Saving Advice

- Do not install the cabinet close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well ventilated room and make sure that the air openings of the cabinet are not obstructed.
- Always leave warm food to cool down to room temperature before placing in the fridge.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.

Maintenance & Cleaning



Before any maintenance or cleaning work is carried out DISCONNECT the appliance from the ELECTRICITY SUPPLY.

Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5 ml to 0.5 litre of water). Rinse and dry thoroughly.

NEVER use detergents, abrasive powders, highly perfumed cleaning products or wax polishes to clean the interior as these will damage the surface and leave a strong odour.

External Cleaning

Wash the outer cabinet with warm soapy water.

When the appliance is not in use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all foods and clean the appliance, leaving the door open to prevent unpleasant smells.

Defrosting

While the appliance is in operation the ice-making compartment becomes progressively covered with frost.

This frost, acts as an insulator and prevents the cold from reaching the food. The frost should be removed whenever the thickness of the frost exceeds 1/4". To carry out complete defrosting proceed as follows.

Pull out the plug from the wall socket or turn the thermostat control knob to the '0' position.

Leave the fridge and ice-making compartment doors open, when defrosting is completed, dry the appliance thoroughly. Remove any defrost water collected in the tray.

Replace the plug in the socket or return the thermostat to the initial position and, after letting the appliance run for at least an hour, place the food in the evaporator compartment.

Something Not Working

If the appliance is not working correctly, please carry out the following checks before contacting your local Zanussi Service Force Centre.

Problem	Possible Cause	Solution
No power to the	No power at the socket.	Check there is power at the socket.
appliance	There is a power cut.	Check there is not a power cut by checking the household lights.
	The fuse has blown.	Check the fuse has not blown.
	Thermostat control is set at "0".	Check the thermostat.
The temperature in the appliance is too high	The appliance is located in an unsuitable position.	Check the ambient temperature is within the appliances operating limits of 16 °C to 32 °C.
	The thermostat control is set too low.	Check that the thermostat is turned to the correct setting relative to ambient conditions.
The temperature in the appliance is too low	The thermostat control is set too high.	Set the thermostat to a lower position.
Excessive frost and ice	The door has been left open.	Check the door has not been left open.
has built up	Something is obstructing the door.	Check nothing is preventing the door from closing.
	The door gasket is dirty.	Check the door gasket is intact and clean.
The appliance is noisy.	The appliance is not level.	Check if the appliance stands stable (all four feet should be on the table top).

If after the above checks your appliance still does not operate correctly, contact your local Zanussi Service Force Centre.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

In-guarantee customers should ensure that the above checks have been made, as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

SERVICE AND SPARE PARTS

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Electrolux Service Force Centre by telephoning:

0870 5 929929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area. The addresses are listed on the following pages.

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working."

When you contact the Service Force Centre you will need to give the following details:

- 1. Your name, address and post code
- 2. Your telephone number
- 3. Clear and concise details of the fault
- 4. The model and serial number of the appliance (found on the rating plate)
- 5. The purchase date

CUSTOMER CARE DEPARTMENT

For general enquiries concerning your Zanussi appliance or for further information on Zanussi products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.zanussi.co.uk

Customer Care Department Zanussi 55-77 High Street Slough Berkshire SLI IDZ 08705 727727 (*)

* calls to this number may be recorded for training purposes.

Guarantee Conditions

STANDARD GUARANTEE CONDITIONS

We Zanussi Limited, undertake that if within 12 months of the date of the purchase this Zanussi appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Zanussi Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between **8.30am** and **5.30pm** Monday to Friday. Visits may be available outside these hours in which case a **premium** will be charged.

EXCLUSIONS

This Guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance wich is improperly installed or calls to appliances outside the United Kingdom.

- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Zanussi manufacture which are not marketed by Zanussi Limited.

EUROPEAN GUARANTEE

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliance.

France	Senlis	+33 (0) 44 62 29 99
Germany	Nurenberg	+49 (0) 911 323 2600
Italy	Pordenone	+39 (0) 1678 47053
Sweden	Stockholm	+46 (0) 8 738 79 50
UK	Slough	+44 (0) 1753 219897

Instructions for the Installer

Technical data

Model	ZT 25
Gross capacity (I)	Ice-making comp.: 5
	Fresh food com.: 65
Net capacity (I)	Ice-making comp.: 5
	Fresh food com.: 62
Width (mm)	525
Height (mm)	520
Depth (mm)	587
Energy consumption (kWh/day)	0.53
(kWh/year)	193
Energy class, according to EU Standards	В
Rated power (W)	70
Weight (kg)	24

Location

The appliance should be positioned in a well ventilated, dry room.

Energy use is affected by the ambient temperature.

The appliance should therefore:

- not be installed next to radiators, cookers or other sources of heat
- only be installed at a location where the ambient temperature corresponds to the climate classification, for which the appliance is designed.

The climate classification can be found on the rating plate.

The following table shows which ambient temperature is correct for each climate classification:

Climate Classification	Ambient Temperature
SN	+10 to +32 °C
N	+16 to +32 °C
ST	+18 to +38 °C

Installing the appliance

Transportation, unpacking

The appliance and the interior fitting are protected for transport.

- Remove all packaging and any adhesive tape.
- Any remnants of adhesive can be removed using white spirit.
- After transportation the appliance must not be switched on for 2 hours. This is to allow the refrigerant to settle.

Cleaning

Clean the accessories and the inside of the appliance with warm water and bicarbonate of soda (5 ml to 0.5 litres of water). Rinse and dry thoroughly.

Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.

Ventilation Requirements

The appliance must have adequate ventilation to ensure correct operation.

Diagram shows the ventilation requirements when installed:

A* Under a worktop, or cupboard.


- * The clearance space of 10 cm above the appliance may be reduced to 5 cm providing a clearance space 2.5 cm is left on either side of the appliance.
- B When freestanding


Door Reversal


If required the opening direction of the door can be changed as follows:


To reverse the door proceed as follows:

- Disconnect the appliance from the electricity supply.
- Remove the top hinge cover.
- Unscrew the 2 retaining screws, and remove the hinge from the appliance.
- Take the door off.
- Unscrew the lower hinge retaining screws, and remove the hinge according to the diagram.
- Fit the lower hinge on the opposite side.
- Fix the door onto the lower hinge pin.
- To fit top door hinge, remove the plastic blanking plugs carefully, and refit them in the holes left by the hinge retaining screws.
- Refit the top hinge using the 2 retaining screws, taking care that the edge of the door is parallel with side of the cabinet.
- Replace the hinge cover.
- Remove screw covers (if fitted) and handle retaining screws. Remove blanking plugs on the opposite side.
- Relocate the handle to the opposite side and refit retaining screws (covers if fitted), and replace the blanking plugs.

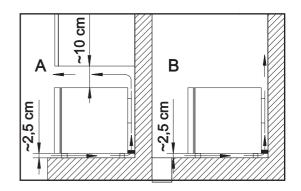

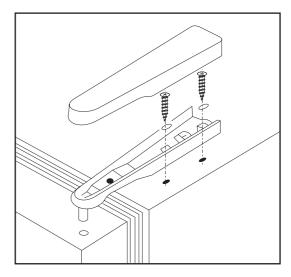

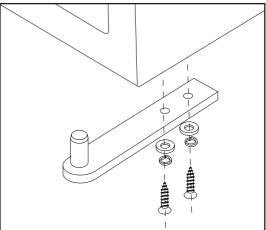

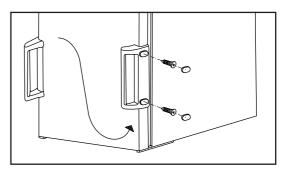

Electrical Connection



Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

This appliance must be earthed.

The manufacturer declines any liability should these safety measures not be observed.

Electrical Requirements

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1362) fuse must be used. Should the plug need to be replaced for any reason. The wires in the mains lead are coloured in accordance with the following code:


Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

The wire coloured green and yellow must be connected to the terminal marked with the letter ",E" or by the earth symbol (=) or coloured green and yellow.

The wire coloured blue must be connected to the terminal marked $_{N}N^{\circ}$ or coloured black.

The wire coloured brown must be connected to the terminal marked "L" or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

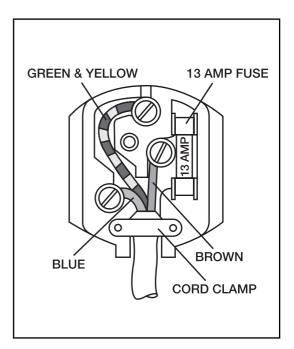

C \in This appliance complies with the following E.E.C. Directives:

- **73/23 EEC** of 19.02.73 (Low Voltage Directive) and subsequent modifications,
- **89/336 EEC** of 03.05.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

Storage time chart

Time and method of storage of fresh foods in the refrigerator

Foods	Storage time in days							Method of packaging	
	1	2	3	4	5	6	7		
Raw meat	X	X	x	Х	X			cling film, airtight	
Cooked meat	X	X	X	х	х	х		dish covered	
Roasted meat	X	X	X	х	X			dish covered	
Raw minced meat	X							dish covered	
Cooked minced meat	X	X	x	x				dish covered	
Cold cuts	X	X	x	x				cling film, cellophane, grease-	
								proof paper	
Fresh fish	X	x	x					cling film, airtight	
Cooked fish	Х	X	x	Х				dish covered	
Tinned fish, open	X	x	x					dish covered	
Fresh chicken	X	X	X	X	X	x		cling film, airtight	
Fried chicken	X	X	X	X	X	x		dish covered	
Fresh duck, goose	X	X	X	X	X	x		cling film, airtight	
Roasted duck, goose	X	X	X	X	X	x	x	dish covered	
Butter unopened	X	X	X	X	X	X	X	original packaging	
Butter opened	X	X	x	x	X	x	x	original packaging	
Milk	X	X	X	x	X			original packaging	
Cream	X	X	x	x				plastic box	
Sour cream	X	X	X	Х	X	x	Х	plastic box	
Cheese (hard)	X	X	X	X	X	X	X	aluminium foil	
Cheese (soft)	X	X	X	X	X	x	Х	cling film	
Egg	X	X	X	X	X	X	X		
Spinach, sorrel	X	X	x	x				cling film	
Green peas, green beans	X	X	X	X	X	x	x	cling film	
Mushroom	X	X	x	x	X			cling film	
Carrot	X	X	X	X	X	X	X	cling film	
Tomato	X	X	X	X	X	X	Х	cling film	
Cabbage	X	X	X	X	X	x	Х	cling film	
Strawberry, raspberry, etc.	X	X	X	Х	X			cling film	
Tinned fruits opened	X	Х	X	Х	Х			dish covered	
Cakes filled with cream	X	X	Х	Х				dish covered	

Notation:

- **X** recommended storage time
- x maximum recommended storage time



To contact your local Service Force Centre telephone 08705 929 929

CH	ANNEL ISLANDS	ISLE OF LEWIS			NORTH EAST	
GUERNSEY	Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands GY1 3AD	_ KELSO	16 James Street Stornoway Isle of Lewis PA87 2QW 2, 6 & 8 Woodmarket	GATESHEAD	Unit 356a Dukesway Court Dukesway Gateshead NE11 0BH	
JERSEY	Jersey Electricity Company Haut De L'orme Rue De Haut De L'orme Trinity Jersey		Kelso Borders TD5 7AX	GRIMSBY	15 Hainton Avenue Grimsby N. E. Lincs DN32 9AS	
	Channel Islands JE3 5FG SCOTLAND	ORKNEY =	7 King Street Kirkwall Orkney KW15 1JF	HULL	Unit 1 Boulevard Industrial Estate Hull HU3 4AY	
ABERDEEN	54 Claremont Street Aberdeen AB10 6RA	PERTH	Scottish Hydro Electric Central Warehouse	LEEDS	64-66 Cross Gates Road Cross Gates	
AUCHTERMUCH	ITY 33a Burnside Auchtermuchty Fife KY14 7AJ	(OWN SALES)	Inveralmond Perth PH1 3AF		Leeds LS15 7YS	
BLANTYRE	Unit 5 Block 2 Auchenraith Ind. Estate	(OWN SALES)	3-4 Carlton Place Lerwick Shetland ZE1 0PW	NEWTON AYCL	Northfield Way Aycliffe Industrial Park Newton Aycliffe DL5 6EJ	
DUMFRIES	Rosendale Way Blantyre G72 0NJ 93 Irish Street	SHETLAND	Bolts Shetland 26 North Road Lerwick	SHEFFIELD	Pennine House Roman Ridge Road	
	Dumfries DG1 2 PQ	(OWN SALES) WHALSAY	Shetland ZE1 OPE Leask Electrical	_	Sheffield S9 1GB	
DUNOON	7 Hill Street Dunoon Argyll	(OWN SALES)	Harisdale Symbister, Whalsay Shetland ZE2 9AA		NORTH WEST	
	PA23 7AL				1 Kelvin Park Dock Road	
EDINBURGH	Unit 12 Dumbryden Ind. Estate	BELFAST	Owenmore House		Birkenhead CH41 1LT	
	2 Dumbryden Road Edinburgh EH14 2AB	_	Kilwee Business Park Dunmurry Belfast BT17 0HD	CARLISLE	Unit 7 James Street Workshops James Street Carlisle Cumbria CA2 5AH	
GLASGOW	Unit 4 Wellington Road Bishopriggs Glasgow G64 2SA	CARDIFF	WALES Unit 4	ISLE OF MAN	South Quay Ind. Estate Douglas Isle of Man IM1 5AT	
INVERNESS	Unit 3BI Smithton Ind. Estate Smithton Inverness IV2 7WL		Guardian Industrial Estate Clydesmuir Road Cardiff CF2 2QS	BOLTON	Unit B Central Industrial Estate St Marks Street	
ISLE OF ARRAN	Arran Domestics The Douglas Centre Brodick	CLYWD	Unit 6-7 Coed Parc Abergele Road Rhuddlan Clwyd	PRESTON	Bolton BL3 6NR Unit 250	
ISLE OF BARRA	Isle of Arran KA27 8AJ J Zerfah 244 Bruernish	DYFED	LL18 5UG Unit 9 St. Clears Business Park	_	Dawson Place Bamber Bridge Preston Lancashire PR5 8AL	
ISLES OF BUTE	Isle of Barra Western Islands HS9 5QY Walker Engineering Glenmhor Upper Serpentine Road	_	St. Clears Business Park Tenby Road St. Clears Carmarthen SA33 4JW	STOCKPORT	Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR	
	Rothesay Isle of Bute PA20 9EH	OSWESTRY	Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP			

SERVICE FORCE

To contact your local Service Centre telephone 08705 929 929

	MIDLANDS	LOND	ON & EAST ANGLIA	SUNBURY	Unit 1a
BIRMINGHAM	66 Birch Road East Wyrley Trading Estate Witton Birmingham	BECKENHAM	11a Gardner Ind. Estate Kent House Lane Beckenham Kent BR3 1QZ		The Summit Hanworth Road Sunbury on Thames TW16 5DB
BOURNE	B6 7DB Pinfold Road	CHELMSFORD	Hanbury Road Widford Ind. Estate		SOUTH EAST
BOURNE	Pinioid Road Bourne PE10 9HT	_	Chelmsford Essex CM12 3AE	ASHFORD	Unit 2 Bridge Road Business Centre Bridge Road
BRIDGNORTH	68 St. Mary's Street Bridgnorth Shropshire	COLINDALE	Unit 14 Capitol Park Capitol Way	- FLEET	Ashford Kent TN23 1BB Unit 1
GLOUCESTER	WV16 4DR 101 Rycroft Street Gloucester	ELTHAM	Colindale London NW9 0EQ 194 Court Road	_	Redfields Ind. Estate Church Crookham Fleet
HEREFORD	GL1 4NB Units 3 & 4 Bank Buildings	_	Mottingham Eltham London SE9 4EW	HAYWARDS HEATH	Hampshire GU13 0RD 21-25 Bridge Road Haywards Heath
	Cattle market Hereford HE4 9HX	ENFIELD	284 Alma Road Enfield London	TONBRIDGE	Sussex RH16 1UA Unit 30 Deacon Trading Estate
HIGHAM FERRE	ERS 30 High Street Higham Ferrers Northants	GRAVESEND	EN3 7BB Unit B4 Imperial Business Estate	_	Morley Road Tonbridge TN9 1RA
	NN10 8PL	_	West Mill Gravesend		SOUTH WEST
ILKESTON	Unit 2 Furnace Road Ilkeston DE7 5EP		Kent DA11 0DL	BARNSTAPLE	Main Road Fremington
LEICESTER	Unit 7 Oaks Industrial Estate		Unit 6C Elton Park Business Centre Hadleigh Road	BOUBNEMOUT	Barnstaple North Devon EX31 2NT H63-65 Curzon Road
		LETCHWORTH	Ipswich IP2 0DD 16-17 Woodside Ind. Park	_	Bournemouth Dorset BH1 4PW
LINCOLN	LE9 5GF Unit 8 Clifton Street Stone Field Park		Works Road Letchworth Herts SG6 1LA	BRIDGEWATER	6 Herswell Business Park Salmon Parade Bridgwater Somerset TA6 5PY
NEWCASTLE UNDER LYME	Lincoln LN5 8LQ 18-21 Croft Road Brampton Ind. Estate	LONDON	2 - 4 Royal Lane Yiewsley West Drayton Middlesex UB7 8DL	BRISTOL	11 Eldon Way Eldonwall Trading Estate Bristol
	Newcastle under Lyme Staffordshire ST5 0TW	MAIDENHEAD	Reform Road Maidenhead Berkshire SL6 8BY	EMSWORTH	BS4 3QQ 266 Main Road Southbourne Emsworth PO10 8JL
REDDITCH	13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND	MOLESEY	10 Island Farm Avenue West Molesey Surrey KT8 2UZ	ISLE OF WIGHT	
TAMWORTH	Unit 3 Sterling Park Claymore Tamworth B77 5DQ	- NEWBURY	9 Pipers Court Berkshire Drive Thatcham Berkshire RG19 4ER	NEWTON ABBO	Isle of Wight PO33 1DB TUnit 2 Zealley Ind. Estate Kingsteignton Newton Abbot
WORCESTER	Units 1 & 2	NORWICH	2b Trafalgar Street Norwich NR1 3HN	REDRUTH	TQ12 3TD Unit 7D
	Northbrooks Close Gregorys Mill Ind. Estate Worcester WR3 8BP			-	Pool Ind. Estate Druids Road Redruth Cornwall TR15 3RH

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. 14 billion USD in more than 150 countries around the world.

From the Electrolux Group. The world's No.1 choice.

© Electrolux Household Appliances Limited 2000

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com