



FS-100

DVCPROHD DVCPRO50 DVCPRO/DV

Portable DTE Recorder



User Guide

Part Number: MANL-1023-10

LEGAL NOTICES

THIS DOCUMENT CONTAINS CONFIDENTIAL AND TRADE SECRET INFORMATION OF FOCUS ENHANCEMENTS AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE OR DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE, OR SELL ANYTHING THAT IT MAY DESCRIBE. USE IN WHOLE OR IN PART WITHOUT THE SPECIFIC WRITTEN AUTHORIZATION OF FOCUS ENHANCEMENTS IS STRICTLY FORBIDDEN.

EVERY EFFORT HAS BEEN MADE TO ENSURE THAT THE INFORMATION IN THIS DOCUMENT IS COMPLETE AND ACCURATE AT THE TIME OF PRINTING; HOWEVER, THE INFORMATION CONTAINED IN THIS DOCUMENT IS SUBJECT TO CHANGE.

Copyright 2007 Focus Enhancements
All Rights Reserved

The material contained in this document is also protected by copyright laws of the United States of America and other countries. It may not be reproduced or distributed in any form by any means, altered in any fashion, or stored in a data base or retrieval system, without express written permission of FOCUS ENHANCEMENTS.

FOCUS ENHANCEMENTS cannot be responsible for unauthorized use of equipment and will not make allowance or credit for unauthorized use or access.

Contacting FOCUS ENHANCEMENTS:

USA

Office Hours: Monday through Friday
8:00 AM to 5:00PM (Central Time)

Email: support@focusinfo.com

Telephone: +1 763-398-1658

Fax: +1 763-571-7688

Address: Focus Enhancements, Inc.
1370 Dell Avenue
Campbell, CA. 95008
www.focusinfo.com

EMEA (Europe, Middle East, Africa)

Office Hours: Monday through Friday
9:00 AM to 5:00PM

Email: techsupport@como.com

Telephone: +49 4307 - 83 58 58

Fax: +49 4307 - 83 58 99

Address: COMO Computer & Motion GmbH
A Focus Enhancements Company
Lise-Meitner-Str. 15
24223 Ralsdorf / Germany
www.focusinfo.com

Serial Number

The serial number for this equipment is located on the back of the unit. Please write this serial number on the enclosed warranty card and keep it in a secure area.

Regulations and Safety



Focus Enhancements, Inc.
1370 Dell Avenue
Campbell, CA. 95008

Model Number: FS-100 Portable DTE Recorder

Date of Manufacture:
Reference the Serial Number label attached to
the unit.

FCC Class A

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors.

This equipment has been tested and found to comply within the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, correct the interference by one or more of the following:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that used by the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance

FS-100 is a device marketed for use in industrial or business environments. The FS-100 complies with the regulations the following testing agencies:

Australia and New Zealand



European Union



Safety

Symbols

In the FS-100 Unit



This symbol indicates the presence of an un-insulated Dangerous Voltage within the product's enclosure that may constitute a risk of electric shock to persons.

In the FS-100 Documentation



This symbol indicates important operating or maintenance (servicing) information that the user should read and understand.



Note

This symbol indicates supplementary information about features, functions, or operations that may be of interest to the user.

Documentation

Read, Retain, and Follow Instructions

All the safety and operating instructions should be read before the product is operated.

- **Retain Documentation**
Place documentation in a secure place for future reference on operating and safety instructions.
- **Follow All Operating and Safety Instructions**
- **Pay Attention to All Warnings**
Warnings are provided to protect the operator, the equipment, and content.

Electrical Precautions

Do Not Expose to Moisture

Do not use this product near water or in an environment where it is exposed to dampness or there is the possibility of it getting wet.

Do Not Remove Cover

There are No User Serviceable Parts inside this unit. Servicing should be done by qualified service personnel.

ON / OFF Switch in Stand-By Position

The On/Off switch Does Not Separate the Unit From the Main Power when it is in the stand-by position.

Power Sources

Use only power sources that match those indicated on the marking label. If unsure sure of the type of power supply that is available, consult your dealer or local power company.

Do Not Overload Power Outlets

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

Verify Power Plugs are Fully Inserted

To prevent potential electrical shock to personnel, verify that the FS-100 power cord plug is fully inserted in to a grounded receptor and that the plug blades are not exposed.

ATTENTION

POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

Power-Cord Protection

- **Routing Power-Cords**

Route power supply cords so that they are not likely to be walked on or pinched by items placed upon or against them. Avoid sharp angles in the cord, particularly at plugs, convenience receptacles, and the point where they exit the product.

- **Non-Use Period**

During extended periods when the device is not used, unplug it from the power source and retract the power-cord.

Grounding or Polarization

- **Polarized**

If this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other), it will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

- **Grounded**

If this product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin, it will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

Outdoor Antenna Grounding

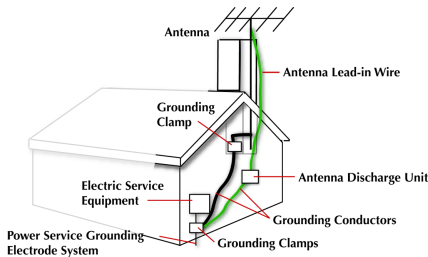


Figure A

National Electric Code

If an outside antenna or cable system is connected to the FS-100, verify that the antenna or cable system is grounded. This provides some protection against voltage surges and built-up static charges.

Refer to Article 810 of the National Electric Code, ANSI/NFPA 70, for information about the proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Ground Loop WARNING:

To avoid earth or ground *loops*, insure that all equipment connected to the FS-100 share a common ground. Use a single, grounded outlet strip as opposed to separate outlets with the possibility of different ground potentials.

Lightning and Power Surges

During electrical storms or when left unattended and unused for long periods of time, unplug the FS-100 from the power source and disconnect the antenna or cable system.

Power Lines

Do not locate an outside antenna system in the vicinity of overhead power lines, electric light or power circuits, or where it can fall onto such lines or circuits.

When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

Optical Precaution

The use of optical instruments with this device will increase hazards to the eyes hazard.

Maintenance and Moving

Cleaning

Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzine, insecticides or other volatile liquids since they may corrode the cabinet.

Servicing

Unplug the device from the power outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally when following the operating instructions. Adjust only those controls that are covered by the operating instructions. The incorrect adjustment of other controls can result in damage and often requires extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance.

Accessories and Replacement Parts

Use only attachments and accessories recommended by Focus Enhancements.

Use only replacement parts specified by the Focus Enhancements or of comparable quality and characteristics as the original parts.

Unauthorized substitution of parts can result in fire, electrical shock, other hazards, and loss of warranty.

Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Operating Environment

Location

Any mounting of this device should follow its instructions, and should use only mounting accessories recommended by Focus Enhancements.

- Install this device on a sturdy, level surface, away from moisture and dust.
- **Heat**
Locate this device away from heat sources such as radiators, heat registers, stoves or other electrical devices (including amplifiers) that generate heat.

Ventilation

Do not block the ventilation openings in the FS-100 body. Overheating can occur and damage the device. Do not place this device in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided.

Table of Contents

Introduction	1
DTE Eliminates Pre-edit Processing	1
Unpacking	2
Features	3
Quickstart	5
Physical Description and Basic Controls	6
Front Panel Controls	6
LCD Display	6
Function buttons (A, B, C)	6
Power Control	7
Power OFF	7
Navigation Buttons	7
Transport Control Buttons	7
Record	8
Back Search	8
Play	8
Forward Search	8
Back Index	9
Pause, STOP and Power OFF	9
Forward Index	9
Top Panel	10
Charge LED Status	10
Status LED States	10
Computer FireWire Connector	11
Remote Control, Serial Connector	11
Camera FireWire Connector	12

Rear Panel	13
Side Panel	14
Bottom Panel	15
Internal Speaker	15
The FS-100 Menu System	16
Outline of Menu and Option Screens	17
Powering the FS-100	21
Connecting the FS-100 to AC Power	21
Installing / Removing the Battery Pack	22
Installing a Battery	22
Removing a Battery	22
Charging the Battery	23
Connecting a FS-100 to a DV/HD Camcorder	25
Record and Playback with the FS-100	26
Power On the FS-100	27
Select HDD Recorder Mode	28
Select a DV File Format	29
Set Time and Date	30
Record With the FS-100	32
Manual Recording	34
Creating a New File without Dropping Frames	
34	
Syncro Slave	35
Tapeless	36
Configuring AG-HVX200 and Recording ...	37
Variable Frame Rate (..... VFR) Settings	38
AG-HVX200 Camera Settings	38
FS-100 Settings	39
Preparing P2 File for NLE	39
Recording Timecode in the File	39
Playback on the FS-100	40
FS-100 Functions	41
General Screen Information	42
Welcome Screen	42
Home Screen	43
DISP (display) Information Fields	44

FS-100 System Information Screens	46
Record Screens	47
Normal Record	48
PRE-REC Record Mode	48
PRE-REC Disk Record Mode	49
Loop Record	50
Saving Loop Record Clips	50
Snap Record	50
Time Lapse Record	51
Format Screen	52
DV Formats	52
HDD Mode Screen	54
Setting Up Master and Slave FS-100	56
Setup Screens	57
Date	59
Time	59
Version	60
LCD Light On, Off, Auto	60
Alarm On, Off	60
Stop Frame, No Video	61
EXT CTL OFF, Pause, Frame, File	61
TIME CODE EXT, REC RUN, FREE RUN, REGEN 62	
TC SET	63
UB SET	64
TC DROP, NON-DROP NTSC only	65
VFR MODE	66
NTSC Menu	66
PAL Menu	66
Set AG-HVX200 to Standard Record Mode	67
Undercranking and Overcranking	68
Using VFR recordings in NLEs	69
LCD CONTRAST	70
Functions Screen	71
Functions List	72
Assigning Clips to Reels	74
Blank	74
Utilities Screen	75
Organize Reel	75

Organize OMF DVCPRO/DV only	76
Organize P2	76
File Naming Conventions	77
Organize PINN DVCPRO/DV only	77
Make Ref MOV Version 4.x only	78
File Name Convention	79
Delete Clip	80
Format Disk	81
Repair Disk	82
Repair Clip	83
Run Repair Clip after Organize P2	83
File Name	85
Upgrade	86
Upgrade Errors	87
System Reset	88
Diagnostic	89
Status	89
Reels Screen	90
Placing a Clip in a Reel	90
Using a Wired Remote Control	91
Play Screen	92
Play From Screen	93
Control Screen	94
LCD Display Symbols and Text	97
Using the FS-100 with a Computer	99
Initial Setup	100
Mounting the FS-100 in Windows	101
FS-100 and FAT 32	104
Using Avid OMF Clips	105
Dismounting the FS-100 (Windows)	108
Mounting the FS-100 (Macintosh)	109
Dismounting the FS-100 (Macintosh)	110
Mounting Hardware	111
Mounting FS-100 to a Camcorder	111

Clipping to a Belt	112
Technical Specifications	113
Physical Description	113
Input/Outputs	113
Power	114
Audio/Video/Timecode Specification	114
DTE File Formats	115
Disk Information	115
Log Files	116
Error Messages	116
Miscellaneous Files	117
fwxdc.dat	117
Warranty	117
Shock and Vibration	117
Temperature	117
Compatible Camcorders and Accessories	117
Index	i-1

Introduction

Thank you for purchasing a Focus Enhancements' FS-100 portable Direct To Edit (DTE) disk recorder. The FS-100 is the first portable DVCPROHD/DVCPRO50/DVCPRO/DV disk recorder with Focus Enhancement's DTE technology designed for hand held camcorders in a small, rugged and shock proof chassis.

If you edit with applications from Adobe, Apple, Avid, Canopus, Matrox, Pinnacle, Sony, Ulead, and many others, Focus Enhancement's DTE Technology is the only solution that can save hundreds of hours a year by recording clips to disk in your non-linear editor's (NLE) native file format.

DTE Eliminates Pre-edit Processing

The FS-100 DTE disk recorder eliminates the need to capture, transfer or convert video clips before editing. The FS-100 is a stand-alone device that records DVCPROHD, DVCPRO50, and DVCPRO/DV video to its disk drive as a NLE native file. For most DV and many P2 compatible NLE systems, when the disk drive is connected to a computer the clips are immediately available for editing.

Shoot, connect, and edit: it is now that easy.

In addition, the FS-100 can record digital video streams up to and including 100Mb/s.

These capabilities make the FS-100 the perfect companion for the Panasonic HVX200 P2 DVCPROHD camcorder. In addition, the FS-100 is suitable for use with other Panasonic DVCPROHD, DVCPRO50, and DVCPRO camcorders with an IEEE-1394 interface.

Unpacking



Verify that the FS-100 has the following items:

1. FS-100 unit
2. Belt clip
3. User guide
4. One Firewire cable
5. Power cord
6. Power supply with cable and connector to the FS-100
7. Removable Li-Ion battery pack

Note

Missing or Damaged Components

If there are missing or damaged items, contact Focus Enhancements Support for assistance.

USA Email: support@focusinfo.com

USA Telephone: +1 763-398-1658

EMEA Email: techsupport@como.com

EMEA Telephone: +49 4307 - 83 58 58

Features

The FS-100 offers the following features:

- **Tapeless Acquisition**

Especially equipped camcorders permit the use of Direct To Edit (DTE) Technology to record directly from a camcorder while shooting and without the need of a tape.

- **True DTE Technology**

When shooting is finished, connect the FS-100 to a computer and instantly be ready to edit in the timeline. Files are recorded to disk as

DVCPROHD and DVCPRO50 P2 P2 PN (DVCPROHD with 4.x) QUICKTIME (4.x) QUICKTIME PN (DVCPROHD with 4.x) RAW DV	DVCPRO/DV RAW DV (.dv) AVI TYPE 1 (.avi) AVI Type 2 (.avi) Canopus AVI (.avi) Matrox AVI (.avi, .wav) QuickTime (.mov) AVID OMF Pinnacle (.avi, .wav) P2	DVCPRO/DV (NTSC Only) AVI Type 2 24p (.avi) QuickTime 24p (.mov)
--	--	--

- **Fast and Efficient Editing**

When shooting is finished, mount the FS-100 to a Mac or PC editing system like a typical FireWire hard disk drive. Transfer clips to your NLE's media drive at up to 400 Mbps or edit instantly in real-time using the FS-100 as your media source. With some DV and P2 compatible NLE systems, it is necessary to capture the video footage using the NLE system's capture capability.

- **Confidence in Recording**

Now, simultaneously record to disk and tape while you shoot, providing an immediately available, drop out free, edit source with an archive and backup on tape.

- **Compact, Lightweight, Rugged Design**

The FS-100 weighs approximately one pound including the battery and is only 1.5" thick. You can mount the FS-100 directly to your camcorder using the optional camera mount kit, or clip the FS-100 directly to your belt. The FS-100 is designed to withstand the rigors of field shooting. The programmable, seconds of electronic shock cache ensures that your video is always recorded even in the roughest of conditions.

- **Flexible Capacities and Power**

The FS-100 hard drive provides hours of recorded content capacity. See www.focusinfo.com for the currently available hard drive capacities.

Extend record times by linking two FS-100 units together.

Power the FS-100 using slim, removable battery packs or power it using the supplied AC adapter.

- **Easy to Use, Control and Update**

The FS-100 interfaces with your camcorder using a single FireWire cable that passes audio, video, timecode and control information. When a tape is present, each press of start and stop on your camcorder's record button creates an individual clip on disk. The FS-100 features a comprehensive backlit display, menu system and buttons allowing easy control and management. In addition, these units are upgradeable in the field.

- **Never Miss A Shot**

FS-100's PRE-record mode means you are always recording.

When action happens, you now can have up to six seconds prior to the event occurring saved in your clip.

- **PRE-REC Disk and Loop Record Modes**

- **Scene Marking**

This allows categorizing video clips into pre-named folders on the disk during a shoot.

- **User Definable Tme Lapse**

- **Loop Playback Modes**

- **Free Run, Rec Run, and Regen Timecode Modes**


Quickstart

This section provides the following information necessary for using the FS-100 as quickly as possible.

Physical Description and Basic Controls	6
The FS-100 Menu System	16
Connecting the FS-100 to AC Power	21
Installing / Removing the Battery Pack	22
Connecting a FS-100 to a DV/HD Camcorder	25
Record and Playback with the FS-100	26
Power On the FS-100	27
Select HDD Recorder Mode	28
Select a DV File Format	29
Set Time and Date	30
Record With the FS-100	32
Manual Recording	34
Syncro Slave	35
Tapeless	36
Playback on the FS-100	40

Physical Description and Basic Controls

Front Panel Controls

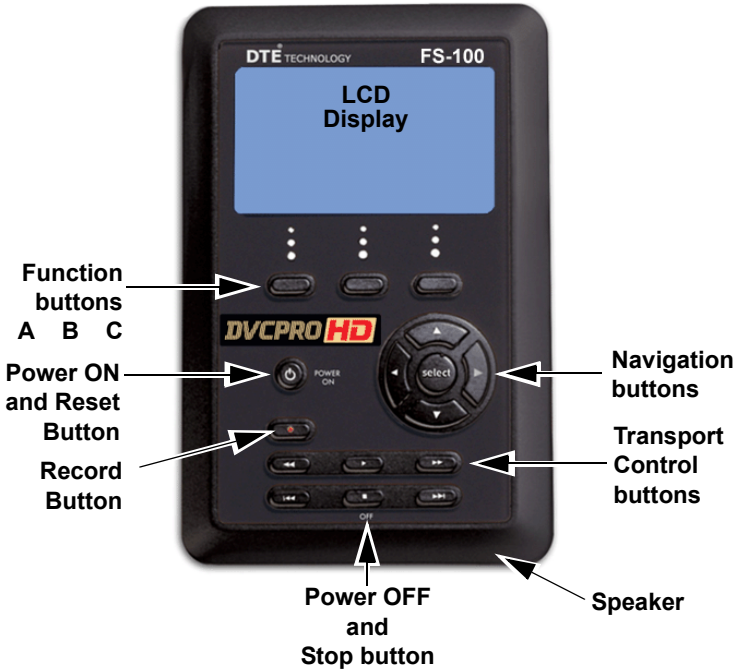

LCD Display

This is a backlit, 14 character by 7 line dot matrix display.

iNote

Recovering LCD Display After A Mild Shock to FS-100

In the event of a mild electrical discharge to the unit, the LCD could go blank. To correct, hold the **SELECT** button down for 5 seconds.

Function buttons (A, B, C)

Below the FS-100 LCD display are three user-defined function buttons: A (left), B (center), and C (right). Use them as short-cut keys for the most frequently selected functions at the bottom of the LCD screen. The function of these soft buttons changes, depending on the options displayed above that specific button. Refer to the **Functions Screen** on page 71 for more information.

Power Control

The Power ON button provides two functions.

- **Power ON**
Turn on the FS-100.
- **Reset FS-100**
First, FS-100 must be powered on.
Next, hold down the **Power On** button for two seconds.

Power OFF

Hold down the **OFF/STOP** button ■ for three (3) seconds. During power off, the FS-100 beeps, indicating that it is turning off.

iNote

Alarm OFF

If the Alarm feature is set to OFF, then the power-down sequence occurs silently.

Navigation Buttons

Use these buttons to navigate through the FS-100 menus. The navigation buttons are **Left, Right, Up, Down, and Select**.

Transport Control Buttons



Use these buttons to control FS-100 playback and record functions while on the HOME Screen.

Record ●

Press this button once when the FS-100 is in **Stop** mode to put the FS-100 into **REC-PAUSE**. Press it again to start recording. Pressing the Record button while recording, causes the current clip to close and a new clip is created without dropping any frames. This button is the only button that has a red legend on the front panel.

Back Search ◀◀

Press this button to play video at speeds different than real-time. Refer to the note in the Forward Search section.

Play ▶

Press this button to start playback of the selected clip.

Forward Search ▶▶

Press this button to play video at speeds different than real-time.

Note

Fast Forward and Reverse

Pressing the **Forward Search** button multiple times results in increases in the search speed, i.e. fast forward. This mode works both in forward and reverse functions. For instance, if you are in 10X FF speed and you press the **Back Search** button once, the FS-100 is now in 2X FF mode. In addition, this applies to backward search speeds. The default speed resolution is as follows (NTSC and PAL, have slightly different multiples for < 1X):

- Reverse: -30X, -10X, -2X, -1X (reverse play), -1/2X(-15fps), Still.
- Forward: Still, +1/2X (+15fps), +1X (play), +2X, +10X, +30X

Fast Forward and Reverse Search Compatible Camcorders

In Forward and Reverse Search modes, some camcorders do not display video when played-back from an external device, such as the FS-100.

Back Index |◀◀

This button returns the FS-100 to the beginning of the current clip when in playback mode. Press this button twice in sequence to return the FS-100 to the previous clip during playback. In **STOP** mode, press this button to return the FS-100 to the beginning of the previous clip.

Note

Using Back Index with Short Clips

When using Back Index with short clips, it is first necessary to place the FS-100 in **STOP** mode.

Pause, STOP ■ and Power OFF

While in the Home screen, and in any transport mode, press this button to Pause the FS-100. Press it again to stop the FS-100. Refer to the section, **Setup Screens** on page 57 for more information.

To power off the FS-100, hold down the **STOP** button ■ for three seconds. During Power OFF and if the Alarm function is **ON**, the FS-100, makes an audible beep indicating it is turning off.

Forward Index ▶▶|

Use this button to skip forward to the next clip in **STOP** and **PLAY** modes.


Note

Using the Forward and Back Index Keys

Use the Back and Forward Index keys to jump to the **previous** or **next** partition. For example, when the current clip is the last on a partition, pressing the Forward Index moves to next partition.

Top Panel

The top panel contains the following connectors and LEDs:

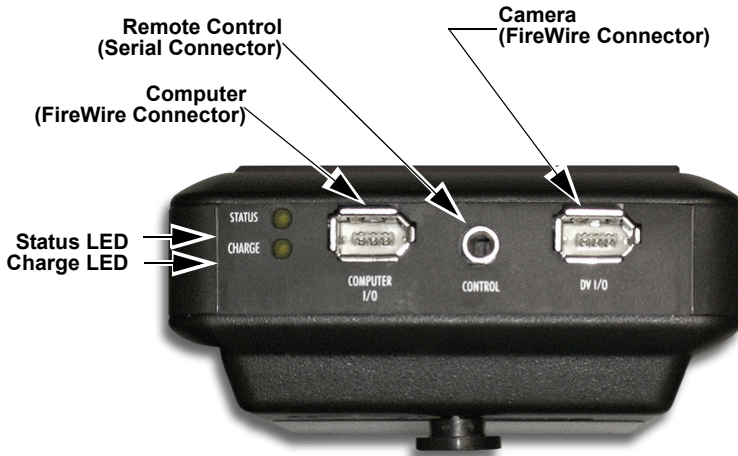

Charge LED Status

LED	Indicates
Off	No Charger Connected
Green	Charging Cycle Completed
Amber / Green	Floating Charge Mode (Charging almost completed.)
Amber	Fast Charge Mode (Maximum charging rate.)
Red	Charging Error
Red / Amber	No Battery Installed / Battery Error
Amber, flashing	Insufficient Voltage to Charger

Status LED States

LED	Indicates
Off	Power OFF
Green	Power ON (Power On but there is no activity.)
Orange, solid	Playback
Orange, fluttering	Hard drive being accessed during playback.
Red, solid	Recording Mode
Red, blinking	Recording Pause


Computer FireWire Connector



IMPROPER INSERTION WILL DAMAGE UNIT

Properly Align FireWire Cable and Connector - Do Not Force

Correctly align the FireWire cable to the connector before insertion. The pointed end of the connector and the jack should be on the same side before insertion:

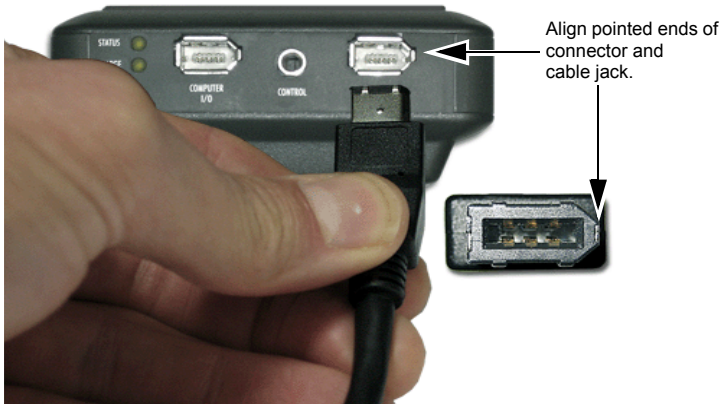

- In/Out: 6-pin IEEE-1394a port x 1
- Asynchronous Data I/O

Remote Control, Serial Connector

- GPI / RS232C; 3.5mm TRS mini jack. (3.5mm to DB-9 cable accessory available).
- Configure as a simple contact closure or RS-232C port.
- Connect an optional wired remote commander.

Camera FireWire Connector

- DV/I/O
- 6-pin IEEE-1394a connector
See the note **Computer FireWire Connector** on page 11.
- Isochronous 25Mb/s to 100Mb/s DV video I/O
FS-100 supports 1080i/720p video I/O in DVCPROHD REC mode.
- Supported inputs for DVCPROHD / DVCPRO50 / DVCPRO / DV:

NTSC

- 1080 60i (30P, 24P, 24PA)
- 720 60P (30P, 24P) **
- 480 60i (30P, 24P, 24PA)

PAL

- 1080 50i (25P)
- 720 50P (25P) **
- 576 50i (25P)

() indicates pull down format - (same stream)

** The 720 24PN, 25PN, and 30PN recordings are supported in version 3.X or 4.x. These are generated from the 720 24P/25P/30P as an input. The PN modes are not supported as input streams.

- For DVCPROHD input, audio is embedded 4-ch, 48kHz, 16-bit.
- For DVCPRO50 input, audio is embedded 4-ch., 48kHz, 16-bit.
- For DVCPRO input, audio is embedded 2-ch., 48kHz, 16-bit,
- For DV input, audio is embedded 2-ch., 48kHz, 16-bit or 4-ch., 32-khz, 12-bit.


Note

4-Channel Audio

4-channel (12-bit, 32kHz) audio is available only with RawDV format.


Rear Panel

The rear panel contains the following important items:

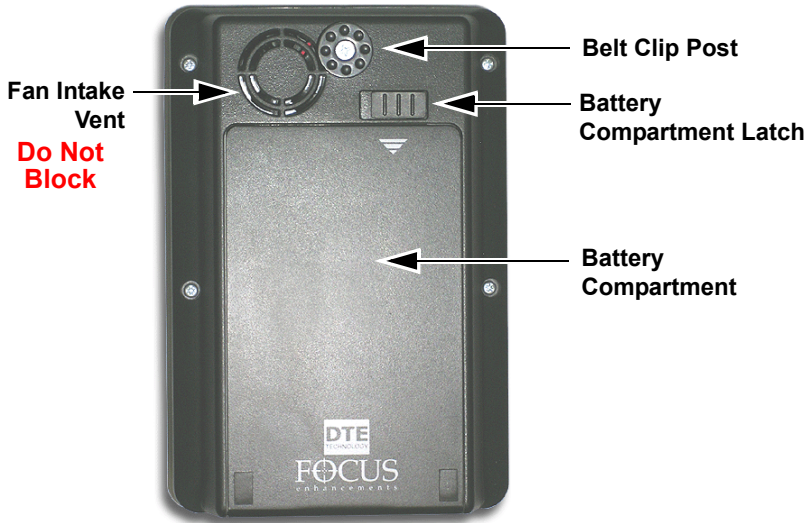


Side Panel

The side panel contains cooling vents as illustrated below.

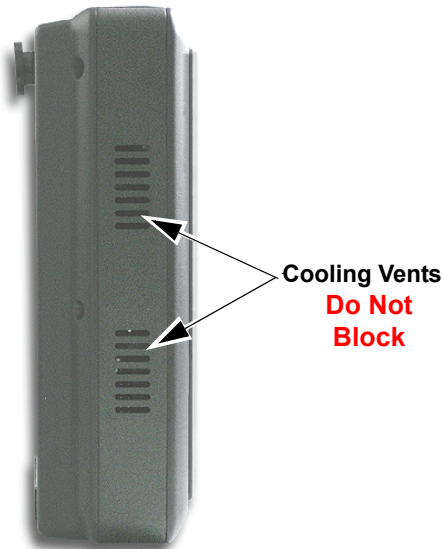

Bottom Panel

The FS-100 bottom panel features a single 2-pin DC power connector. Connect the supplied AC power adapter here.

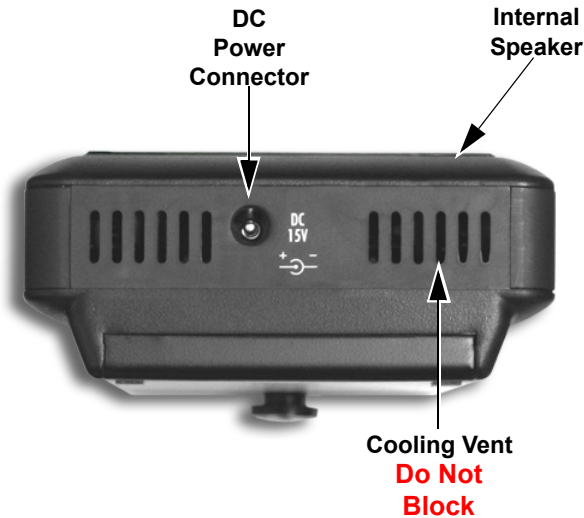


Internal Speaker

An internal speaker provides alarms and audible feedback.

- To disable the audible feedback, go to the Settings menu and select **ALARM OFF**. However, the power, temperature, and disk capacity alarms are always active.

The FS-100 Menu System

The FS-100 menu system provides access to all the functions available in the unit. Each of the screens below (except the Welcome and Home screens which come up automatically when the unit starts) are accessed by pressing the **Left** or **Right** navigation buttons.

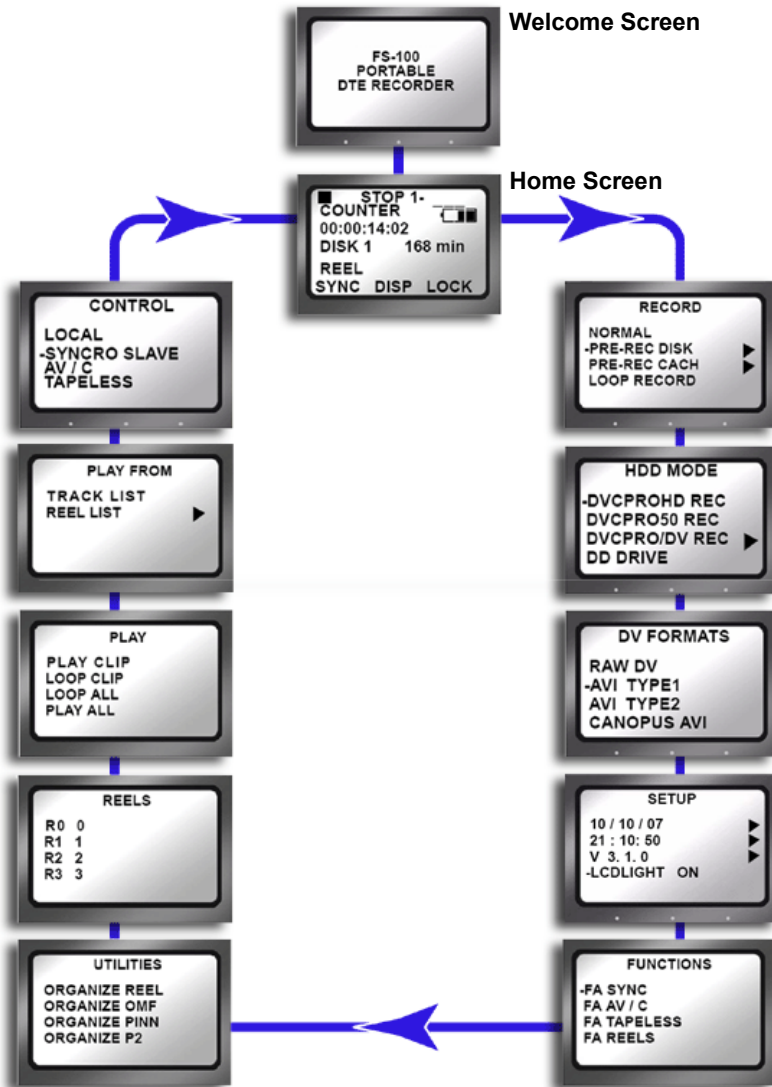

Outline of Menu and Option Screens

The functions of each of the selections on these screens is explained in more detail in **FS-100 Functions** on page 41.

Note

Returning to the Top of Menu or Home screen

To get to the top of any menu, press the **Left** button. To get back to the Home screen:

- Highlight the screen title at the top of the screen.
- Press the **Select** button.

- **Welcome**

Only appears for several seconds upon power up.

- **Home**

Gateway screen for all functions, it displays disk and operational status.

- **Control**

Contains the following selections:

Local

Syncro Slave

AV/C

Tapeless

- **Play From**

Provides lists to select play material from:

Track List

Reel List

- **Play**

Contains the following Play selections:

Play Clip

Loop Clip

Loop All

Play All

- **Reels Screen**

Allows selected clips to be marked for placement in particular Reels Folders.

- **Utilities**

Contains the following disk and clip functions:

Organize Reel

Organize OMF DVCPRO/DV only

Organize P2

Organize PINN DVCPRO/DV only

Make Ref MOV version 4.X only

Delete Clip

Format

Repair Disk

Repair Clip

File Name

Upgrade

System Reset

Diagnostic

Status

- **Functions**

Contains user definable function button selections. Changing a setting with a Function button is identical to changing the setting in its corresponding menu. Refer to **Functions Screen** on page 71 for more information.

- **Setup**

Contains the controls for setting and reviewing the FS-100 configuration:

Set Date (MM/DD/YY)

Set Time (XX:XX:XX)

View Firmware Version

LCDLight ON

LCDLight OFF

LCDLight AUTO

Alarm ON

Alarm OFF

Stop Frame

Stop No Video

EXT CTL OFF

EXT CTL PAUSE

EXT CTL FRAME
EXT CTL FILE
TC EXT (external)
TC REC RUN
TC FREE RUN
TC REGEN (regenerate)
TC SET
UB SET
TC DROP NTSC only
TC NON-DROP NTSC only
VFR MODE 4.X only
LCD Contrast

- **DV Formats**

Following HDD mode is a menu of formats available for the type recorder selected in HDD mode.

When selecting **DVCPRO/DV REC** the following formats are shown:

RAW DV
AVI TYPE 1
AVI TYPE 2
CANOPUS AVI
MATROX AVI
QUICKTIME
AVID OMF
QUICKTIME 24P NTSC only
AVI TYPE 2 24P NTSC only
PINNACLE
P2

- **HDD Mode**

Contains the following hard drive selections:

DVCPROHD REC
DVCPRO50 REC
DVCPRO/DV REC
DD Drive
USE EXT FS-100

- **Record**

Contains the following recording functions:

NORMAL REC

PRE REC Disk

PRE REC Cach

LOOP RECORD

SNAP

TIME LAPSE


Powering the FS-100

- FS-100 operation without a battery installed.
To operate the FS-100 without a battery installed, connect the unit to an AC power source.
- FS-100 operation with battery power.
It is first necessary to fully charge the battery. An uncharged battery, typically takes 2-3 hours to charge.

Connecting the FS-100 to AC Power

Attach the AC power cord to the FS-100 (with or without battery installed). The FS-100 is immediately ready for operation.


To do this, connect the AC power as follows:

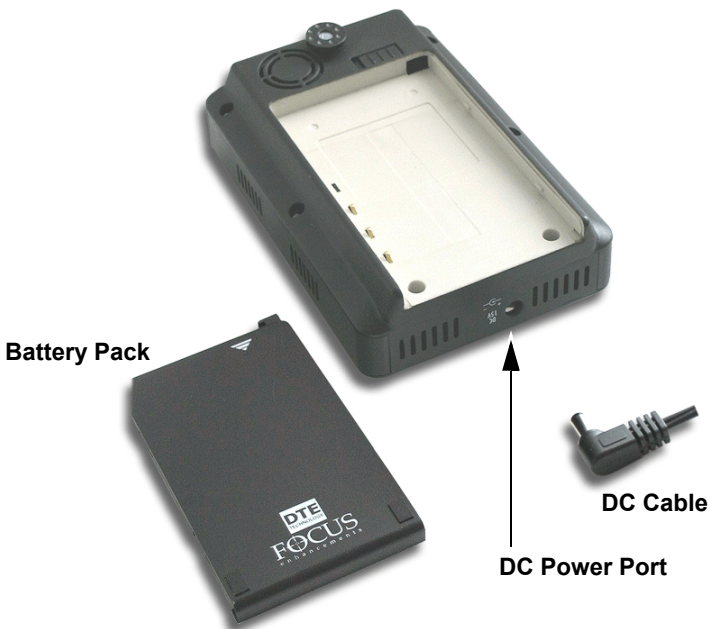

1. Plug the cord from the power supply into the bottom of the FS-100.
2. Connect the line cord to the rectangular power supply.
3. Plug the line cord into an electric outlet.

Installing / Removing the Battery Pack

Installing a Battery

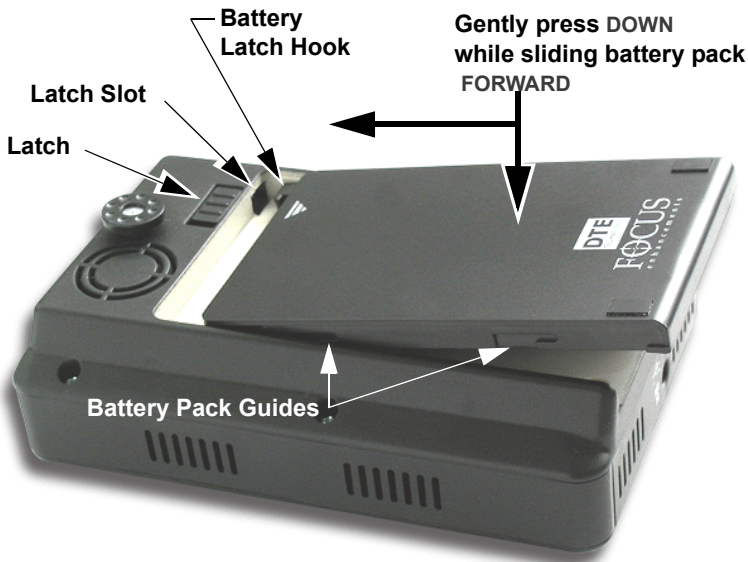

1. Place the unit, so that the battery compartment is up.
2. Position the battery pack, as shown above, so that the latch hook is almost in the latch slot, and touching the floor of the battery compartment.
3. Slide the battery forward while gently pressing down.
4. Feel the battery slide along guides and seat itself.
5. When seated, the battery latch clicks into place.

Removing a Battery

1. Slide the battery latch to the left and hold.
2. Apply backward pressure to the battery pack at the triangle/arrow and gently slide the pack back about 1cm or 3/8 in.
3. This is the reverse motion of inserting the battery.
4. Remove the battery pack.

Charging the Battery

The battery begins charging anytime it is connected to AC power using the AC adapter supplied with the FS-100. The charge LED lights when the FS-100 is charging. For information on the charge LED, refer to the subsection **Top Panel** on page 10.

Before the battery can be used it must charge until the battery status LED indicates the unit is fully charged (green).

- The Charge LED on the top of the FS-100 lights to show the battery is charging.
- An uncharged battery takes 2-3 hours to charge with the unit powered off.
- The battery provided with the FS-100 can supply power to the unit for about 90 minutes while in continuous Record or Playback mode.
- An optional high capacity battery (**BATT-0009-01**) capable of providing power for almost three hours of continuous recording is available from Focus Enhancements.

Note

Using FireWire to Charge FS-100

It is possible to charge the FS-100 battery through the 1394 port on a computer provided that the computer outputs at least 15V through the port. To determine if this is possible, consult the computer's specifications.



Battery Use

Misuse can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, buttons, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.



Warning: Do Not Use Unapproved Battery Chargers

Use of battery chargers not approved by Focus Enhancements could cause the battery to catch fire or explode.



Use Only Original Focus Enhancements FS-BC Battery Chargers

There are four versions of the optional FS-BC battery charger for use in various parts of the world.


- ASYF-0940-01 USA**
- ASYF-0941-01 Europe**
- ASYF-0943-01 United Kingdom**
- ASYF-0944-01 Australia**

These optional battery chargers are available from either your local dealer or online at the Focus Enhancements web store, www.focusinfo.com/sales/store.

Connecting a FS-100 to a DV/HD Camcorder

Before performing this procedure, make sure you have installed and charged the battery, see **Installing / Removing the Battery Pack** on page 22.

1. Connect the supplied Firewire cable to the **DV I/O** connector on the top of the FS-100.

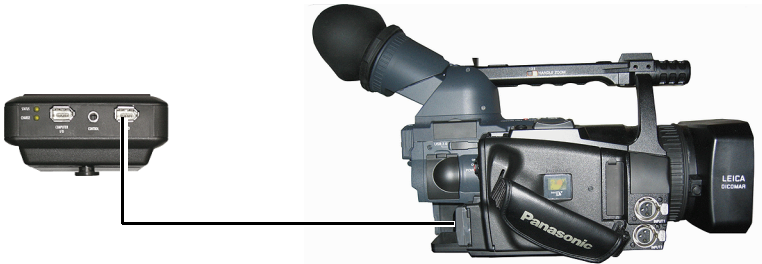

2. Locate the FireWire/DV/iLink (or similar) connector on your video camera. It is located in different places depending upon the brand of camera. If you are unclear of its location, consult your video camera manual.

iNote

FS-100 Supplied with 4-pin to 6-pin FireWire Cable

A 4-pin to 6-pin FireWire, 1394, cable is provided with the FS-100.

HVX200 FireWire Connector

The FireWire connector on the HVX200 is located on the right side of the camera, behind the tape transport. For more information, refer to the HVX200 documentation.

3. Connect the other end of the FireWire, 1394, cable to your video camera.
4. Turn on the video camera.
5. Turn on the FS-100.

Record and Playback with the FS-100

Note

FS-100 Automatically Detects Input Stream from AG-HVX200

FS-100 automatically detects the stream type input from the AG-HVX200 camcorder and, in addition, selects the appropriate HDD MODE and DV FORMAT menu options.

Test Recording

The settings of cameras, NLEs, and the FS-100 are numerous and many are critical. It is recommended that a test recording be done when a setting change is made. This test recording should be played back to the camera and tested with the target NLE.


Before using the FS-100, set up the unit as outlined in the following sections:

Power On the FS-100	27
Select HDD Recorder Mode	28
Select a DV File Format	29
Set Time and Date	30
Record With the FS-100	32
Manual Recording	34
Syncro Slave	35
Tapeless	36
Playback on the FS-100	40

The values set in these procedures are fixed and persist through power cycles. To change them, repeat the steps outlined above.

Power On the FS-100

1. Press the **Power ON** button for two seconds and release it.

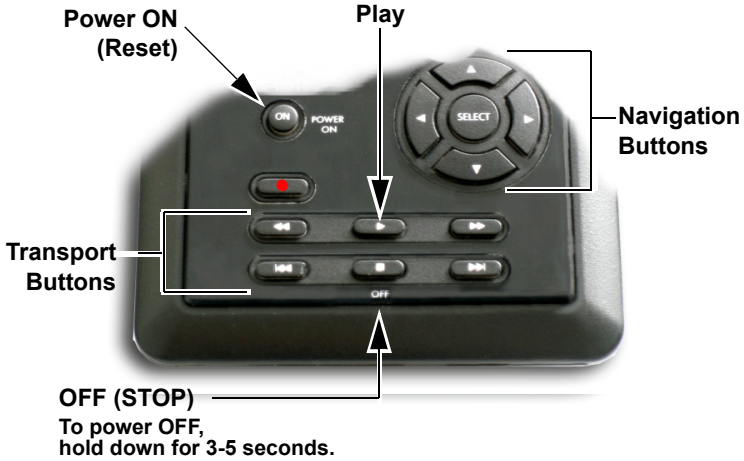

2. The **Welcome** screen appears and displays while the
The home screen appears when the FS-100 initializes.




3. The **Home** screen appears when the FS-100 first powers up.
For more details about this screen, **Home Screen** on page 43.



Select HDD Recorder Mode

1. Press the **Right** navigation button two times until the HDD Mode display appears.

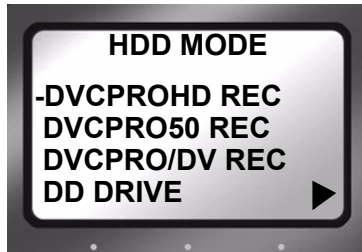


2. Use the **Down** navigation button to highlight the recorder mode, **DVCPROHD REC**, **DVCPRO50 REC**, or **DVCPRO/DV REC**.
3. Press the **Select** button on the navigation buttons.
4. Press the **Left** button to return to the menu title.
5. Press the **Right** button once and advance to the **FORMAT** screen.

Note

The **HDD MODE** changes automatically when an appropriate stream type is recorded.

Select a DV File Format

The DV file formats displayed depend on the recorder mode selected in the previous step, for example **DVCPRO/DV REC** results in the following:

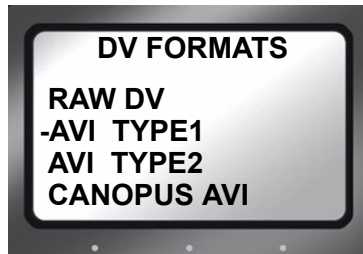

1. Use the **Up** and **Down** navigation buttons to select the DV file format that supports the preferred NLE system. A dash mark to the left of a list item indicates that it is the current selection. The default value is AVI Type 2.

iNote

DV24p and PAL 25P Modes

24p modes are only for use with camcorder's that are capable of DV-24p Advanced mode.

PAL 25P camcorders require no special 25P DV format

Check www.focusinfo.com for supported Applications

For a complete and up-to-date list of supported applications and their associated formats, visit the website:
<http://www.focusinfo.com>

2. Press the center **Select** button on the navigation buttons.
3. Press the **Left** button to return to the menu title.
4. Press the **Right** button once and advance to the **SETUP** screen.

iNote

FS-100 Stores Multiple Recorder Mode/DV File Format Combinations

FS-100 stores a unique file format setting for each recorder mode in the HDD MODE menu. This makes it possible to record different file types on a stream by stream basis; as an example, for DVCPROHD REC mode the DV FORMAT could be P2, while for DVCPRO/DV REC mode the DV FORMAT is AVI TYPE2.


Set Time and Date

Note

Date and Time Must Be Set

The date and time must be set because they are used in the FS-100 file naming function.

1. Press the **Right** navigation button several times until the Setup display appears on the screen as shown below:

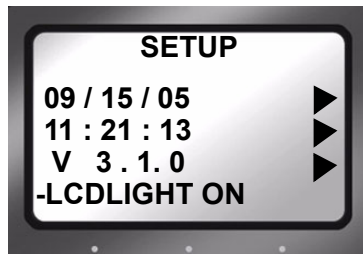

2. Use the **Down** navigation button to highlight the date and press the **Right** navigation button to access the Set Date screen.



3. Use the **Up** and **Down** navigation buttons to change the highlighted value. Use the **Right** and **Left** navigation buttons to highlight the Month, Day, and Year.
4. When complete, press the right-most Function button indicated as **BACK** on the screen. The new date will be indicated on the Setup Screen.

5. Use the **Down** navigation button to select the time and press the **Right** navigation button. The following screen appears:



6. Use the **Up** and **Down** navigation buttons to change the highlighted value. Use the **Right** and **Left** navigation buttons to highlight the Hour, Minute, and Second. (Time is indicated in 24hr. mode.)
7. Press the right-most Function button indicated as **BACK** on the screen. The new date appears on the Setup Screen.
8. The Time and Date are now set.
9. Press the **Left** navigation button followed by the **Select** button to return to the beginning screen.
10. For more information on the Setup function, refer to the section, **Setup Screens** on page 57.

Record With the FS-100

There are four modes of recording with the FS-100.

- Local
Control with the FS-100 transport buttons.
- Syncro Slave
Use this mode with camcorders that do not have FS-100 compatible external control or tapeless trigger functionality. In this mode, the FS-100 watches the record status of the camcorder and replicates its actions. A tape must be in the camcorder for this mode to function.
- AV/C
AV/C is utilized in **PLAYBACK** and other situations where the FS-100 is controlled by an external FireWire device, such as a DV NLE system.



Do Not Use AV/C In FS-100 RECORD MODES.

- Tapeless
This is the recommended control mode for use with companion camcorder, the Panasonic AG-HVX200. Control recording with camcorders that have FS-100 compatible external control or tapeless trigger capabilities.

Before beginning recording, verify that:

1. Time and date are set.
2. Recording format is set.
3. The FS-100 is connected to the video camera according to the explanation in **Connecting a FS-100 to a DV/HD Camcorder** on page 25.
4. Camera and FS-100 are powered on.
5. Tape is loaded in the camera.



Tapeless Control

If the camcorder supports Tapeless control function, tapeless recording is possible. Otherwise, the FS-100 control panel keys must be used to control recording in **LOCAL** control mode when there is no tape in the camcorder. For a list of compatible camcorders, go to Focus Enhancements website at <http://www.focusinfo.com>.



Do Not Disconnect Power or FireWire Cable

Never disconnect the power or the FireWire cable during a recording. This will cause file corruption.



Loss of Power During Recording

If power is lost during recording it is possible to repair the damaged file or files, refer **Repair Disk** on page 82 to and **Repair Clip** on page 83.

iNote

Troubleshooting: Counter Not Incrementing

If the Counter does not increment while recording from the camera, it is an indication that there is no active connection between the FS-100 and the camera.

- Verify that the FS-100 1394 DV I/O and the camera connections are secure. It may be necessary to unplug and then reconnect them.

When a good connection is made, the Counter increments and recording starts.

Verify FS-100 and Camcorder are the Same Video Standard

For example, a NTSC or PAL DV source records only on a matching NTSC or PAL unit.

iNote


Audio is Muted During Recording when VF MODE is set to 24, 25, or 30 for the PN DTE formats (QUICKTIME PN and P2 PN).

The LCD's screen displays **AUDIO MUTE**.



Manual Recording

1. Set the video camera to **Camera** or **Cam** mode.
2. Verify that an image appears in the viewfinder.
3. On the FS-100, press **Record** ● once.
This sets the FS-100 to **Record-Pause** mode.

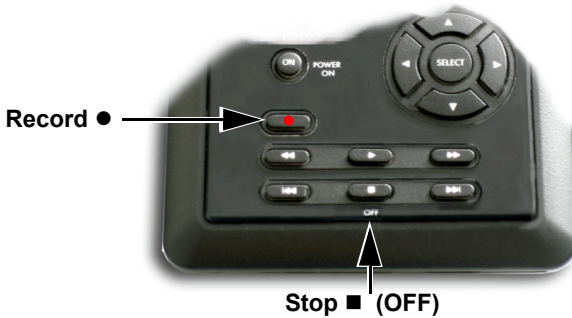

4. On the FS-100, press **Record** ● button a second time. The FS-100 begins to record. The timecode value is displayed on the screen.
5. Press **Stop** ■ (OFF) once to return the FS-100 to **Record-Pause** mode.
6. Press **Record** ● and the FS-100 begins to record again on the same clip.
7. Press **Stop** ■ (OFF) *twice* to stop the recording.
8. Press **Record** ● *twice* to begin recording a new clip.

Creating a New File without Dropping Frames

When in record mode, it is possible to break the recording into a separate, new file without dropping frames.

Press **Record** ● and the FS-100 automatically creates a new clip.

Syncro Slave




This mode is for camcorders that do not have external control or the tapeless control functionality compatible with the FS-100.

- Syncro Slave mode requires that a tape be in the camcorder for operation.
- The FS-100 must be set to **Syncro Slave** control mode.
- In this mode, the FS-100 watches the record state of the camcorder and follows its actions.

When Syncro Slave mode is entered from the menu, the Home screen appears with the Pause indicator displayed in the upper left-hand corner along with a **Y** that indicates that the FS-100 is following the camcorder's record state.

1. Verify that the FS-100 is in **STOP** mode.
2. From the FS-100 Home screen, press the **Right** navigation button several times until the Control screen appears:
3. Use the **Down** navigation button to select **Syncro Slave**. The dash on the left side of an item indicates it is the current selection. The default value is **Local**.
4. Press the **Select** navigation button.
5. The beginning screen returns and a **Pause** indicator appears in the upper left-hand corner. Next to this symbol, is a **Y** indicating that FS-100 is now following the record state of the connected camcorder.
6. Now the FS-100 will record at the same time the camcorder records to tape.

Tapeless

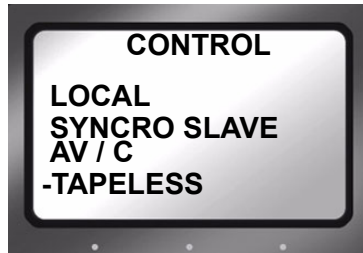

Use the Tapeless control mode with camcorders that are compatible with FS-100 external control or tapeless operation capabilities.

- When the FS-100 is in **Tapeless** mode, an **E** displays along with the tape state, indicating that the unit is in **External** mode.
- Use the camcorder's **REC** button to **Start** and **Stop** the FS-100 tapeless recording.
- The camcorder's External control or tapeless trigger function must be enabled for this mode to work.

Refer to the following section, *Configuring AG-HVX200 and Recording*, for more details.

Configuring AG-HVX200 and Recording



1. Power on the camera.
2. Set the **TAPE/P2** switch to **P2**.
3. Press the **MENU** button on the top of the AG-HVX200 camera. Select the **RECORDING SETUP** option.
 - Set the **REC FORMAT P2** to the desired DVCPRO format and resolution.
 - Set **UB MODE** to **FRM. RATE**.

iNote

AG-HVX200 PN Modes (3.x or 4.x only) Not Supported as Inputs
 The FS-100 generates the PN stream from the camera's full frame stream (720 24P/25P/30P).



Recording In 720/PN Formats

In order for the 720/PN formats to record properly, the camcorder's **RECORDING SETUP > UB MODE** must be set to **FRM.RATE**. See the camcorder's user manual for more information.

4. Under the **OTHER FUNCTIONS** menu, set the **1394 CONTROL** to **BOTH**.

5. Press **REC** trigger button on the top or side (Step 1) of the camera.

Note

AJ-HDX900 Camera Recording Settings

The following recording settings are required for the AJ-HDX900 camera:

MAIN MENU > SYSTEM SETTING > SYSTEM MODE: 720-59.94P *

MAIN MENU > SYSTEM SETTING > CAMERA MODE: 24P **

OPTION MENU > OPTION > FRAME RATE UB: MENU

MAIN MENU > VTR MENU > TC/UB > UB MODE: FRAME RATE

MAIN MENU > VTR MENU > TC/UB > VITC UB MODE: FRAME RATE

TCG switch must be set to **F-RUN**

* For 720-25P/PN, this must be set to **720-50P**.

** For 720-30P/PN, this is set to **30P** and for 720-25P/PN, this is set to **25P**.

Variable Frame Rate (VFR) Settings

Audio is not recorded in VFR recording modes.

VFR settings are supported in the 4.x versions only.

AG-HVX200 Camera Settings

1. Set **SCENE FILE > OPERATION TYPE** is set to **FILM CAM**.

Note

Non-VFR on AG-HVX-200

For non-VFR recordings set the AG-HVX-200 to **VIDEO CAM**.

2. Set **SCENE FILE > FRAME RATE** to the appropriate **FPS**.
3. Set **RECORDING SETUP > UB MODE** to **FRM.RATE**.
4. Set **RECORDING SETUP > RECORD FORMAT** to:
NTSC: **720/24P** or **720/30P**.
PAL: **720/25P**.

See the camera's documentation for more details.

FS-100 Settings

1. Set **DV FORMAT** to **QUICKTIME PN** or **P2 PN**.
2. Set **SETUP-->VFR MODE** to the appropriate base frame rate:

Input Stream	VFR MODE
720/24P	24
720/25P	25
720/30P	30

While recording in VFR mode, **VF** is displayed on the HOME screen below the battery indicator. If the **VF** is not displayed there is a setup issue: please, review the settings shown above. For more information, see **VFR MODE** on page 66.

Preparing P2 File for NLE

Run the utility **Organize P2** before using the recorded P2 file in a NLE. Refer to **Organize P2** on page 76.



Run the **Organize P2 Utility** or the files are not usable by a NLE.

Recording Timecode in the File

Select **EXT TC** in the Setup menu. This option records the video camera timecode in the file. There are other timecode options available, refer to **TIME CODE EXT, REC RUN, FREE RUN, REGEN** on page 62.

Note

Function buttons

The tasks discussed above are available for programming into the function buttons. For information on setting up function buttons, refer to the section, **Functions Screen** on page 71.

Playback on the FS-100

Verify that both the video camera and the FS-100 are powered on and that they are connected together with the FireWire cable from the FS-100 DV/IO port to the camcorder 1394 port.

iNote


Feature Availability on PAL Cameras

This feature is not available on some PAL cameras.

1. Set the video camera to **VCR** or **playback mode**.


iNote

Setting the AG-HVX200

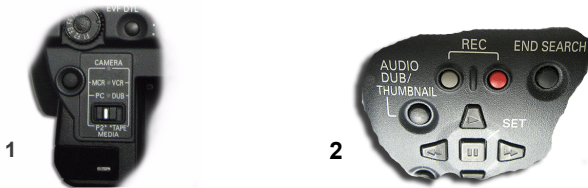

1. Set the **AG-HVX200** to VCR by pressing the **MCR/VCR** button located on the back of the camera, under the viewfinder. A thumbnail screen appears in the camera's LCD.
2. To turn off thumbnail display, press **THUMBNAIL** button located on the top of the camera, under the handle.

2. Navigate to the video clip to preview, using the FS-100 **Left** and **Right** transport control buttons.

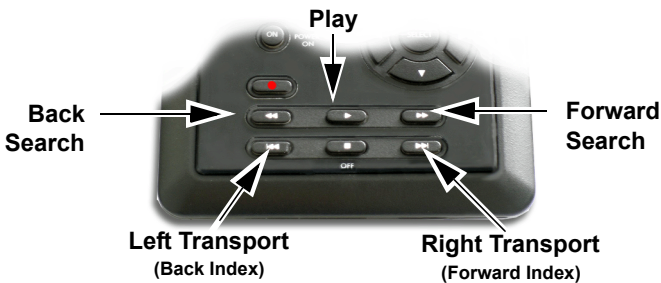

3. Press the FS-100 **Play** button.
4. Search through the clips using the FS-100 **Forward Search**, **Forward Index**, **Backward Index**, or **Backward Search** buttons. Refer to **Navigation Buttons** on page 7 for more information on the function of these buttons.

FS-100 Functions

This section contains information on the following LCD screens:

General Screen Information	42
Record Screens	47
Format Screen	52
Setup Screens	57
Functions Screen	71
Utilities Screen	75
Control Screen	94

FS-100 screens are organized in a flat hierarchy. Every screen has a unique name, and it is possible to cycle continuously through the screens using the **Left** and **Right** navigation buttons.

Use the **Up** and **Down** navigation buttons to cycle through screen items (selections).

Use the **Select** Navigation button to make a choice.

Note

Navigation Tip: Jump to Top of Display Using the Left Button

When navigating through the LCD displays and scrolling down into the menu, press the **Left** navigation button on the front panel and immediately return to the top of the display, which allows navigating to other displays.


Jump to Home display Using Select Button

To return immediately to the Home Screen, navigate to the menu title at the top of the screen and press the Select button.

General Screen Information

The FS-100 LCD screens are organized by function with each screen displaying a list of items. An item can be:

- A value that can be set, such as the date.
- A switch similar to a check box, that can be enabled along with other options in the display.
- A switch similar to a radio button, that belongs to a family of options, in which only one can be active at any time.
- A link to another display, which is indicated by a ►.

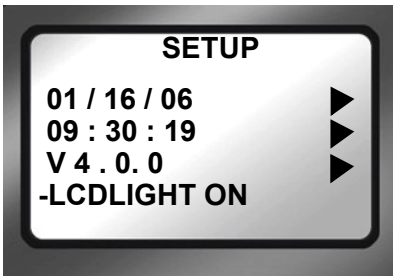

Menu Title

Appears at the top of the display and identifies its topic or function.

Navigation

Use the Left or Right navigation buttons to move to the previous or next display.

Use the Up and Down navigation buttons to move between the items in the display.


Welcome Screen

The Welcome screen appears briefly after boot-up, and automatically switches to the Home screen when the FS-100 is ready for operation.



Home Screen

The Home screen is read only and has no navigable items. To leave the Home screen use either the **Left** or **Right** Navigation button.

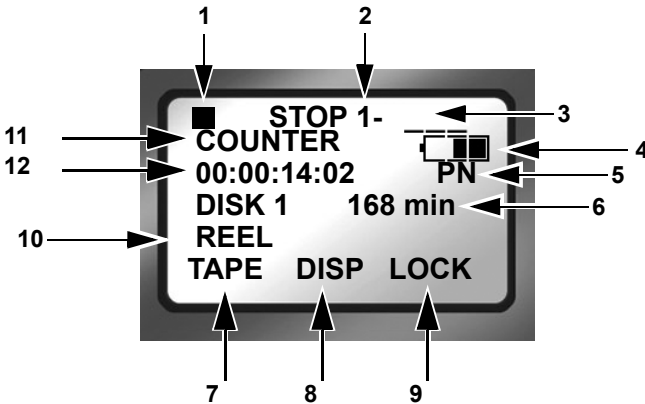

1. **Current Function:** symbol and description
Refer to **LCD Display Symbols and Text** on page 97.
2. **Volume Disk Number**
The volume number is always **1** unless multiple FS-100's are connected.
3. **Clip Number**
Number of the current video clip, i.e. 001 for clip 1.
4. **Battery Life Gauge**
This gauge is accurate only when the unit is powered exclusively from the battery.
5. **PN/VF Mode Indicator**
Versions 3.x and 4.x support PN DTE file formats. VFR record modes are supported by 4.x versions only.
6. **Time Remaining** on the disk.
7. FA Functions with **TAPE** as the default, refer to **Functions Screen** on page 71 for more information.
8. FB Functions with **DISP** as the default, refer to **Functions Screen** on page 71 for more information.
9. FC Functions with **LOCK** as the default, refer to **Functions Screen** on page 71 for more information.

10. Reel Display

In **Record** or **Playback** modes, this item displays the particular REEL that a clip is located in or, has been marked to. If in **PLAY FROM > REEL LIST** mode, the REEL appears in brackets for example, [REEL]. This area is blank if **NO REEL** has been selected.

11. DISP information field that displays data type.

12. DISP information field that displays current data.

DISP (display) Information Fields

Use the **DISP** function button to display current operation information fields 11 and 12. The data shown depends on the mode of operation, i.e. **DVCPROHD, DVCPRO50, DVCPRO/DV.**

Pressing the **DISP** button advances the display to the next category of information. Below is a table of the data types and data available with **DISP.**

Field Number	Data Type / Data Description
11	COUNTER
12	Shows frame count of current video clip during record or playback.
11	REMAINING
12	Record: counts down number of available frames remaining, as time, on a specific disk. Playback: displays time remaining of the current clip.
11	DV (NTSC or PAL) or HD (see note following table)
12	Record: displays the external timecode value being generated by a camcorder or other device during a recording session. Timecode mode must be set to EXT TC for this function to operate, refer to TIME CODE EXT, REC RUN, FREE RUN, REGEN on page 62. Playback: displays the embedded DV timecode value in a particular track. In VF record mode, this displays the Base Frame Rate.
11	UB NTSC (In VF record mode, this displays the Frames Per Second of input stream or Incoming Frame Rate.)

12	Displays the set user bit value in a particular clip. A user bit value must be added for this to display, refer to UB SET on page 64.
11	ABSOLUTE
12	Displays an absolute timecode value for the particular session: the sum of all COUNTER timecodes on connected volumes. Absolute is primarily used when setting the FS-100 to AV/C mode and controlling it with an external FireWire device, such as a computer.

Note

DV (NTSC or PAL) and HD

The information displayed in fields 11 and 12 depends, in part, on which Recorder Mode is set.

DVCPRO/DV REC

Line 11 displays the Standard Definition (SD) video format. It can not be changed.

DVCPROHD REC and DVCPRO50 REC


Line 11 displays the HD resolution of the current track which depends on the camcorder in use with the FS-100 HD unit. Possible values are:

- 1080/50i TC
- 1080/60i TC
- 720/60p TC
- 720/50p TC
- 720/30p TC
- 720/25p TC
- 720/24p TC

Refer to the camcorder manual for supported resolutions.


FS-100 System Information Screens

The FS-100 automatically creates information screens to indicate conditions such as high temperature, power remaining, or drive capacity remaining.

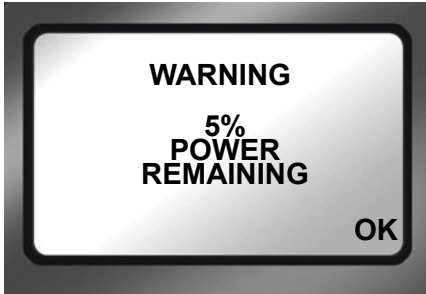

Press **OK** to clear the screen and return to the last screen.


Record Screens

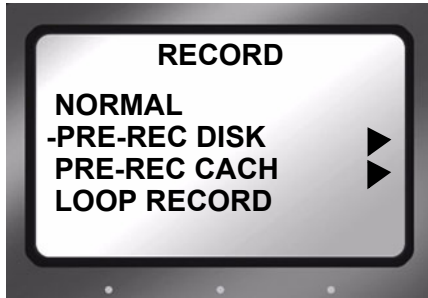

The Record screen permits setting the FS-100 to various recording modes, depending on the model, see Table , Record Modes with Home Screen Indicators.

Once a record mode is selected, the recorder remains in that mode until a different mode is chosen. Exiting the **Record** screen and returning to **Home**, enables the selected recording mode.

To verify that the digital recorder is set to the correct recording mode, refer to the upper left-hand of the Home screen where the recorder mode is displayed.

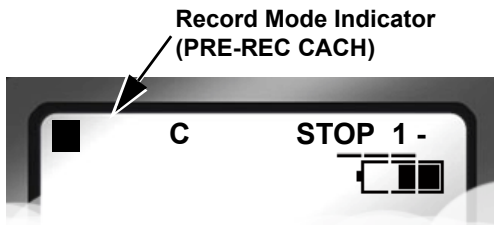

Record Modes with Home Screen Indicators

Mode	Top Line Displayed In Home Screen			
NORMAL	■		STOP	1-001
PRE-REC DISK	■	P	STOP	1-001
PRE-REC CACH	■	C	STOP	1-001
LOOP RECORD	■	L	STOP	1-001
SNAP DV	■		SNAP	1-001
TIME LAPSE	■	T	STOP	1-001


For more about LCD display symbols and text, see **LCD Display Symbols and Text** on page 97.

Normal Record

This is the standard recording mode.

- All control is from the FS-100 front panel.
Initially, the **Home** screen displays **■ STOP**.
- Pressing Record ● puts the FS-100 into **II REC PAUSE** mode.
- Pressing Record ● a second time puts the FS-100 into **REC** mode.

PRE-REC Record Mode

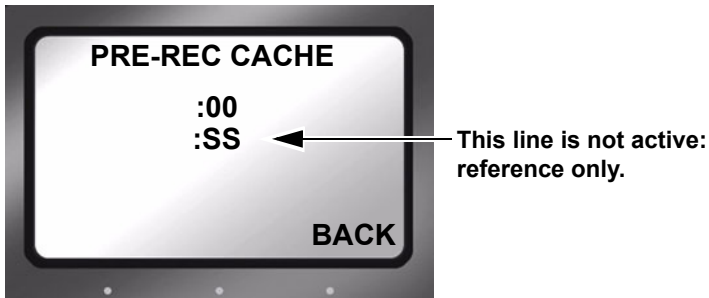

The PRE-REC CACHE mode insures that important material at the very start of a recording session is captured. PRE-REC stores in the on board memory a continuous loop of video captured by video camera during pauses. Pressing Record ● begins active recording at the last frame stored in the cache. The resulting video clip has the cached video at the beginning.


PRE-REC CACHE is available in **Local**, **Syncro Slave**, and **Tapeless** control modes.

Set the length of video in 1-second increments from 0. The maximum time allowed depends on the model:

- 6 seconds, DVCPROHD,
- 12 seconds, DVCPRO50,
- 24 seconds, DVCPRO/DV25,

Tens and ones digits are set separately.

PRE-REC Disk Record Mode

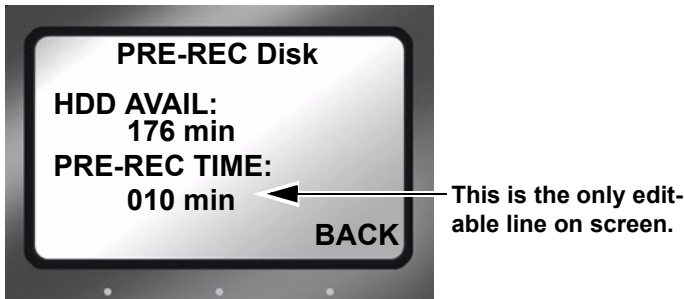

The PRE-REC Disk mode records video in a continuous loop to a user-defined portion of disk space. Pressing **Record** ● seamlessly begins active recording. The PRE-REC Disk session is appended to the beginning of the new clip. The result is a set of clips beginning with the cached video and continuing with the newly recorded video.

- When calculating the amount of hard disk space needed for a PRE-REC Disk record session, always include additional space beyond the recording requirements. The added space depends on the length of the loop.
 - Loops less than 60 minutes** in need an additional 1 minute of unused disk space.
 - Loops 60 minutes and greater** require an additional 2GB of unused disk space.
- When looping less than one hour PRE-REC Disk records the loop in a series of 1 minute clips.
- Otherwise, the FS-100 creates:
 - DVCPRO/DV:** 9 minute, 13 second clips (2GB clips on disk),
 - DVCPRO 50:** 4 minute, 36 second clips (2GB clips on disk),
 - DVCPRO HD:** 2 minute, 18 second clips (2GB on disk),
- PRE-REC Disk is available in **Local**, **Syncro Slave**, and **Tapeless** control modes.
- When PRE-REC Disk is set, the symbols ●P (Record and P) appear in the FS-100 display.

Loop Record

Loop Record is similar to PRE-REC Disk.

Loop Record continuously records a series of video clips to available disk space. When all available disk space is used, Loop Record begins sequentially replacing the earliest clip with the most recent.

- The size of the video clip depends on the length of the loop or record mode.

Loops of 60 minutes or less are recorded in one-minute clips.

Otherwise, loops are recorded in 2GB clips.

When the capacity of the disk is reached, one additional clip is created. The size of the last clip depends on the length of the loop i.e., one-minute or 2GB. The disk must have at least 30 minutes of disk space available for this functionality.

Saving Loop Record Clips

Press **STOP** during a record session.

The FS-100 stops recording and saves the current LOOP RECORD session clips to a folder on the disk.

Snap Record

Use **Snap** to record individual frames. In Snap mode, pressing Record ● captures individual frames. All the frames recorded in the same session are stored in a single file.


- To start a new **SNAP** record session, place the unit in **STOP** between **SNAP** records.
- Use Snap in **Local**, **Syncro Slave**, and **Tapeless** control modes.
- Removing power from the FS-100 in the midst of a **Snap** recording session causes the unit to return to **Normal** recording mode when it powers back up.

Note

Another Method to Capture Single Frames

An alternative to Snap is EXT CTL FRAME. For more information see **EXT CTL OFF, Pause, Frame, File** on page 61.

Time Lapse Record

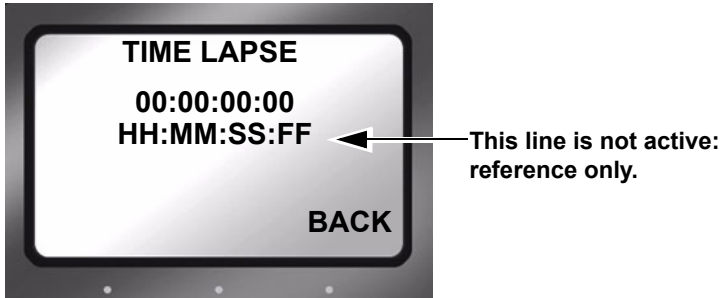


Time lapse provides the ability to record a single frame at specific time intervals, for example one frame per minute, 00:01:00:00. Time lapse applications can include capturing the traffic on city streets, the growth of a plant from seed to maturity, and construction projects.

Features of the Time Lapse function include:

- All the captured frames are recorded in a single clip.
- The time between recording periods can be set in frames, seconds, minutes, and hours.
- The maximum time between recorded frames is 24 hours.

Format Screen


DV Formats

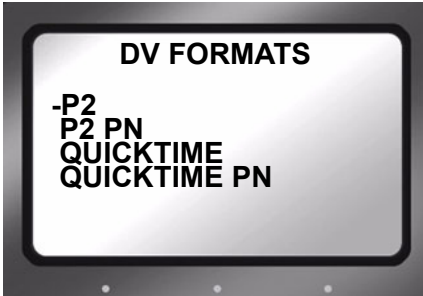

The number of options available in this menu depends on the recorded bit rate. If recording **DVCPROHD REC** (100 Mb/s) or **DVCPRO50 REC** modes (50 Mb/s) there are only two options:

- P2
- P2 PN DVCPROHD with 3.x or 4.x only
- QUICKTIME 3.x or 4.x only
- QUICKTIME PN DVCPROHD with 3.x or 4.x only
- RAW DV

If recording in **DVCPRO/DV REC** mode, there are a dozen file format options, including:

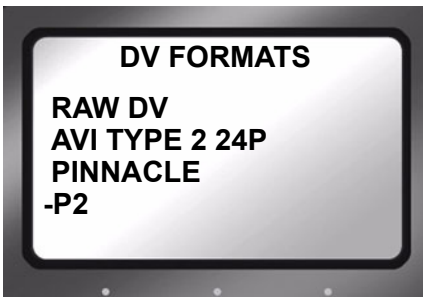

- RAW DV
- AVI TYPE1
- AVI TYPE2
- CANOPUS AVI

- **MATROX AVI**
- **QUICKTIME**
- **AVID OMF**
- **QUICKTIME 24P NTSC only**
- **AVI TYPE2 24P NTSC only**
- **PINNACLE**
- **P2**

Note

Formats for 25P Applications

Use standard file formats for all 25P applications **except** AVID OMF. OMF is not compatible with 25P DV streams.


The latest DTE supported applications and file formats are listed on the Focus Enhancements website: **www.focusinfo.com**.

Note

FS-100 Automatically Detects Input Stream from AG-HVX200

FS-100 automatically detects the stream type input from the AG-HVX200 camcorder. This also selects the appropriate HDD MODE and DV FORMAT menu selections.

HDD Mode Screen

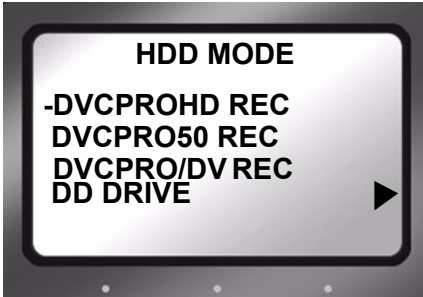

This screen displays the following items:

- **DVCPROHD**

Supports 100 Mb/s streams from the Panasonic AG-HVX200 companion camcorder (1080i and 720p).

Versions 3.x and 4.x support 720 PN.

In addition, 4.x supports VFR modes. The PN/VF record processing is performed on the FS-100. The camera must be in the corresponding non-PN mode (720 24P/25P/30P). The FS-100 does not support the PN streams as a valid input.

Other DVCPROHD compatible input devices also supported.

Note

AG-HVX200 Setup for PN/VFR

In PN/VFR record modes, the AG-HVX200's **RECORDING SETUP** -> **UB MODE** must be set to **FRM. RATE**. For VFR mode, see **Variable Frame Rate (VFR) Settings** on page 38.

VFR Mutes Audio

The audio is muted on all VFR recordings.

- **DVCPRO50**

Supports 50 Mb/s streams from the Panasonic AG-HVX200 companion camcorder and other DVCPRO 50 input devices.

- **DVCPRO/DV**

Supports 25 Mb/s streams from the Panasonic AG-HVX200 companion camcorder and other DVCPRO/DV input devices.

Note

FS-100 Automatically Detects Input Stream from AG-HVX200

FS-100 automatically detects the stream type input from the AG-HVX200 camcorder and, in addition, selects the appropriate HDD MODE.

- **DD DRIVE** ►

Use this option when connecting the FS-100 to a computer. The FS-100 functions as a volume visible to the computer. In addition, this setting permits the connecting of multiple FS-100s together to increase recording space.

- **USE EXT FS-100**


Use this option when longer recording times are needed. **USE EXT FS-100** permits the connecting of two FS-100 together to provide more disk storage for longer recording. One unit acts as the master with the other as a slave: the master records to itself until full and then continues recording on the slave unit.

Note

Identifying Master/Slave Volumes During Record/Playback

When two FS-100s are in combined via **USE EXT FS-100** and in either **Record** or **Playback** mode, the volume on the Home screen will display 1-xxx when the master unit is recording or playing back and 2-xx if it is the slave.

Setting Up Master and Slave FS-100

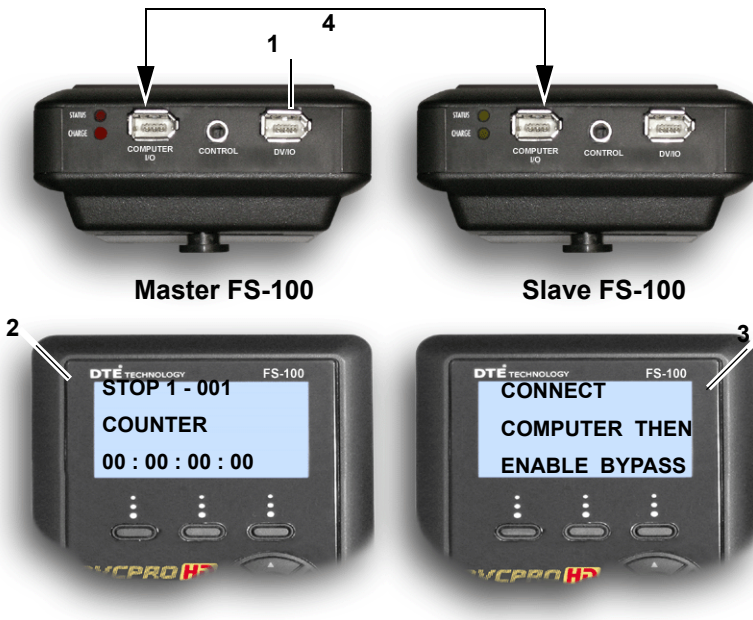

1. Connect the camcorder to the master FS-100, DV I/O connector using the supplied FireWire cable.
2. **Master**
Power on unit.
Go to the **HDD Mode** menu screen and enable **USE EXT FS-100**.
3. Connect the FS-100s through the units **Computer I/O** connectors using a 6-pin to 6-pin FireWire cable.
4. **Slave**
Power on the unit
Go to the **HDD Mode** screen and enable **DD DRIVE**.
5. **Master**
Begin recording or playback using the master FS-100.




Use DD Drive Mode when Connecting to a PC

It is important to take the master FS-100 out of USE EXT FS-100 mode before attempting to connect to a computer.

To do this, select DD DRIVE from the HDD Mode screen.

This returns use of the unit to hard disk mode.

Setup Screens

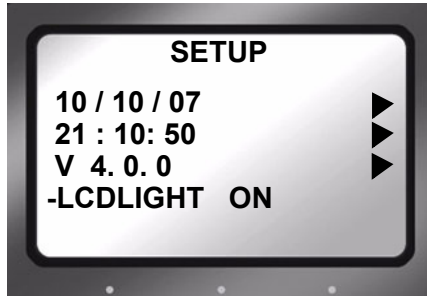

The items on the Setup Screen are grouped by function. Within the function the items act like radio buttons, i.e. when one is active the others are not.

In some cases, such as the Date, a settings screen appears. To return from a settings screen, use the **BACK** function button.

The items displayed on the Setup screen include:

- **DATE** Displayed ►
- **TIME** Displayed ►
- **VERSION** model: NTSC/PAL Displayed ►

- **LCDLIGHT ON** Group Default
- **LCDLIGHT OFF**
- **LCDLIGHT AUTO**

- **ALARM ON** Group Default
- **ALARM OFF**

- **STOP FRAME;** (1st frame of current clip)
- **STOP NO VIDEO** Group Default

- **EXT CTL OFF** Group Default
- **EXT CTL PAUSE**

- **EXT CTL FRAME**
- **EXT CTL FILE**

- **TC EXT** Group Default
- **TC REC RUN**
- **TC FREE RUN**
- **TC REGEN**
- **TC SET** ►
- **UB SET** ►

- **TC DROP** NTSC only
- **TC NON-DROP** Default, NTSC only

- **VFR MODE**

- **LCD CONTRAST**

Note


Date and Time Must Be Set

The date and time must be set. They are used in the FS-100 file naming function. Refer to **Set Time and Date** on page 30.

Date



Time

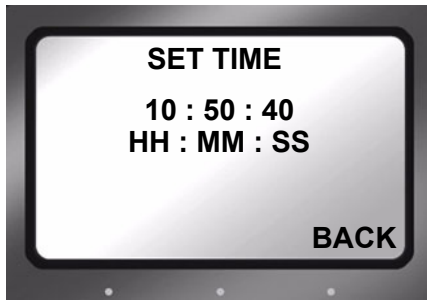

Version



This screen displays:

- FS-100 Firmware version
- SD video of the unit.
- FS-100 model

LCD Light On, Off, Auto

These items enable or disable the FS-100's LCD's backlight.

- **LCDLIGHT ON** Group Default
Keeps the backlight on permanently.
- **LCDLIGHT OFF**
Keeps the backlight off permanently.
- **LCDLIGHT AUTO**
Turns off the backlight after one minute, pressing any button pad button turns the backlight back on.

Any information screen turns the backlight on.

Alarm On, Off

Default is **On**.

- When the alarm is enabled, pressing any button on the FS-100 produces audio feedback.
- The FS-100 alarm triggers when conditions such as low battery charge, low disk space, or over heating occur.
- When Alarm is set to **Off**, the audio feedback for the buttons is disabled, however the alarm will still sound for low power, high heat, or low disk space conditions.

Stop Frame, No Video

These settings determine the FS-100 video output when it is in **STOP** mode.

- **STOP FRAME**
Displays the first frame of the clip.
- **STOP NO VIDEO** Group Default
Video output is **Off**.

EXT CTL OFF, Pause, Frame, File

These options permit the use of an external device to control the FS-100 through the optional RS-232 cable.

Note

RS-232 Cable Available from Focus Online Store

The RS-232 cable required to connect the FS-100 to an external control device is Focus part number **CBLA-0113-01**. It and other accessories mentioned in this manual are available at <https://www.focusinfo.com/sales/store>.

- **EXT CTL OFF** Group Default
Use this option when connecting an external device using an RS232C cable.
This requires the use of a 3.5mm-to-DB9 adapter cable, plugged into FS-100 **Control** port.
In Local mode, select this item to control the FS-100 with the optional wired remote control unit.

The following options permit control functions to occur from a simple contact closure.

- **EXT CTL PAUSE**
Controls **Pause** and **Resume** during a record or playback session.
- **EXT CTL FRAME**
Captures a single frame of video and records it to a file. Each time this function is triggered, it sequentially adds another frame to the same file until stopped.
- **EXT CTL FILE**
Creates a new file during a record session without losing frames.

TIME CODE EXT, REC RUN, FREE RUN, REGEN

The following are timecode (TC) functions.

- **TC EXT Group Default**

Records the incoming source timecode. If the timecode is not running, the FS-100 records the same timecode number in each recorded frame. Choose **TC EXT** mode to clear any stored number.

- **TC REC RUN**

In this mode, after a power cycle, the FS-100 starts its TC record count using the **TC SET** value. Later recordings add to the last value recorded. A power cycle resets the TC record value to the **TC SET** value.

- **TC FREE RUN**

This function causes the FS-100 to begin counting from the value stored by **TC SET**.

A number entered through **TC SET** is not stored and available to the FS-100 until exiting **TC SET**. Only then does the FS-100 begin counting using that number.

- **TC REGEN**

When the FS-100 powers up in **TC REGEN** mode, it:

Reads the timecode of the last track recorded.

Adds 1 to the number.

Stores the new timecode as the number that will be assigned to the first frame of the next recording session.

If the drive is empty, i.e. no existing recordings with, the FS-100 uses the **TC SET** value.

Note

TC SET and UB SET Can Be Set at the Same Time

Both parameters, TC SET and UB SET, may be set and are not mutually exclusive as in some groups, i.e. LCDLIGHT.

TC EXT Recommended for Pull-down Applications

If the recording signal contains pull-down information in 720/60p format, the frame flag information contained is preserved in TC EXT mode and is required for the editing process.

TC SET



The Timecode Set parameter stores a user defined timecode in the FS-100's non-volatile memory. This value is available for use by the FS-100 immediately after exiting **TC SET**.

- **TC FREE RUN**

The FS-100 uses this value on the next recording after it is set in **TC SET**.


- **TC REGEN**

This is the starting value when using an empty hard disk drive for recording.

- **TC REC RUN**

This is the value used to begin every recording session after a power cycle.

UB SET

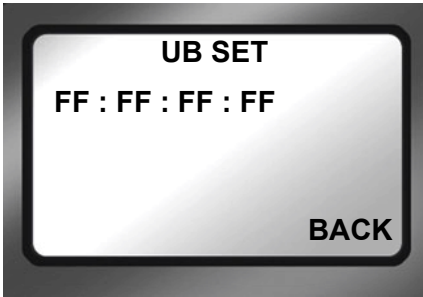

The User Bit Set function provides the ability to change the user bits in the timecode recorded in the video files.

- Timecode values are not set when in **TC EXT** mode.

Professional applications employ user bits to add metadata to recordings to assist in post production. For example, multiple cameras are used during a shoot. Each FS-100 has a unique UB setting that identifies it and the camera it serves. Later, the user bits are used to determine from which camera station the footage was recorded.

TC DROP, NON-DROP NTSC only

These parameters are only available for NTSC and only one may be enabled at a time. Drop and non-drop enable and disable the drop-frame function that modifies how the timecode is calculated during recording.

- **TC DROP**

Enables the drop-frame function:

Frames 00 and 01 are dropped from each minute of video recorded, except for those minutes evenly divisible by ten.

- **TC NON-DROP** Group Default

Disables drop-frame. No frames are dropped during recording and the timecode reflects the actual time during recording.

Note

Use with TC FREE RUN or TC REGEN

TC DROP and TC NON-DROP may only be set when using the TC FREE RUN or TC REGEN settings.

Type of Separator Indicates TC DROP or NON-DROP

The timecode displayed on the LCD indicates the TC DROP/NON-DROP mode by using either a semi-colon or a colon as a separator between hours, minutes, seconds and frames:

- DROP HH;MM;SS;FF
- NON-DROP HH:MM:SS:FF

VFR MODE



WARNING:

It is critical that the VFR MODE is set properly prior to doing a VFR mode record. This setting is set to OFF whenever the unit is powered down or the DV FORMAT value is changed.


When VFR MODE is set to a value other than OFF, all PN recordings will have the audio MUTED.

Use this setting to enable or disable Variable Frame Rate (VFR) support for the AG-HVX200 VFR mode. This setting also designates the input stream type*:


- 720/24P or 720/30P on 60 Hz NTSC systems.
- 720/25P on 50 Hz PAL systems.

* The input stream type is also called the **Base Frame Rate**.

NTSC Menu

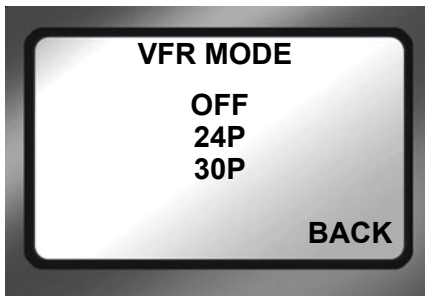

PAL Menu

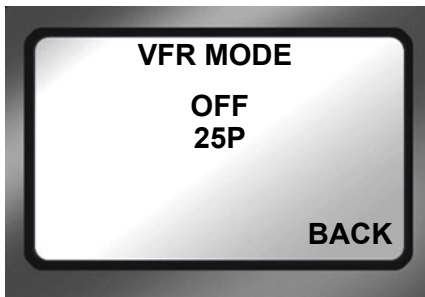

In addition to setting VFR MODE to the **Base Frame Rate**, a **PN DTE** format must be selected from the **FS-100 DV FORMAT** menu, see **DV Formats** on page 52.

VFR MODE is inactive for non-PN DV FORMATS.

Set AG-HVX200 to Standard Record Mode

The Panasonic AG-HVX200 must be set to standard record mode or 720P mode but not 720PN.

FS-100 VFR MODE supports three stream types:

- 720/24P and 720/30P on 60 Hz systems.
- 720/30P on 50 Hz systems.

On the AG-HVX200:

1. Set **SCENE FILE > OPERATION TYPE** to **FILM CAM**.
2. Set **RECORD SETUP > UB MODE** to **FRM. RATE**.
3. Set **SCENE FILE > FRAME RATE** to the desired **Incoming Frame Rate**.

See the AG-HVX200 manual for more information.

When recording, the FS-100 Home screen displays **VF** on the right, below the battery level indicator.



During playback, the **VF** indicator is not available and **PN** is displayed.

Undercranking and Overcranking

Undercranking, also called fast motion, is setting the **Incoming Frame Rate** lower than the **Base Frame Rate** (24, 30, or 25 fps) which results in video playback that appears faster than the **Base Frame Rate**.

For example, if the **Base Frame Rate** is set to 24 fps (720/24P input stream), set the **Incoming Frame Rate** to 12. When the file is played back at the base rate (24 fps) the result is video playback at twice normal speed.

Overcranking, also called slow motion, is setting the frame rate higher than the **Base Frame Rate** which results in video playback that appears slower than the **Base Frame Rate**.

For example, if the **Base Frame Rate** is set to 24 fps (720/24P input stream), set the **Incoming Frame Rate** to 48. When the file is played back at the base rate (24 fps) the result is a video playback at half normal speed.

During playback on the FS-100 the video will display at full frame rate. Video on overcranked recordings will playback slower than normal video speed and undercranked video will playback faster.

Note

VFR Mode Setting Not Saved

The VFR MODE setting is automatically set to OFF upon power-down. This setting must be changed for VFR recordings for every power-cycle.

Using VFR recordings in NLEs



Camera Resolution must be set to 720P mode:

The camera resolution must be set to the corresponding 720P mode and NOT the 720PN mode for VFR recordings.

Use the **Base Frame Rate** for the NLE's timeline setting.

For example, if the **Base Frame Rate** is 720/24P and the **Incoming Frame Rate** is set to 48 or 12, the timeline preset to use is 720/24P.

A real-time recording has an equivalent **Base Frame Rate** and **Incoming Frame Rate**.

When using VFR recordings in editing, the real-time recordings must match the VFR recording's DV FORMAT and **Base Frame Rate**.

For example, when editing with VFR recordings that have the DV FORMAT of **QUICKTIME PN** and a **Base Frame Rate** of **720/24P**, then the real-time recordings must be made with **QUICKTIME PN** as the DV FORMAT and a **Base Frame Rate** of **720/24P** and the VFR MODE set to **OFF**.

This insures that the VF and real-time recordings can be used in the same timeline without rendering.

LCD CONTRAST



Use this function to adjust the contrast of the LCD display for easier viewing.

1. Use the **Right** navigation button to go to the **SET CONTRAST** submenu.
2. Use the **Up** and **Down** navigation buttons to increase and decrease the contrast number.
3. Press **BACK** when done.


Functions List

A list of the Function button menu is below. In each group, the default selection is listed first.

MENU	Appears on LCD as...
FA SYNC	SYNC (Toggles between SYNCRO and LOCAL record control.)
FA AV/C	AV/C (Toggles between AV/C and LOCAL control)
FA TAPELESS	TAPE (Toggles between TAPELESS and LOCAL control) Default
FA REELS	REEL Increments current reel number
FA R0-0	R0 Marks Current Clip to Reel 0,
FA R1-1	R1 Marks Current Clip to Reel 1,
FA R2-2	R2 Marks Current Clip to Reel 2,
FA R3-3	R3 Marks Current Clip to Reel 3,
FA R4-4	R4 Marks Current Clip to Reel 4,
FA R5-5	R5 Marks Current Clip to Reel 5,
FA R6-6	R6 Marks Current Clip to Reel 6,
FA R7-7	R7 Marks Current Clip to Reel 7,
FA R8-8	R8 Marks Current Clip to Reel 8,
FA R9-9	R9 Marks Current Clip to Reel 9,
FA LCD ON/OFF	LCD1/LCD0 LCD On/Off Toggle
FA LCD AUTO	LCDA/LCD0 LCD Auto On/Off Toggle
FA BLANK	No Function.
FB DISP	DISP (Toggles the different TC display modes) (Default)
FB ALARM	ALRM/MUTE (Turns the FS-100 alarm on or off.)
FB FILE	FILE (Toggles between normal and display of the file name)
FB REELS	REEL Increments current reel number
FB R0-0	R0 Marks Current Clip to Reel 0,
FB R1-1	R1 Marks Current Clip to Reel 1,

MENU	Appears on LCD as...
FB R2-2	R2 Marks Current Clip to Reel 2,
FB R3-3	R3 Marks Current Clip to Reel 3,
FB R4-4	R4 Marks Current Clip to Reel 4,
FB R5-5	R5 Marks Current Clip to Reel 5,
FB R6-6	R6 Marks Current Clip to Reel 6,
FB R7-7	R7 Marks Current Clip to Reel 7,
FB R8-8	R8 Marks Current Clip to Reel 8,
FB R9-9	R9 Marks Current Clip to Reel 9,
FB BLANK	No Function.
FC LOCK	LOCK/UNLK Locks the buttonpad (Default) (Toggles between LOCK and UNLK <Unlock>)
FC DV/DD	DD (Toggles FS-100 between DV/HD and HDD Modes)
FC REELS	REEL Increments current reel number
FC R0-0	R0 Marks Current Clip to Reel 0,
FC R1-1	R1 Marks Current Clip to Reel 1,
FC R2-2	R2 Marks Current Clip to Reel 2,
FCR3-3	R3 Marks Current Clip to Reel 3,
FC R4-4	R4 Marks Current Clip to Reel 4,
FC R5-5	R5 Marks Current Clip to Reel 5,
FC R6-6	R6 Marks Current Clip to Reel 6,
FC R7-7	R7 Marks Current Clip to Reel 7,
FC R8-8	R8 Marks Current Clip to Reel 8,
FC R9-9	R9 Marks Current Clip to Reel 9,
FC BLANK	No Function.

Assigning Clips to Reels

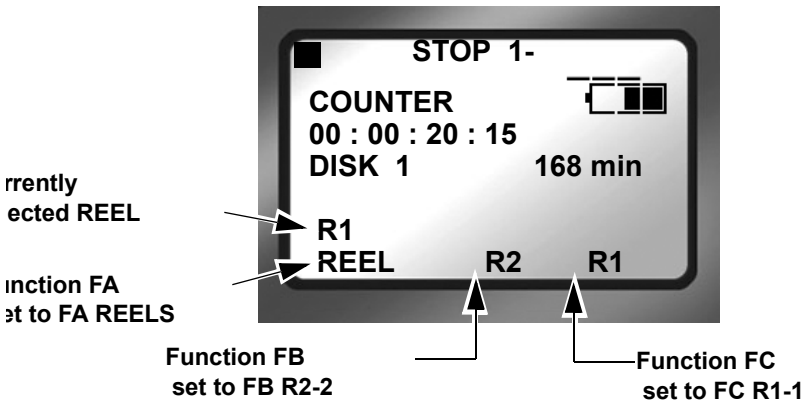

The function buttons are a quick way to mark video clips during recording. The Functions menu offers two types of markers to use, as an example **FA REELS** and **FB REEL-2**.

- **FA REELS**

Selecting the **FA REELS** programs the FS-100 to mark the clips to the currently selected reel. The current reel is indicated in the line **above** the **FA** function reel selection.


- **FB REEL 2**

Setting a function button to this type of marker, instructs the FS-100 to mark the current clip as belonging to the **REEL R2**.

- **LOCK/UNLK:**

Selecting **LOCK** or **UNLK** to lock or unlock the front panel keys of the FS-100.

To prevent accidentally unlocking the front panel, there is an unlock confirmation screen:

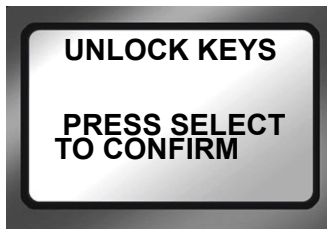


After pressing the **UNLK** key, press **SELECT**.

Blank

Functions identified as **Blank** are inactive.

Utilities Screen

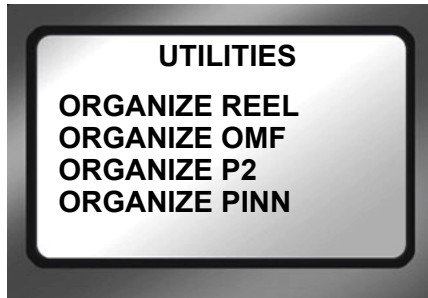

The Utilities available are:

- ORGANIZE REEL**
- ORGANIZE OMF** DVCPRO/DV only
- ORGANIZE P2**
- ORGANIZE PINN** DVCPRO/DV only
- MAKE REF MOV** version 4.x only
- DELETE CLIP** ▶
- FORMAT** ▶
- REPAIR DISK** ▶
- REPAIR CLIP** ▶
- FILE NAME** ▶
- UPGRADE** ▶
- SYSTEM RESET** ▶
- DIAGNOSTIC** ▶
- STATUS** ▶

Organize Reel

This selection places all files identified as a REEL clip during recording or playback into the appropriate reel folder. You can import this folder directly into most DV NLE bins.

Organize OMF DVCPRO/DV only

When files are recorded in the AVID OMF file format, this selection allows you to take all the OMF and AIF audio files at the end of a recording session and place them into a folder on the disk drive named **OMFI MediaFiles**. When the disk is connected to a computer, this folder is recognized by Avid Editor's Media Tool enabling direct import of files into the Avid timeline. Refer to the section, **Using Avid OMF Clips** on page 105 for more information.

Organize P2

This option creates the file structure for P2 recording and moves the recorded P2 files into the appropriate folders in order to provide NLE applications with instant access to content.

The file structure consists of a main folder **CONTENTS** with the sub-directories:

- **VIDEO**,
- **AUDIO**,
- **CLIP**,

In addition, Organize P2 moves the

- MXF video files into the VIDEO folder,
- MXF audio files into the AUDIO folder,
- MXF XML files into the CLIP folder,

Note

After Organize P2 Copy Files to Another Disk

After performing an ORGANIZE P2 and BEFORE recording new material or deleting existing clips, copy the recorded files to another hard disk and run the FORMAT utility.

File Naming Conventions

The video files are then renamed to **XXXXZB.mxf**. where **XXXX** is an incremental value, **Z** is a randomly assigned character, **B** represents the format of the recorded content, and **AA** is the number of the audio channel.

Format	B
DVCPRO/DV	p
DVCPRO50	q
DVCPROHD	w

The audio files are then renamed to **XXXXZBAA.mxf**. where **XXXXZB** are identical to the companion video file and **AA** is the number of the audio channel.

x	Audio Channel	AA
L	1	00
R	2	01
A	3	02
B	4	03

Organize PINN DVCPRO/DV only

This selection organizes clips for use with Pinnacle Liquid series NLE systems. Products such as the Pinnacle file format were created for use with products such as Pinnacle Liquid Edition. The Pinnacle file format creates three files simultaneously during a recording; an AVI video file and two separate WAV audio files labeled as left and right. An additional ALE file for each recording session is also created which contains timecode data. This file must be kept with the media.

Once clips have been imported into Liquid Edition, an Index file is created on the disk drive for each clip. Do not delete this file since it is required to continue work in the particular project.

Make Ref MOV Version 4.x only



Final Cut Pro Users

The **MAKE REF MOV** utility must be performed before mounting FS-100 in Final Cut Pro (FCP). FCP modifies content files, after which they are incompatible with the FS-100 MAKE REF MOV utility.

This utility generates one or more QuickTime Reference Movie files for each video clip in **QUICKTIME**, **QUICKTIME PN**, and **QUICKTIME 24P** DTE file formats.

Creating the reference movie file streamlines the workflow for FCP users. In FCP, the reference movie file can be dragged into the appropriate timeline and all associated video and audio files are automatically utilized.

Note

Moving and Copying Reference Movie Files

When moving or copying the reference movie file, make sure to move or copy the content files to the same folder. The reference movie file must be in same folder as the content files.

Number of reference movie files generated per clip depends upon the HDD MODE and length of recording. A reference movie file is generated for approximately every 2 hours of content in a clip. See the following table for details:

Content Referenced per Reference Movie

HDD MODE	PAL Segments	NTSC Segments
DV/DVCPRO	12	16
DVCPRO50	24	32
DVCPROHD	48	64
DVCPROHD (VFR)	variable	(variable)

The maximum number of Reference Movies that can be generated at one time is 500.

File Name Convention


The file name convention for a QuickTime reference movie is:

RM-YYYYMMDD-HHMMSSrXX.MOV where the **RM-** denotes a reference movie file, **YYYYMMDD-HHMMSSr** matches the content files, and the **XX** denotes the reference movie file number.

When MAKE REF MOV utility starts the following screen appears:



The MAKE REF MOV utility may take several minutes to complete. When it is complete the completion screen appears:

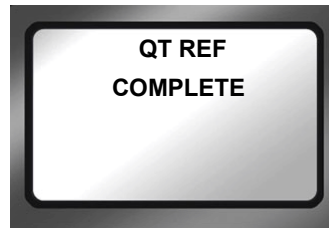

Delete Clip



Use this item to delete a selected clip.

1. From the Utilities screen, go to the **DELETE CLIP** screen.
2. Enter the number of the clip to be deleted using the **Up** and **Down** navigation buttons.
3. Press the **YES** function key.
The selected clip is deleted.
4. Press **BACK** to return to the **Utility** screen.

When a clip is deleted, the FS-100 re-organizes and displays the remaining clips in sequence. For instance, if there are three clips on the disk: 1-001, 1-002, 1-003. If clip 1-002 is deleted, the remaining clips are reorganized and clip 1-003 becomes clip 1-002. However the base file names are not affected.

Note

Use Delete Clip Sparingly

Using the delete clip can cause disk fragmentation that reduces disk drive performance and can impact both Playback and Record. To defragment the disk or if more disk space is needed:

- Transfer all content from the FS-100.
- Perform the **FORMAT** utility, see **Format Disk** on page 81.

Format Disk



Prevent lost frames due to file fragmentation by formatting the FS-100 before each recording session.



Save Files Before Formatting

The formatting process erases all data on the disk and is not reversible. Backup all files and clips on the FS-100 before formatting.

This selection formats the disk as follows:

1. From the Utilities screen, go to **Format Disk**.
2. Select **YES** to begin formatting.
A status screen displays progress of the formatting and at completion displays the message:
 - **Complete** indicating Repair Disk was successful.
 - **Aborted** indicating that there were errors and the repair did not complete.
3. Press **BACK** to return to the **Utility** screen.

Note

Formatting Larger Hard Disks

The FS-100 **FORMAT** utility automatically creates multiple partitions for larger hard disks.

Repair Disk



Use this function if a recording session does not complete properly and there is a question that the file may be damaged. For example, if recording terminates due to a loss of power to the FS-100.

Repair Disk scans the current partition checking for and repairing file errors and incomplete files. When the file is repaired it can be used in the NLE system.

The **Forward** and **Back Index** buttons can be used to locate the partition to repair.

Note

Corrupted Files May Need More Repairs

After running Repair Disk some files may still need further work to restore them. In such a case, run the utility Repair Clip, refer to the following page.

To repair a disk:

1. From the Utilities screen, go to **Repair Disk**.
2. Select **YES** and the FS-100 begins repairing the disk. A status screen displays the progress of disk repair and at completion displays the message:
 - **Complete** indicating Repair Disk was successful.
 - **Aborted** indicating that there were errors and the repair did not complete.
3. Press **BACK** to return to the **Utility** screen.
4. Move content from FS-100.
5. Use Format Disk utility before doing any further recording. This step optimizes disk storage, see **Format Disk** on page 81.

Repair Clip



Use this function to repair a specific file that may be damaged or incomplete. For example, recording terminates due to a loss of power to the FS-100 and a specific file may be damaged. Repair Clip scans the specified file checking for and repairing file errors and incomplete files. When the file is repaired, it then can be used in the NLE system.

1. From the Utilities screen, go to **Repair Clip**.
2. Enter the number of the clip to be repaired, using the **Up** and **Down** navigation buttons.
3. Press **YES** and the FS-100 begins repairing the file. A status screen displays the progress of disk repair and at completion displays the message:
 - **Complete** indicating Repair Disk was successful.
 - **Aborted** indicating that there were errors and the repair did not complete.
4. Press **BACK** to return to the **Utility** screen.
5. Move content from the FS-100.
6. Use Format Disk utility before doing any further recording. This step optimizes disk storage, see **Format Disk** on page 81.

Run Repair Clip after Organize P2

After repairing an organized P2 clip, again run the utility **ORGANIZE P2**, see page 76, to make the clip available for use with the NLE.

When performing a Repair Clip on an organized P2 clip, the clip FILE NAME is changed and moved to a pre-processing folder. This newly named clip is assigned the last clip number already issued by the FS-100 and the clip numbers of the clips after the repaired clip are incremented down by one.

For example, the FS-100 has four clips -- A(1), B(2), C(3), and D(4). **REPAIR CLIP** is performed on clip B(2). Clip B is assigned the last number used (4) and the other clips after B in the list have their numbers incremented down one: A(1), C(2), D(3), B(4).

File Name



This function **Displays** a file name but does not permit changing it.

1. From the Utilities screen, go to **FILE NAME**.
2. Enter the file's clip number using the **Up** and **Down** navigation buttons.
The base filename is dynamically displayed as a function of the clip number.
When a clip has multiple files, the first Base file name is displayed
3. Press **BACK** to return to the **Utility** screen.

Upgrade

Check Focus Enhancements website for upgrades and the latest software updates: www.focusinfo.com.

To upgrade system software:

1. Set the FS-100 to **DD Drive** mode from the **HDD Mode** screen and connect it to a computer.
2. On your computer, rename the XXX.bin file as **fs100.bin**.
3. Copy or drag the fs100.bin file to the FS-100 while it is in **DD Drive** mode.
4. Exit the FS-100 from **DD Drive** mode and navigate to the Utilities screen.
5. From the Utilities screen, go to Upgrade.
6. Press **Right**. The following screen appears.



7. Press **Select**.
8. A confirmation screen appears: press **YES** to continue. A status screen displays the progress of the upgrade.



- Up on successful completion of the upgrade, the FS-100 displays the message:



- Hold down the **STOP / POWER OFF** button until the FS-100 shuts down.
- Power up the FS-100.


Upgrade Errors

If the upgrade fails, the FS-100 displays one of the following messages:




Verify that the update is for the model of FS-100 it is being installed on. An update is not cross-platform and must be installed on the model for which it is intended.

To find the specific model of a FS-100 go to the **SETUP** screen and then version (**V 4.0.0**), refer to **Setup Screens** on page 57.

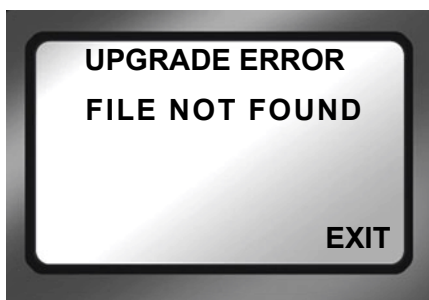

Verify that the upgrade file name is fs-100.bin and that it is in the FS-100 hard drive's root directory.

System Reset

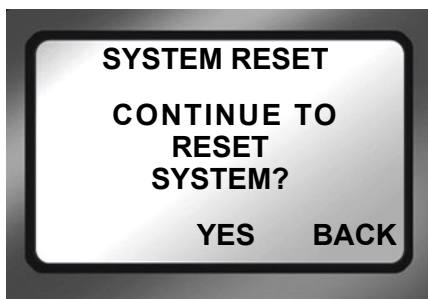

The System Reset feature restores the factory default settings for the FS-100 unit. This feature is useful for diagnosing problems with the unit.

System Reset



A System Reset can not be reversed.


Diagnostic



DO NOT CHANGE THE SETTINGS OF THIS FUNCTION


This function is included to assist Focus Enhancement Technical Support diagnose problems that may occur with the FS-100.

Status

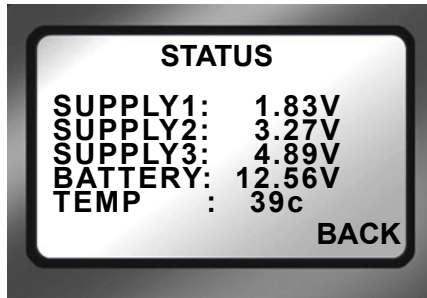

The FS-100 Status screen provides details of the systems power state as well as internal temperature. This screen may assist Focus Enhancements Technical Support in determining power and thermal problems with your unit.

Reels Screen

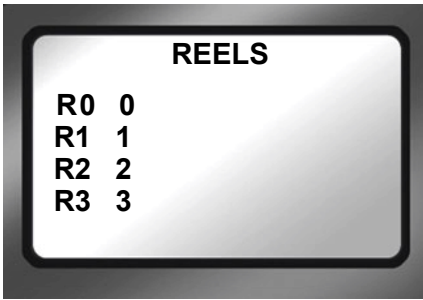

When a disk is formatted, the FS-100 creates 10 folders, numbered 0-9, on the disk. During recording or playback of a clip, it is possible to place it into folders or play it from up to 10 different reels.

These folders can have any name up to 10 characters in length. To name the folders it is first necessary to enter **DD Drive** mode and mount the FS-100 to a computer.

Placing a Clip in a Reel

From the Reels screen, choose the Reels as follows:

1. From the Utilities screen, go to Reels screen.

Values include:

- **FA R0-0** Default Value
- **FA R0-0** through R9-9 "Reel Name"

2. Select a reel from the list.

When selecting a REEL from this screen, the current track is marked with that REEL number. This can be done in any mode: record, stop, or playback.

Each of the function keys can be set to specific reel, making it possible to quickly switch between multiple reels: a total of three reels being the maximum. Refer to **Functions Screen** on page 71 for more information.

Using a Wired Remote Control



When using the optional wired remote control, use the button pad numbered 0-9 to mark the clips. Any additional button presses during a recording or playback, changes the selected REEL. Once a session is finished, select **ORGANIZE REEL** in **Utilities** screen. The marked clips are placed in the REEL in sequential order.

When a reel is selected, the Home screen menu displays the reel's name on the left side of the second to the last line of the screen, refer to **Local** on page 94.

iNote

Optional Wired Remote Control (p/n ACSS-0019-01)

To order the Wired Remote Control, go to Focus Enhancements website, www.focusinfo.com/sales/store/.

Play Screen



- **Play Clip**

In this mode, the FS-100 plays the selected clip from start to finish when you press the PLAY button. At the end of the particular clip, the FS-100 pauses.

- **Loop Clip**

In this mode, the FS-100 plays the selected clip from start to finish. Immediately after completing the clip, the FS-100 begins playing the clip again without a pause. It stays in this state until stopped.

- **Loop All**

In this mode, the FS-100 plays the entire contents of the disk (all clips), in order, from start to finish. At the end of the last clip, the FS-100 begins to play from the beginning of the first clip again without a pause. It stays in this state until stopped.

- **Play All**

In this mode, the FS-100 plays the entire contents of the disk (all clips) in order, from start to finish. At the end of the last clip, the FS-100 pauses.

Play From Screen



This screen permits the selection of from where clips playback. There are two choices:


- **Tracklist**

Clips playback in the order in which they were recorded. Playback order is based on the order of the file names.

- **Reel**

Clips in a selected folder are played back. This function provides the ability to choose between any folders on the disk. Folders can appear with their user assigned folder name (if used).


Control Screen

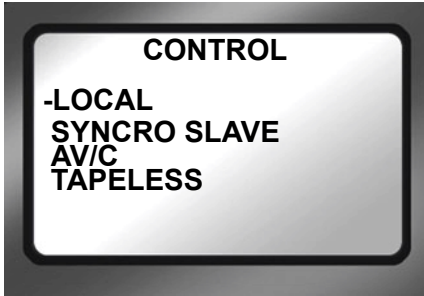

The Control screen provides the capability of enabling the FS-100 to operate in five different control modes during record and playback.

- **Local**

Local control mode ignores record triggers from the camcorder and is controlled exclusively from the FS-100 front panel or the optional wired remote control unit.

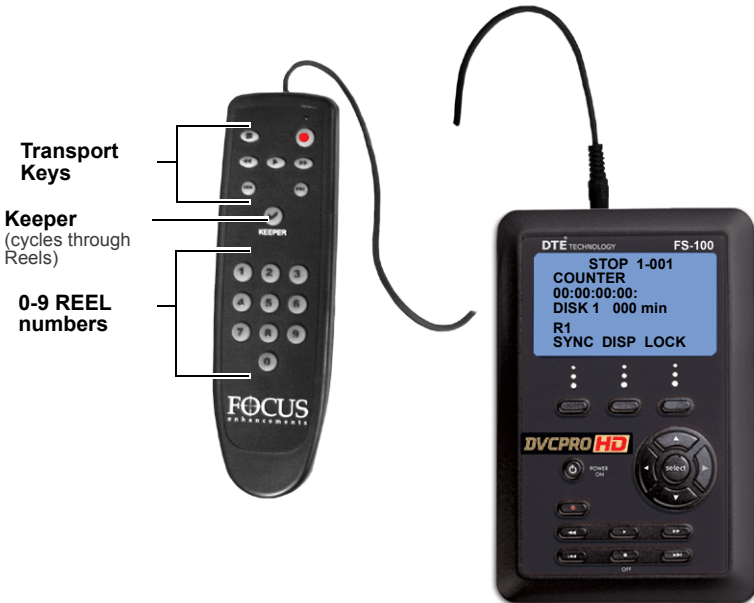

- **Transport keys** have the same functions as on the FS-100.

- Use the **Keeper** ✓ key to cycle through the available Reels. For example, if the current Reel selection is 3, pressing **Keeper** changes the selection to Reel 4.

To purchase the wired remote control, p/n **ACSS-0019-01**, for the FS-100, visit Focus Enhancements web site at www.focusinfo.com/sales/store/.

- **Syncro Slave**

Use this mode when the camcorder does not have FS-100 compatible external control or the tapeless trigger functionality. In **Syncro Slave** control mode, the FS-100 mimics the camcorder's operations by monitoring the camcorder's tape record state.

- **AV/C**

Note

Do Not Use AV/C control in Record Mode

Use AV/C in playback mode and other situations where the FS-100 is controlled by an external FireWire device such as a NLE system that is not supported by Direct To Edit Technology. In these cases, the FS-100 can be used in a manner similar to a camcorder to capture footage to the NLE.

- **Tapeless Control**

The Tapeless Control mode allows the FS-100 to be controlled from a camcorder, if it features a FS-100 compatible Tapeless control setting separate from the tape transport. It is recommended to use this control mode with the companion camcorder, the Panasonic AG-HVX200.

Note

Camcorder Requirements for Tapeless Control Mode

Tapeless Control mode will not work unless it is supported by the camcorder and the camcorder is placed in this external control mode. Please refer to Configuring AG-HVX200 and Recording on page 37.

LCD Display Symbols and Text

The table below shows the different symbols and states displayed on the top line of the LCD when used with different FS-100 control, record, play and stop modes:

PLAY/REC MODE	FS-100 LCD
Stop	STOP
Pause	II PLAY
Play	▶ PLAY
Rec (Pause)	II REC
Normal Rec (Rec)	REC
PRE-REC Disk (Stop)	P STOP
PRE-REC Disk (Standby)	P REC
PRE-REC Cach (Stop)	C STOP
PRE-REC Cach (Standby)	C REC
Loop Record (Stop)	L STOP
Loop Record (Standby)	L REC
Loop Record (Rec)	L REC
Snap (Stop)	STOP
Snap (Standby)	II SNAP
Snap (Rec)	II SNAP
Time Lapse (Stop)	STOP
Time Lapse (Pause)	II T REC
Time Lapse (Rec) T	REC
AV/C* (Stop)	A STOP
AV/C* (Rec Pause)	II A ● REC
AV/C* (Rec)	A ● REC
AV/C* (Play Pause)	II A PLAY
AV/C* (Play)	A ALL
Syncro Slave (Pause)	II Y ● REC
Syncro Slave (Rec)	Y ● REC

PLAY/REC MODE

Tapeless (Pause)

Tapeless (Rec)

FS-100 LCD

II E ● REC

E ● REC

* AV/C is only for use when the FS-100 is connected to a computer system.

Using the FS-100 with a Computer

Once video clips are recorded to the FS-100 it is possible to use those clips in most computer based DV/HD NLE systems. This section contains the following:

Initial Setup	100
Mounting the FS-100 in Windows	101
FS-100 and FAT 32	104
Using Avid OMF Clips	105
Dismounting the FS-100 (Windows)	108
Mounting the FS-100 (Macintosh)	109
Dismounting the FS-100 (Macintosh)	110

In the past, to get footage into an NLE system, it was necessary to capture / digitize the footage using a video capture card. For most DV and some P2 compatible NLE systems, FS-100 DTE functionality eliminates the capture stage. All that is necessary is the moving of the video files from the FS-100 to a computer.

Note

Recording for Unsupported NLE

If a desired NLE is not supported by Focus Enhancements DTE, it is necessary to use the AV/C control to capture the video footage for editing. For more details refer to **Control Screen** on page 94.

To move video files from the FS-100 to a computer:

- Connect the FS-100's **Computer I/O** 1394 port directly to a computer with an active OHCI compliant IEEE-1394 FireWire port and the necessary FireWire disk drive drivers.

Note

For More Information

Go to the FOCUS Enhancements' website (www.focusinfo.com) for more compatibility information.

- To use the FS-100 HDD Bypass mode, refer below for more information.

The FS-100 is compatible with any computer system that can read FAT 32 volumes, such as Windows 98SE/ME/2000/XP and Mac OS9/OS10.

Initial Setup

1. Connect the FS-100 through its **COMPUTER I/O** 1394 port to the computer system using a standard 6-pin to 6-pin FireWire cable.
2. Enter HDD mode and enable DD Drive.
This step is required before mounting the FS-100 to a computer.
 - On the FS-100 go to the **HDD** screen.
 - Select **DD Drive** and **Right** arrow to **Connect** screen.
 - Press **Enable** function button.


Refer to the section, **Format Screen** on page 52

3. Connect power to the drive if necessary.
4. Consult the computer's documentation for more information.


Mounting the FS-100 in Windows

Use this procedure for Windows XP, 2000, 98SE and ME.


1. On a Windows-based computer system, double click the **My Computer** icon on the top left hand corner of the desktop. A directory window appears.

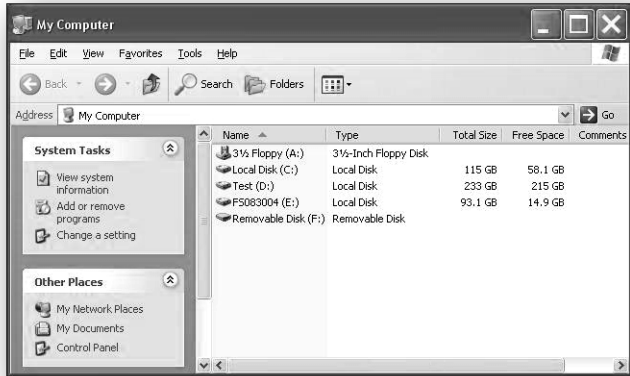

2. Locate the FS-100 drive and open it.
Often, it appears as a standard FireWire disk drive and may be labeled E:, F:, G:, and so on.
3. Open the FS-100 disk icon.
4. Open the folder with the most recent date code.

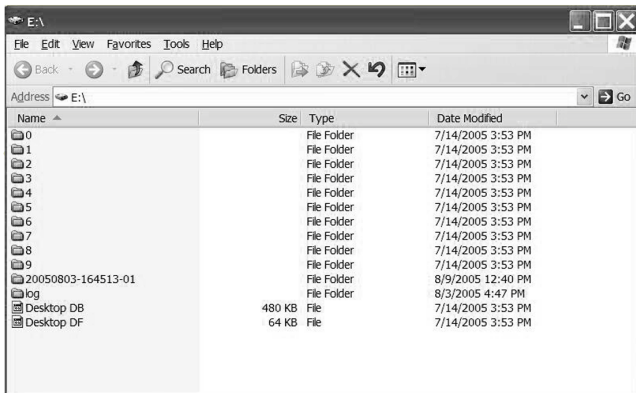

This folder may contain several different files. The video clips can appear as:

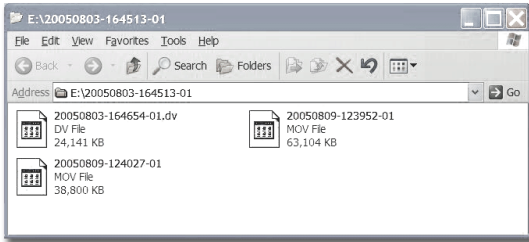

- RawDV (.dv)
- AVI Type 1 - (YYYYMMDDHHMMSSa01.avi)
- AVI Type 2 or AVI Type 2 24p - (YYYYMMDDHHMMSSb01.avi)
- Canopus AVI - (YYYYMMDD-HHMMSSb01.avi)
- Matrox AVI - (YYYYMMDD-HHMMSSm01.avi)
This file has a separate .wav audio file per track.
- QuickTime or Quicktime 24p (.mov)
- Pinnacle - (YYYYMMDD-HHMMSSp01)
There are two separate .wav audio files per track.
- Avid OMF (.omf)
OMF has two separate .aif audio files per track.
- P2 - (YYYYMMDD-HHMMSSp01.mxf), (YYYYMMDD-HHMMSSL01.mxf), - (YYYYMMDD-HHMMSSR01.mxf) where:
p is video,
L is the left audio channel,
R is the right audio channel,

Note

FS-100 Video Clips in Reel Folder

FS-100 permits the storing of video clips in either the standard file folder or a Reel folder. If video clips have been assigned to a Reel folder, it is necessary to run Organize Reels before attaching the FS-100 to a computer.

HD Resolution and Frames

- P2/MOV: YYYYMMDD-HHMMSS**X**01.mxf (and .mov in version 3.x or 4.x) where the **X** in the filename is a letter that indicates the recording format of the captured video file. The table below lists letters and associated resolutions.

Format	B
DVCPRO/DV	p
DVCPRO50	q
DVCPROHD	w
DVCPROHD 720/30 PN	i
DVCPROHD 720/24 PN	j
DVCPROHD 720/25 PN	k

- In addition, P2 also has 4 audio files:

YYYYMMDD-HHMMSSL 0 1.mxf	Left Channel
YYYYMMDD-HHMMSSR 0 1.mxf	Right channel
YYYYMMDD-HHMMSSA 0 1.mxf	A Channel
YYYYMMDD-HHMMSSB 0 1.mxf	B Channel

QuickTime Reference Movies

FS-100 4.x supports QUICKTIME reference movies. Using **UTILITIES > MAKE REF MOVIE**, creates one or more QUICKTIME reference movies for each QUICKTIME clip on the FS-100.

RM-YYYYMMDD-HHMMSSrXX.MOV where **RM-** denotes a reference movie file, **YYYYMMDD-HHMMSS** matches the content files, and **XX** indicates the reference movie file number.

Note

Content limit per Reference Movie

There is a content duration limit of approximately 2.0 hours per QUICKTIME Reference Movie.

FS-100 and FAT 32

The FAT32 file system limits file size to a maximum of 2GB which, depending on record mode and resolution, approximately equals the following minutes of video:

DVCPRO/DV	9 minutes
DVCPRO50	4.5 minutes
DVCPROHD	2.2 minutes
DVCPROHD PN	4.5 minutes

When clips exceed 2GB in size, the FS-100 automatically creates a new, file without dropping any frames. The two files have the same root filename but have different two digit suffixes that indicate the order of their creation, -01, -02, and so on. This process can produce as many sequential 2GB files as the drive can hold.

With most DV and many P2 compatible NLE systems on Windows or Macintosh computers, it is possible to use clips within the timeline. Select the clips on the source volume, i.e. the connected FS-100, and import them directly into the NLE bin.

This makes clips immediately available in the NLE timeline.

The high transfer speed of the FS-100 drive permits direct streaming of the clips to the NLE, thus eliminating the need to copy or transfer the clips before their use.


Using Avid OMF Clips

These steps are required when using Avid OMF formatted clips.

The Avid OMF file format was developed for use with Avid editing products on Windows 2000, Windows XP or Mac OS X.

These products include Avid Xpress Pro, NewsCutter, and Media Composer Adrenaline (with the DV option).

The Avid OMF file format creates three files simultaneously; one OMF video file and two separate AIF audio files. On the computer's desktop, the files appear similar to those shown below.

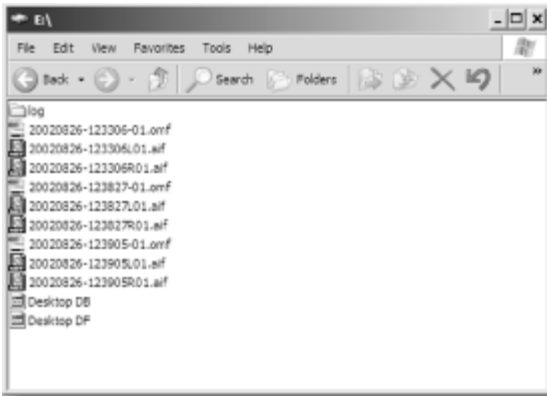

On the FS-100, the video file (OMF) and the audio files (AIF) appear as one track.

When an Avid OMF file is deleted, the FS-100 deletes the audio and video portions at the same time.


To use a FS-100 recorded Avid OMF file on an Avid NLE system, use the following procedure.

iNote

ORGANIZE OMF Function

If using the ORGANIZE OMF function on the FS-100 before connecting it to a computer, steps 2 and 3 are not necessary

1. Locate and open the FS-100 drive folder.
2. Create a new folder and name it **OMFI MediaFiles**.
3. To do this in Windows, select **File>New>Folder** .
4. To do this with Macintosh, select **File>New Folder**. Next, type **OMFI MediaFiles**.
5. Drag all the OMF and AIF files into the new folder:
Do Not Drag in the files titled Desktop DB or Desktop DF.
6. Launch Avid.
7. Open an existing project or create a new one.
8. Select **Tools>MediaTool**. A screen similar to the following appears:

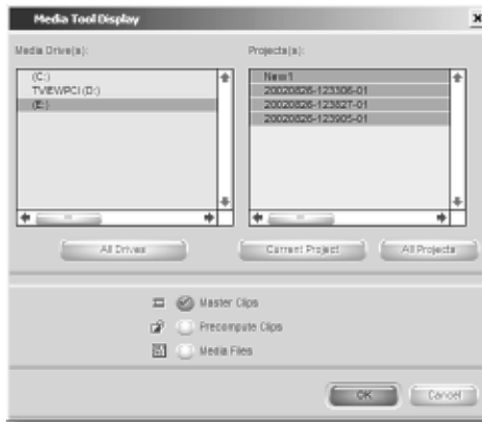


9. Locate and select the FS-100 under Media Drive(s).

iNote

If Drive Does Not Appear

If the drive does not appear, check to make sure that the OMF1 MediaFiles folder was created correctly with proper case and spacing. In addition, verify that the drive is properly connected and recognized by the computer. Under **Project(s)**, select **All Projects** (This highlights all items in the Project(s) window).

10. Verify that Master Clips is checked and press **OK**. The Media Tools Window, similar to the following, appears:

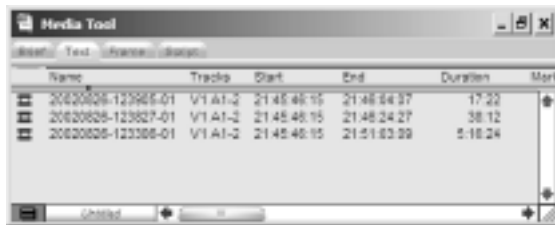

11. Create a new bin (select **File** -> **New Bin**) or open an existing bin in Avid.
12. Select all items in the Media Tools window (select **Edit**> **Select All**).
13. Drag the contents of the Media Tools Window into the bin. It is now possible to use these clips in the Avid timeline.

Dismounting the FS-100 (Windows)

When finished working with the FS-100 and the computer, it is necessary to dismount FS-100 from the system



Dismount FS-100 Before Powering Off

It is important to dismount the FS-100 from the Windows system BEFORE powering down the unit.

To do dismount the FS-100:

1. Click the **Safely Remove Hardware** icon at the bottom right side of the Windows task bar as shown below.



**Unplug or Eject Hardware Icon
(Safely Remove Hardware)**

2. Next, the computer system prompts to remove the connected FS-100. This begins the dismount process.
3. Select the message and click on it.
The computer dismounts the FS-100 and then displays a message that it is now safe to remove the unit.

Mounting the FS-100 (Macintosh)


1. Start the Mac computer and connect the FS-100's **COMPUTER I/O** port to the computer using a standard 6-pin to 6-pin FireWire cable.

When mounted, the FS-100 should appear on the computer's desktop as shown below:



The FS-100 appears as a FAT32 volume with a PC label.

2. Locate the FS-100 on the desktop and open it up.
3. Open the folder with the most recent date code (for example, "20050127-110345-01"). It should look similar to the following:

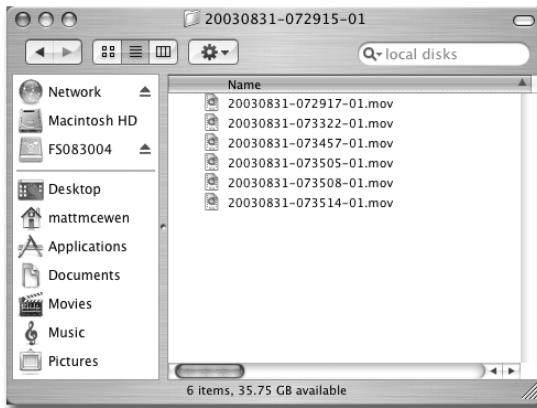

iNote

Before Connecting FS-100 to a Computer

If clips have been assigned to a Reel folder: perform an **Organize Reels** before connecting the unit to a computer.

Dismounting the FS-100 (Macintosh)

When finished working with the FS-100 and the Macintosh it is necessary to dismount the unit from the system.



Dismount FS-100 Before Powering Off

It is important to dismount the FS-100 from the Mac system BEFORE powering down the FS-100.

To dismount the FS-100 from a Mac:

1. Select the FS-100 on the computer's desktop. It is marked with a PC symbol.
2. Drag the drive into the trash or use the eject button. This dismounts the particular disk drive.
3. It is now safe to remove the FS-100.

Note

Short-cut for Two-Button Mouse

If the Macintosh is equipped with a two-button mouse, the following shortcut is possible:

Right click the **FS-100 icon** on the desk top.

Select the **Eject** function from the pop-up menu.

Mounting Hardware

Mounting FS-100 to a Camcorder

Mount the FS-100 to your camcorder using the optional Camcorder Mount Kit (P/N ASYF-0849-01). For more information about this kit or to order it, contact Focus Enhancements:


USA

Email: support@focusinfo.com
Telephone: +1 408 866 8300
Address: Focus Enhancements, Inc.
1370 Dell Avenue
Campbell, CA. 95008
www.focusinfo.com

EMEA (Europe, Middle East, Africa)

Email: techsupport@como.com
Telephone: +49 4307 - 83 58 58
Fax: +49 4307 - 83 58 99
Address: COMO Computer & Motion GmbH
A Focus Enhancements Company
Lise-Meitner-Str. 15
24223 Ralsdorf / Germany
www.focusinfo.com

Clipping to a Belt

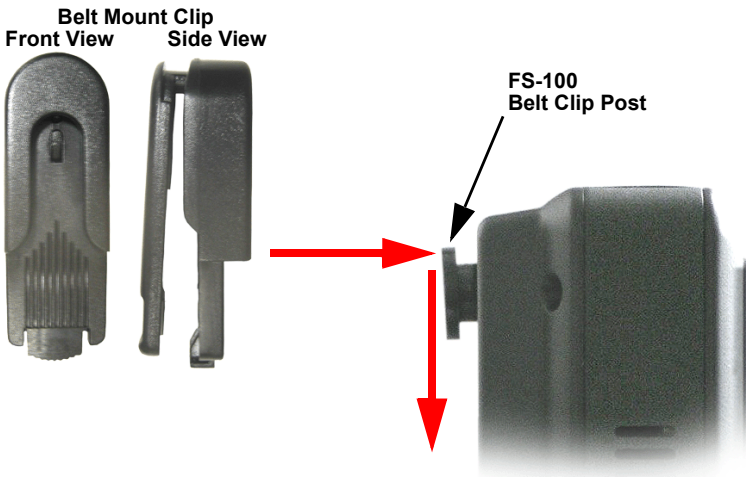

A belt mount clip is included with the FS-100. This mount is similar to those used with cellular telephones. Attach the belt mount to the belt clip post on the rear of the FS-100 and push it down to lock it in position. The belt clip can ratchet to various positions when attached to a belt.

Technical Specifications

Specifications are subject to change.

Physical Description

- Dimensions: 1.59" x 5.6" x 3.74" (40mm x 142mm x 95mm)
(with normal 90 minute Battery)
- Weight: 1 lb. (.45 kg)

Input/Outputs

- DV Video I/O - 400Mb/s (1x 6-pin IEEE-1394)
In **DVCPROHD REC** mode the unit accepts 720P and 1080i video from DVCPROHD compatible devices, such as the Panasonic AG-HVX200 camcorder.
- FireWire Computer I/F - up to 400Mb/s (1 x 6-pin IEEE-1394)
- Supported inputs for DVCPROHD, DVCPRO50, DVCPRO/DV:

DVCPROHD

4:2:2, 8-bit, 6.7:1 compression, 100Mb/s
1080 60i (30P, 24P, 24PA), 720 60P (30P, 24P)** NTSC model
1080 50i (25P) , 720 50P (25P)** PAL model

() pull down format - (same stream)

** The 720 24PN, 25PN, and 30PN recordings are supported in versions 3.x and 4.x. These are generated from the 720 24P/25P/30P as an input. The PN modes are not supported as input streams.

DVCPRO50

4:2:2, 8-bit, 3.3:1 compression, 50Mb/s
480 60i (30P, 24P, 24PA) NTSC model
576 50i (25P) PAL model

() pull down format - (same stream)

DVCPRO/DV

4:1:1, 8-bit, 5:1 compression, 25Mb/s (DV-PAL Is 4:2:0)
480 60i (30P, 24P, 24PA) NTSC model
576 50i (25P) PAL model
*() pull down format - (same stream)

- GPI & RS-232C Control (1 x 3.5mm mini jack)

Power

- 15V DC, 7.5W
- Mini-jack power connector
- Custom Removable Li-ion Rechargeable Battery Pack (90 minutes estimated run-time)

Audio/Video/Timecode Specification

- 25Mb/s and 50 Mb/s, 8-bit 4:1:1 (NTSC-DV) or 4:2:0 (PAL-DV) video (model dependent). The DVCPROHD REC (100 Mb/s) mode supports 720 50p/60p and 1080 50i/60i (model dependent) from DVCPROHD camcorders with a 1394 interface.
- DV Embedded Timecode (Drop or Non-Drop)
- DV audio:
DVCPROHD input, audio is embedded 4-ch, 48kHz, 16-bit.
DVCPRO50 input, audio is embedded 4-ch., 48kHz, 16-bit.
DVCPRO/DV input, audio is embedded 2-ch., 48kHz, 16-bit or 4-ch., 32-khz, 12-bit.

iNote

DTE only supports 4-channel. 12-bit, 32kHz audio with the RawDV file format.

DTE File Formats

- DVCPRO/DV mode:
 - Raw DV,**
 - AVI Type 1,**
 - AVI Type 2,**
 - Matrox AVI,**
 - Canopus AVI,**
 - QuickTime,**
 - AVID OMF,**
 - AVI Type 2 24p NTSC only,**
 - QuickTime 24p NTSC only,**
 - Pinnacle,**
 - P2,**
- DVCPROHD and DVCPRO50 modes:
 - P2**
 - P2 PN DVCPROHD with 3.x or 4.x only**
 - QUICKTIME with 3.x or 4.x only**
 - QUICKTIME PN DVCPROHD with 3.x or 4.x only**
 - RAW DV**

Disk Information

- Internal Disk Type: 5400RPM, 8 MB cache. See **www.focusinfo.com** for available hard drive capacities.
- Disk Format: FAT32
- FS-100 compatible with Windows 98SE, ME, 2000, XP and Mac OS9/10.

Log Files

With each recording of a particular clip on a disk, the FS-100 creates a text log file to identify information about the recorded clip and the recording session. Information includes:

- Clip name
- Clip in/out source TC values
- Clip duration
- Clip type (record file type).

The log file also identifies when the shock cache becomes low and when disk or other errors occur during a recording.

Error Messages

Error messages may appear on the FS-100 LCD display from time to time. The purpose of these messages is to alert you to action that may effect your FS-100 operation. Below is a list of error messages and actions you can take:

Error Message	Description	Action
LOW BATTERY!	Battery power is low.	Connect AC Power or replace the battery pack.
HIGH TEMPERATURE!	The unit is getting too hot for normal operation.	Make sure the vent and fan intake holes are clear.
NO SPACE LEFT!	The Disk Drive is Full.	Transfer files off the drive and format it before attempting to do more recording.
DISK ERROR XXX	Lost Disk Communication.	Contact Focus Enhancements Technical Support.
NO DISK DETECTED	Lost Disk Communication.	Contact Focus Enhancements Technical Support.
WRONG PRODUCT ID	Incorrect Software Loaded.	Download correct software and perform upgrade again.
FILE NOT FOUND	Wrong filename or missing file.	Check filename or that upgrade file exists.
AUDIO MUTE	Record or Playback with VF mode set to 24, 25 or 30 is muted for the PN DTE formats (QuickTime PN and P2 PN).	This is normal. No action is required

Miscellaneous Files

fwxdc.dat

The fwxdc.dat file is a cache file used to improve file read performance during playback of recorded video and audio. It is located in the root directory of the FS-100's hard drive.

Warranty

- 2 years, FS-100
- 90 days, accessories including the battery

Shock and Vibration

- Operating 50cm / Non operating 100cm
- 5Hz to 60Hz 1G constant

Temperature

- Operating: 0-35° C (35 - 95° F)
- Operating humidity: 30% to 90% RH
- Storage temperatures: -20 to 60° C (-4° to 140°F)
- Storage humidity: 85% RH or less

Compatible Camcorders and Accessories

For a list of tested camcorders, refer to www.focusinfo.com.

Numerics

1080 50	113
1080 50i	12, 45, 114
1080 60i	12, 45, 113, 114
1080i	12, 54
1394	
cable	2
OHCI port	100
24p	3, 19, 53, 102, 113, 114, 115
AVI type 2	19
AVI type 2, file name format	102
QuickTime, file name	102
24pa	113, 114
25p	113, 114
DV	29
formats	53
OMF not compatible	53
25PN	113
30p	113, 114
30PN	113
480 60i	12, 113, 114
576 50i	12, 113, 114
720 24p	45, 66, 69
720 24PN	113
720 25p	45, 66
720 30p	45, 66
720 50p	12, 45, 113
720 60p	12, 45, 113
720 PN	37, 54
720p	12, 54

A

aborted	81, 83
absolute timecode	45
Adobe	1
Adrenaline	105
AG-HVX200	1
configuring camcorder	37
DVCPRO/DV	54
DVCPRO50	54
DVCPROHD	54
FireWire connector	25
input stream	26
non VFR mode	38
playback mode	40
PN modes	37
recording with camcorder	37
tapeless control mode	32
tapeless control requirements	95
VCR mode	40
VFR settings, NTSC	38
VFR settings, PAL	38
video output specification	113
AIF	
file	76, 105
track	102
alarm	
disabling	15
disk capacity	15
group default	57, 60
off	15
power	15
temperature	15
ALE file	77
Apple, see QuickTime	
application	1
Adrenaline	105
Avid Xpress Pro	105
Media Composer	105
NewsCutter	105
application, edit	64
assigning clips to reels	74
asynchronous data I/O	11
audio	
4-channel, 12-bit, 32kHz	12
AIF file	105

embedded 2-channel	12
embedded 2-channel, 16-bit, 48kHz	12
embedded 4-channel	12
input for DV	12
input for DVCPRO	12
input for DVCPRO50	12
input for DVCPROHD	12
message	116
muted during playback	33
not recorded in VFR mode	38
auto detect, input stream	26, 53
AV/C	32
do not use in record modes	32
LCD displays	97
AVI	
Canopus	3, 19, 29, 52, 102, 115
Matrox	53, 102, 115
Pinnacle	3, 19
type 1	19, 52
type 1, file name	102
type 2	19, 52
type 2 24p	19, 53
type 2, default DV file format	29
type 2, file name	102
Avid	1
deleting OMF file	105
editor's media tool	76
OMF	3, 19, 53, 76, 102, 115
OMF and AIF appear as one track	105
OMF, creates three files	105
organize OMF files	76
timeline	76, 107
using OMF clips	105
using OMF formatted clips	105
Xpress Pro	105

B

back index	9
back search	8
base frame rate	66, 67
display	44
NLE timeline	69
real-time recording	69
undercranking	68

battery	
charge status LED	10
compartment	13
error message	116
high capacity	23
installing	22
Li-Ion	2
operation with	21
operation without	21
removing	22
uncharged	23
usage	24
belt clip	13
bottom panel	15
buttons	
navigation	7
power off	9
transport control	7

C

cable	
1394, FireWire	2
RS232C	61
cache, shock	116
camcorder	
counter not incrementing	33
displaying timecode	44
mounting a FS-100	111
tapeless recording	32
camera	
mount kit	3
recording setup	37
Canopus	1
AVI	3, 19, 29, 52, 102
AVI, DTE, file format	115
AVI, file name format	102
capture single frame	61
capturing individual frames	50
charging status	10
clip	
assigning to reel	74, 90
choosing between folders on disk	93
deleting	80
displaying first frame	61

displaying set user bit	45
marking	74
re-organizing	80
repair	83
saving loop record clips	50
selecting for playback	93
skipping forward to next clip	9
using back index	9
components, missing or damaged	2
configuring the AG-HVX200 camcorder	37
connecting FS-100 to ac power	21
connector, dc power	15
continuous loop	49
contrast	70
control	17
tapeless mode	32
wired handset	91
controls, front panel	6
conventions, file naming	77
counter not incrementing	33

D

damaged components	2
date and time must be set	58
DB-9 cable	11
dc power connector	15
DD Drive	55
DD drive	19
default	
alarm group	57, 60
DV file format	29
EXT CTL	57
FA functions	43, 72
FB functions	43, 72
FC functions	43, 73
FS-100 factory settings	88
LCDlight group	57, 60
reel number	90
speed, back search	8
speed, fast forward	8
speed, forward search	8
speed, reverse	8
stop group	57, 61
syncro slave mode	35

TC group	58, 62
defragment	80
deleting	
clip	80
OMF file	105
stored timecode	62
dimensions	113
direct-to-edit, see DTE	
disk	
error message, lost communication	116
error, no disk detected	116
error, no space left	116
fragmentation	80
repair	81, 82
save files before formatting	81
specifications	115
disk capacity alarm	15
dismounting FS-100 from Macintosh	110
dismounting FS-100 from Windows	108
DISP	44
displaying	
base frame rate	44
first frame of clip	61
remaining recording time on disk	44
timecode during manual recording	34
timecode generated by external device	44
user bit value of clip	45
drop-frame	65
drop-frame modifies timecode calculation	65
DTE	3, 114
eliminates pre-edit	1
file format	115
QuickTime	3
QuickTime PN	3
DV	19
audio input 2-channel, 16-bit, 48kHz	12
audio input 4-channel, 12-bit, 32kHz	12
default file format	29
displaying a track's timecode	44
raw	52
SNAP	47
timecode	114
video I/O	113
DV I/O specification	113
DV24p	29
DVCPRO/DV	

24p	114
24pa	114
25p	114
30p	114
480 60i	114
576 50i	114
AG-HVX200	54
approximate recording time	104
file name conventions	77
file types	3
inputs	12, 114
organize OMF files	76
organize PINN files	77
outputs	114
REC, HDD mode	19
recording time, PRE-REC Cach	48
standard definition resolution	45
standard resolution	45
DVCPRO50	
480 60i	113
576 50i	113
AG-HVX200	54
approximate recording time	104
DV formats	52
file name conventions	77
file types	3
inputs	12, 113
outputs	113
REC, HDD mode	19
recording time, PRE-REC Cach	48
resolution	45
DVCPROHD	
1080 50	113
1080 50i	114
1080 60i	113, 114
1080i	54
25p	113
30p	113
720 50p	113
720 60p	113
720 PN	54
720p	54
AG-HVX200	1, 54
approximate recording time	104
approximate recording time, PN mode	104
DV formats	52

file name conventions	77
file types	3
FireWire connector from camera	12
inputs	12, 113
ouputs	113
REC mode	12
REC, HDD mode	19
recording time, PRE-REC Cach	48
resolution	45

E

editing application	1
electrical shock	vi, ix
recovering LCD display	6
warning symbol	v
embedded audio	
2-channel	12
2-channel, 16-bit, 48kHz	12
4-channel	12
error	
audio mute	116
file not found	88, 116
high temperature	116
lost communication with disk	116
low battery	116
messages	116
no disk detected	116
no space left on disk	116
upgrade	87, 88
wrong product id	87, 116
EXT CTL	61
EXT CTL FRAME	50, 61
EXT CTL group default	57

F

FA	
default reel number	90
SYNC, default FA functions	72
fast motion, see undercranking	
FAT 32	104
FB DISP, default FB functions	72
FC LOCK, default FC functions	73
FCP, streamlining workflow	78

file	
AIF	105
ALE	77
fs-100.bin	88
Pinnacle index	77
recording timecode	39
save before formatting disk	81
file name	
determining order of playback	93
error, wrong file name	116
file name format	
AVI, Canopus	102
AVI, type 1	102
AVI, type 2	102
AVI, type 2 24p	102
conventions	77
DVCPRO/DV	77
DVCPRO50	77
DVCPROHD	77
Matrox	102
MXF	103
P2	102
Pinnacle	102
QuickTime	102
QuickTime 24p	102
RawDV	102
file name screen	85
file not found	116
files, log	116
Final Cut Pro	78
FireWire	
cable	2
I/O connector to camera	12
I/O connector to computer	11
firmware version	60
first frame of clip	61
format, file names	77
formatting disk	81
forward index	9
forward search	8
fragmentation	80
frames per second, VFR mode	44
front panel controls	6
front panel keys, lock/unlock	74

FS-100	
charging battery	23
connecting to ac power	21
connecting to computer	55, 56
dismounting from Macintosh	110
dismounting from Windows	108
features	3
front panel controls	6
initial setup with computer	100
LCD display symbols and text	97
lock/unlock front panel keys	74
menu system	16
mounting in Windows	101
mounting on Macintosh	109
mounting to camcorder	111
operation with battery	21
operation without battery	21
physical description	113
playback	40
power on	27
setting up master and slave drives	56
warranty	117
fs-100.bin	88
function	
drop-frame	65
FA default	43, 72
FB default	43, 72
FC default	43, 73
list	72
organize OMF	106
organize reels	102
selections	17
function buttons	6
functions	18, 72

G

GPI	114
group default	
alarm on	57, 60
EXT CTL	57
LCDlight on	57, 60
stop no video	57, 61
TC Drop	58, 65
TC EXT	58, 62

H

hardware for mounting FS-100 to camcorder	111
HD resolution and frames	103
HDD mode	19
screen	54
storing multiple record modes and file formats	29
high capacity battery	23
high temperature	116
home	17, 27
humidity	
operating	117
storage	117

I

identifying master/slave volumes	55
IEEE-1394a	11
incoming frame rate	44, 67
NLE	69
overcranking	68
real-time recording	69
undercranking	68
incorrect software loaded	116
index	
back	9
forward	9
index file	77
indicator	
record mode	47
individual frames, recording	50
initial setup	100
input stream	
auto detect	26
base frame rate	66
frames per second	44
installing the battery	22
internal speaker	15
isochronous	12

K

kit, camera mount	3
-------------------------	---

L

LCD	
contrast	70
recovering display	6
LCD Contrast	70
LCD display	6
LCD displays	97
LCDlight	
group default	60
LCDlight, group default	57
LED	
charge status	10
operation status	10
Li-Ion battery	2
local	
PRE-REC Cach	48
record	32
recording in SNAP mode	50
locking front panel keys	74
log files	116
longer recording times	55
loop	
continuous recording	49
record	47
record, LCD displays	97
record, saving clips	50
low battery	116

M

Macintosh	
dismounting FS-100	110
mounting FS-100	109
manual recording, displaying timecode	34
mark video clips	74
marking, scene	4
master	56
master/slave	
indentifying volumes	55
setting up	56
Matrox	1
AVI	3, 19, 53, 115
AVI, file name	102
WAV	3

Media Composer	105
menu screens	16
messages, error	116
missing components	2
modes	
DD Drive	56
DV24p	29
loop record	47
PAL 25P	29
pause	9
play	9
PN	37
PRE-REC Cach	48
PRE-Record	4
record, AV/C	32
record, local	32
record, syncro slave	32
record, tapeless	32
SNAP	50
stop	9
mounting FS-100 in Windows	101
mounting FS-100 on Macintosh	109
MOV	
QuickTime	3
QuickTime 24p	3
MXF, file name format	103

N

navigation controls	7
NewsCutter	105
NLE	
default format	29
DV	1, 29
media source	3
P2	1
preparing P2 files for editing	39
selecting preferred format	29
timeline	69
unsupported	99
using VFR recordings in	69
no disk detected	116
no space left	116
non-linear editor, see NLE	
non-VFR mode	38

normal	47
REC, LCD display	97
NTSC	
AG-HVX200 VFR settings	38
fast forward speeds	8
inputs for DVCPRO/DV	12
inputs for DVCPRO50	12
inputs for DVCPROHD	12
reverse speeds	8
TC Drop	58, 65
UB	44

O

OHCI port	100
OMF	106
AIF files	102
organize	76
track	102
OMFI media files	76, 106
operating humidity	117
operating system, FAT 32	104
operation	
status LED	10
with battery	21
without a battery	21
organize	
OMF	76, 106
P2	39, 76
PINN	77
reels	75, 102
OS, see operating system	104
outline, menu and options screens	17
overcranking	68
FS-100 playback	68
incoming frame rate	68

P

P2	19, 52, 53
file name format	102
organize files	76
PN	3, 52
preparing for editing in NLE	39
PAL	

AG-HVX200 VFR settings	38
fast forward speeds	8
feature availability	40
inputs for DVCPRO/DV	12
inputs for DVCPRO50	12
inputs for DVCPROHD	12
reverse speeds	8
PAL 25P	29
Panasonic HVX200, see AG-HVX200	
panel	
bottom	15
front, controls	6
rear	13
side	14
pause	9
LCD display	97
physical description	113
PINN, organize	77
Pinnacle	1, 19, 53, 115
ALE file	77
AVI	3, 19, 77
file name	102
index file	77
Liquid Edition	77
organize PINN files	77
timecode	77
WAV	3, 77
play	8, 17
LCD display	97
skipping forward to next clip	9
play from	17
screen	93
playback	
AG-HVX200	40
displaying embedded DV timecode	44
identifying master/slave volumes	55
order of playback	93
status LED	10
using AV/C	32
PN	
25PN	113
30PN	113
720 24PN	113
audio mute	116
mode, AG-HVX200	37
mode, approximate recording time	104

VF	54
VF, mode indicator	43
power	
alarm	15
cord	2
dc connector	15
off	7, 9
on	7, 27
specifications	114
status LED	10
supply	2
power cycle, beginning recording session after	63
PRE-REC Cach	47, 48
LCD displays	97
PRE-REC Disk	47, 49
LCD displays	97
PRE-Record	4

Q

QuickTime	19, 52, 53
24p	3, 19, 53
DTE	3, 116
file name format	102
P2 PN	116
PN	3, 52, 116
reference movie	78

R

RawDV	19, 52, 114
4-channel audio	12
file name	102
real-time recording	69
rear panel	13
REC RUN, see TC and timecode	
REC, LCD display	97
record	20
720/pn formats	37
audio muted	116
AV/C	32
control button	8
displaying remaining time on disk	44
displaying timecode generated by external device	44
do not use AV/C	32

identifying master/slave volumes	55
individual frames	50
LCD display	97
local	32
loop	47, 50
mode indicator	47
modes	32, 47
normal	47
PRE-REC Cach	47
PRE-REC Disk	47
single frame	61
single frames	50
SNAP	50
SNAP DV	47
stream by stream	29
syncro slave	32
tapeless	32
time lapse	47
USE EXT FS-100	55
without dropping frames	34, 61
recording	
AG-HVX200 camcorder	37
assigning timecode to first frame of next session	62
camera setup	37
create new file without losing frames	61
different file types	29
disk space requirements	49
real-time	69
status LED	10
tapeless	32
TC-Non-Drop	65
timecode in file	39
using VFR in NLEs	69
recovering LCD display	6
reels	17, 93
assigning clips	74
default numbers	90
organize	75, 102
placing a clip	90
reel name	90
screen	90
reference movie	78
copying	78
file name convention	79
MAKE REF MOVIE	103
moving	78

number of files generated	78
remote control	11
using wired control	91
removing hardware	108
removing the battery	22
re-organizing clips	80
repair	
clip	83
disk	82
requirements, AG-HVX200 tapeless control	95
reset	7
reset FS-100 to default	88
resetting system	88
rest	88
RS-232C	114
RS232C	11, 61

S

scene marking	4
screen	70
control	17
delete clip	80
DV formats	19
file name	85
format (DV)	52
format disk	81
functions	18, 71
HDD mode	19, 54
home	17, 27, 43
play	17
play from	17, 93
PRE-REC Cache	48
PRE-REC Disk	49
record	20
reels	17, 90
repair clip	83
repair disk	82
set date	59
set time	59
setup	18, 57
syncro slave	35
system reset	88
system status	89
tapeless	36

TC Set	63
time lapse record	51
UB Set	64
upgrade	86
upgrade error	87, 88
utilities	18, 75
version	60
welcome	17, 27, 42
search	
back	8
forward	8
serial connector, remote control	11
setup	18
using with a computer	100
shock and vibration	117
shock cache	116
side panel	14
single frames	50
skipping forward to next clip	9
slave	56
slow motion, see overcranking	
SNAP	
DV	47
LCD displays	97
record	50
software	
error, wrong product id	116
upgrade file, fs-100.bin	88
upgrade screen	86
version	60
Sony	1
speaker	15
standard definition, see SD	
start new file without dropping frames	61
stop	9
frame	61
group default	57, 61
LCD display	97
no video	61
skipping forward to next clip	9
storage humidity	117
storing	
multiple record modes and file formats	29
timecode	62
user defined timecode parameters	63
video clips	102

stream, input	26
syncro slave	32
default setting	35
LCD displays	97
mode	35
PRE-REC Cach	48
recording in SNAP mode	50
system	
information screens	46
reset	88
rest	88
status	89

T

tapeless	32
acquisition	3
control mode	36
control mode requirements	95
LCD displays	98
PRE-REC Cach	48
recording	32
recording in SNAP mode	50

TC

Drop	58, 65
drop-frame modifies timecode calculation	65
EXT	62
Free Fun	65
Free Run	63
group default	58, 62
Non-Drop	65
REC RUN	62
REC Run	63
REGEN	62, 63, 65
SET	62
SET, stores user defined parameters	63
timecodes not set in TC EXT mode	64

technical specification

AG-HVX200 video output	113
disk	115
DV video I/O	113
log files	116
shock and vibration	117
temperature	117
video I/O, DVCPRO/DV	114

video I/O, DVCPRO50	113
video I/O, DVCPROHD	113
technical specifications, power	114
temperature	117
alarm	15
error message	116
text, LCD displays	97
time code, see timecode	
time lapse	
LCD displays	97
recording	47, 51
setting	51
timecode	4
actual time during recording	65
assigning to first frame next session	62
calculation modified by TC Drop	65
changing user bits in video files	64
clearing any stored timecode	62
displayed during manual recording	34
displaying absolute timecode value for session	45
displaying code generated by external device	44
displaying embedded DV timecode	44
embedded DV	114
Pinnacle	77
recording in file	39
recording same timecode in each frame	62
set, stores user defined parameter	63
starting value on an empty disk	63
TC REGEN	62
TIMECODE Functions	62
timeline	
Avid	76, 107
base frame rate	69
incoming frame rate	69
track	
AIF	105
Avid	102
displaying embedded DV timecode	44
Matrox	102
OMF	105
tracklist	93
transport control buttons	7
back index	9
back search	8
forward index	9
forward search	8

pause	9
play	8
record	8
stop	9
TRS mini jack	11
turn off	7
alarm	15
video output	61
turn on	7

U

UB	
mode	37
SET	62
Ulead	1
undercranking	
base frame rate	68
FS-100 playback	68
incoming frame rate	68
unlocking front panel keys	74
upgrading software	86
USE EXT FS-100	19, 55, 56
user bit, displaying set value of clip	45
user guide	2
utilities	18
utility	
deleting clip	80
format disk	81
repair clip	83
repair disk	82
screen	75

V

variable frame rate, see VFR mode	
VCR, AG-HVX200	40
version	60
VFR mode	66
audio muted	116
audio not recorded	38
base frame rate, display	44
frames per second	44
FS-100 settings	39
not saved	68

number of files generated	78
UB NTSC	44
VFR recording, using in NLEs	69
video	113
AG-HVX200 output	113
output off	61
storing clips	102
video camera, timecode	39
video clip, see clip	

W

WAV	
Matrox	3
Pinnacle	3
weight	113
welcome	17, 27
Windows	
dismounting FS-100	108
mounting FS-100	101
workflow, streamlining	78
wrong product id	116

X

Xpress Pro, see Avid



Part Number: MANL-1023-10

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>