

**HONEYWELL
WEATHER INFORMATION STATION**

**TN924W
USER MANUAL**

Table of Contents

INTRODUCTION	3
INSTALLATION	5
BEFORE YOU BEGIN	6
REMOTE THERMO HYGROMETER SENSOR	7
RAIN GAUGE	8
ANEMOMETER	10
MAIN UNIT	12
WEATHER RADIO	19
CUSTOMIZING YOUR WEATHER RADIO	19
WEATHER STATION	25
CUSTOMIZING YOUR WEATHER STATION	28
BACKLIGHT	28
CONNECTING WEATHER STATION TO A PERSONAL COMPUTER	28
USING DIFFERENT WEATHER STATION WINDOWS	28
WEATHER and PRESSURE WINDOWS	29
TIME WINDOW	32
SUNRISE/SUNSET WINDOW	36
TEMPERATURE AND HUMIDITY WINDOW	38
RAIN WINDOW	41
WIND WINDOW	42
MAINTANANCE	44
TROUBLESHOOTING	45
PRECAUTIONS	46
APPENDIX 1 – CITY CODES	47
APPENDIX 2 – NWR ALERT MESSAGES	50
SPECIFICATIONS	52
FCC STATEMENT	55
DECLARATION OF CONFORMITY	55
STANDARD WARRANTY INFORMATION	56

INTRODUCTION

Thank you for selecting the Honeywell Weather Information Station. This product combines a Public Alert Weather Radio and a Wireless Weather Station.

The **Weather Radio** operates at a **NWR** (National Weather Radio) frequencies and can receive **NOAA** (National Oceanic and Atmospheric Association) messages advising or warning you about the hazardous weather and other events within a 40-mile radius.

The **Weather Station** operates at 433MHz frequency and provides barometric pressure, air temperature, relative humidity, wind speed and direction and rainfall; precise atomic time and perpetual calendar.

In this package you will find:

One Main Unit (receiver) (**TN924WD**)

One Rain Gauge (remote rain sensor/transmitter) (**TS906**)

One Anemometer (remote wind sensor/transmitter) (**TS805**)

One Five-Channel Temperature & Humidity Sensor (transmitter) (**TS34C**)

One CD disk with generic PC connection software

One USB cable

One 9V AC/DC Adapter






Mounting Hardware with Allen Wrench

One User Manual

You would need to purchase:

12 AA batteries

STANDARD PACKAGE CONTENTS

Picture	Components
	Main Unit (receiver)
	AC/DC 9V power adaptor
	Thermo Hygrometer Sensor (transmitter)
	Rain Gauge (transmitter) consists of: Funnel shaped top with battery compartment; Rain Gauge bucket Bucket see-saw mechanism; Protective screen
	Anemometer (transmitter) consists of: Wind Cups, Wind Vane Anemometer arm, Anemometer base
Weather Capture	PC Software
4 screws for securing rain gauge to the flat surface; 4 screws for securing anemometer to a vertical surface	Mounting hardware
2m (6ft) USB cable	PC connection cable

INSTALLATION

The **Weather Station** portion of **TN924W** operates at 433MHz radio frequency, so no wire installation is required between the main unit (receiver) and the remote weather sensors (transmitters).

The remote weather sensors include a thermo-hygrometer (temperature and humidity) sensor, anemometer (wind sensor) and a rain gauge (rain sensor). All data measured by these remote sensors is transmitted to the main unit wirelessly, with the operating range in the open area from 100 feet (30 meters) for anemometers and rain gauge up to 328 feet (100 meters) for temperature and humidity sensor.

Remote anemometer and a rain gauge must be placed **outdoors** to measure weather elements.

Remote thermo-hygrometers can be placed **indoors** or **outdoors**, depending on the area where the **temperature and humidity are intended to be measured**. If you intend measuring outdoor temperature and humidity, place the remote sensor **outdoors**.

NOTE: It is critical to assemble and power up all of the remote weather sensors **BEFORE** setting up the main unit.

NOTE: It is critical to power up and **test** communication between all of the weather sensors and the main unit **BEFORE** permanently mounting them outside.

The **Weather Radio segment** of TN924W operates at frequency band from 162.400MHz to 162.500MHz and requires AC adapter connected at all times.

BEFORE YOU BEGIN

- **ALWAYS** install batteries in the **remote** weather sensors *before* the main unit
- We recommend using **alkaline batteries** for the remote weather sensors and the main unit when temperatures are **above 32°F (0°C)**. We recommend using lithium batteries for the remote weather sensors when temperatures are **below 32°F (0°C)**
- Avoid using rechargeable batteries. (Rechargeable batteries cannot maintain correct power requirements)
- Insert batteries before first use, matching the polarity in the battery compartment
- Remove protective plastic screen from LCD display (if any)
- During an initial setup, place the remote weather sensors close to the main unit
- After reception is established (all of the remote readings will appear on the main unit's display), position the remote sensors and the main unit within the effective transmission range: 328 feet (100 meters) for temperature/humidity sensor(s) and 100 feet (30 meters) for anemometer and rain gauge. Ideally they should be placed within the line of sight of the main unit. See placement tips in the user manual for each remote weather sensor
- Transmission/reception range may be affected by trees, metal structures and electronic appliances, by the surrounding building materials and how the receiver (main unit) and transmitters (weather sensors) are positioned
- The main unit must be placed indoors.
- Place the remote weather sensors so that they face the main unit (receiver), minimizing obstructions such as doors, walls, and furniture.

Note: When the temperature falls below freezing, the batteries in the outdoor remote weather sensors may have reduced voltage supply and a shorter effective range. We recommend using lithium batteries at temperatures of 32°F (0°C) and below.


IMPORTANT: Make sure that remote weather sensors are easily accessible for cleaning and maintenance.

We recommend cleaning the remote weather sensors periodically, as the dirt and debris may affect sensors accuracy.

REMOTE THERMO HYGROMETER SENSOR

FEATURES

- Remote data transmission to the main unit via 433 MHz signal
- 328 feet (100 meters) operating range without interference
- LCD displays temperature, humidity and channel
- Five (5) transmission channels selection
- Case can be wall mounted using built-in hanger

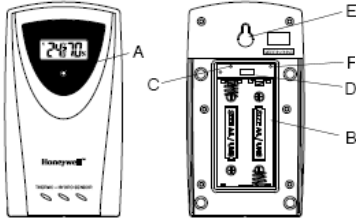

A. LED INDICATOR

- Flashes once when the remote sensor transmits a reading to the main unit.
- Flashes twice when battery power is low.

B. BATTERY COMPARTMENT

Holds two AA-size batteries

C. RESET

Resets all previous settings

D. CHANNEL SWITCH

Selects the desired channel from 1 to 5

E. WALL-MOUNT RECESSED OPENING

Keeps the remote sensor on the wall

Note: Install the batteries and select the channel before mounting the sensor.

BATTERY INSTALLATION

- Remove the screws from the battery compartment with a small Phillips screwdriver.
- Set the channel 1 through 5. The switch is located in the battery compartment. Channel 1 is typically selected if only one remote sensor is being used.
- Install 2 "AA" size alkaline batteries (not included) matching the polarities shown in the battery compartment.
- Replace the battery compartment door and secure the screws.
- Secure the thermo-hygrometer remote sensor in the desired location.

MOUNTING

- The remote thermo-hygrometer sensor can be placed on the flat surface or

mounted on the wall in vertical position

- Use the wall mount hardware and screws provided when mounting the thermo-hygrometer sensor on the wall

PLACEMENT

- The remote thermo-hygrometer sensor should be placed in the area with a free air circulation and sheltered from the direct sunlight and an extreme weather conditions.
- Ideally, place the thermo-hygrometer sensor above the natural surfaces (such as a grassy lawn).
- Avoid placing the thermo-hygrometer sensor near sources of heat such as chimneys and heating elements.
- Avoid any areas collecting and radiating a heat from the sun, such as metal, brick or concrete structures, paving, patios and decks.
- The international standard for the valid air temperature measurements is 4 feet (1.25meters) above the ground.


OPERATION

Immediately after batteries are correctly installed, the remote sensor will start transmitting a temperature and humidity data to the main unit.

RAIN GAUGE

FEATURES

- Precipitation measurement
- Remote transmission of the rainfall data to the main unit via 433 MHz signal
- Operating range of up to 100 feet (30 meters)
- Built-in installation level
- Non-corrosive protective screen

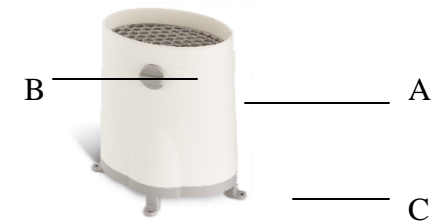


A. Rain gauge bucket

Holds all rain gauge components

B. Knob

Secures the top on the rain gauge bucket

C. Rain gauge bucket feet
Allows securing the rain gauge on its place

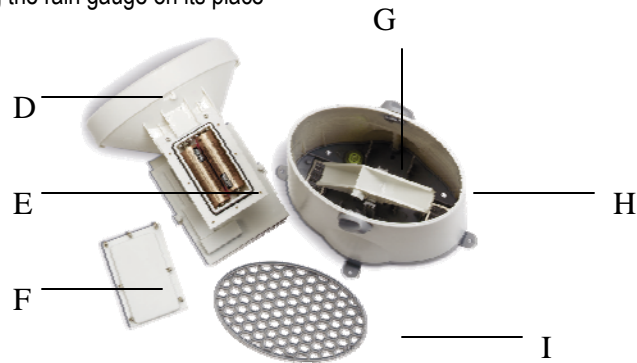

- D. Funnel-shaped top with battery compartment**
Contains battery compartment and rainfall counting electronics
- E. Battery compartment**
Holds two AA-size batteries
- F. Screws**
Secure battery compartment cover
- G. Built-in leveler**
Allows leveling rain gauge on the surface
- H. Bucket see-saw mechanism**
Collects the rainfall in one of its containers and self-empties once full
- I. Protective screen**
Protects the rain gauge funnel from debris

BATTERY INSTALLATION

- Unlock the funnel-shaped top on the rain gauge by turning both knobs on the sides in an anti-clockwise direction.
- Remove the funnel-shaped top lifting it off the rain gauge bucket.
- Remove 7 small screws from the battery compartment cover using a small Phillips screwdriver
- Insert 2 "AA" size alkaline batteries (not included), matching the polarities as shown in the battery compartment.
- Replace the battery compartment door and secure the screws.
- Insert the funnel-shaped top into the rain gauge bucket and secure it into place by turning the knobs clockwise.

MOUNTING

- Make sure that the rain gauge bucket is level – check if the ball bearing inside the bucket is at the midpoint of the leveler.
- Place the protective screen over the top to protect the rain gauge from the debris.
- Mount the rain gauge in place using mounting hardware provided.
- Make sure that the rain gauge is in open area where precipitation falls directly into the gauge's bucket, ideally 2-3 feet above the ground.

PLACEMENT

- The rain gauge should be placed in an open area away from the walls, fences, trees and other coverings which may reduce the amount of rain falling into the bucket. Additionally, trees and rooftops may be sources of pollen and debris.
- To avoid the rain shadow effects, place the rain gauge horizontally, on the distance corresponding to two to four times the height of any nearby obstruction.
- It is important that excess rain can flow freely away from the rain gauge.


OPERATION

After batteries are correctly installed, the rain gauge will start transmitting a rainfall data to the main unit.

ANEMOMETER

FEATURES

- Wind speed , wind gust and wind direction measurement
- Measurement of the temperature at the place of anemometer
- Remote transmission of the temperature, wind speed , gust and wind direction data to the main unit via 433 MHz signal
- Operating range of up to 100 feet (30 meters)
- Wall or pole mount

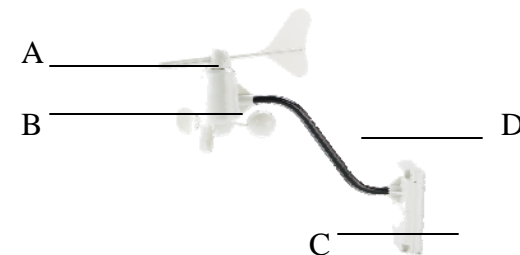

- A. WIND VANE**
Measures wind direction
- B. WIND CUPS**


Measures wind speed

C. ANEMOMETER BASE

- Holds battery compartment
- Allows mounting the anemometer vertically

D. ANEMOMETER ARM

Keeps anemometer assembly together

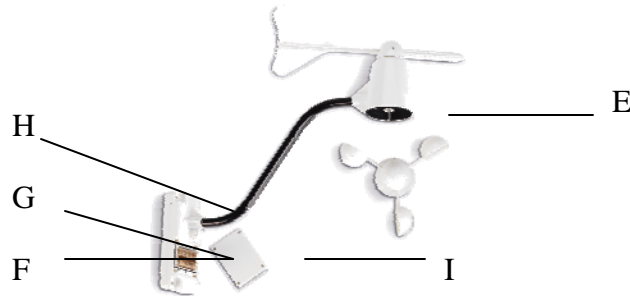

E. WIND CUPS SHAFT

Holds wind cups on the anemometer arm

F. BATTERY COMPARTMENT

Holds 2 AA-size batteries

G. SET OPENING

Allows toggling wind direction between factory pre-set and default set (North)

H. WALL MOUNT SCREW OPENINGS

Allow securing the anemometer in place

I. BATTERY COVER

Allows securing 2 AA size batteries on the anemometer base

ASSEMBLY

- Place the wind cups (B) over the wind cups shaft (E) of the anemometer arm (D)
- Insert the wrench tool provided into the wind cups opening
- Loosen the small screw inside and tighten it
- Test if the wind cups (B) sit secure on the wind cups shaft (E)

BATTERY INSTALLATION and ALIGNING

- Remove four (4) screws from the battery compartment with a small Phillips screwdriver
- Open the battery compartment and install 2 "AA" size alkaline batteries (not included) matching the polarities shown
- Point the wind vane (A) to the north (use a compass or map if necessary). The default direction is **NORTH** when the wind direction vane (A) is in parallel with an anemometer arm (D)
- Watch that the main display unit in the **Wind Window** displays the wind direction arrow pointing to the **NORTH**
- If the wind direction arrow in the **Wind Window** does not show **NORTH**, press **SET** opening (F) located inside battery compartment with a paper clip or similar tool
- Replace the battery cover (I) and secure the screws

NOTE: Repeat this procedure every time when changing the batteries.

MOUNTING

Mount the anemometer onto a vertical surface, using the fittings provided.

PLACEMENT

- The anemometer should be mounted in an open area with a free air flow; away from the nearby trees, buildings or other structures
- It is suggested mounting anemometer at 33 feet (10meters) above the ground in unobstructed area

MAIN UNIT

Weather Radio receives all NWS alert signals broadcast within approximately 40 miles (65 km) radius.

The **Weather Station** measures pressure, indoor temperature, humidity and receives atomic time signal from the US Atomic Clock located in Fort Collins, Colorado and all remote weather sensors. It should be placed indoors.

FEATURES

Radio

- NOAA SAME Technology
- Public Alert Certified Device

Weather

- Weather forecast for the next 12 to 24 hour in seven large icons: Sunny, Partly Cloudy, Cloudy, Light Rain, Heavy Rain and Snowy
- Barometric pressure in imperial or metric units
- Altitude adjustment for pressure compensation

- 24 hour barometric pressure history chart
- Multiple weather alarms
- Indoor/Outdoor Temperature & Humidity in up to 5 remote locations (4 additional sensors required)
- Dew point and comfort level indicators
- Wind speed and wind gust averages and memory
- Wind direction
- Rainfall amount with minimum and maximum memory
- 200 weather records without PC connection
- USB port with USB cable and PC software (included)
- Operating range from 100 feet (30 meters) up to 328 feet (100 meters)

Time

- Precise time and date set via RF signals from US Atomic clock
- 12 or 24 hour time format
- Manual adjustment of time and date
- Calendar displaying date with month and day in 6 languages English, German, French, Italian, Spanish and Dutch
- Sunrise/set calculation for over 100 pre-programmed world cities in accordance with the geographical information entered by the user
- Moon Phase calendar and historical data for the past and future 39 days
- Dual crescendo alarms with programmable snooze

Display

- Light sensor detects low light conditions and LCD lights up automatically when adapter is connected

Power

- AC/DC adapter
- 6 AA batteries


BATTERY INSTALLATION


- Remove the battery compartment door on the back of the main unit
- Insert six (6) AA size batteries according to the polarities shown and replace the battery compartment door
- Connect 9V AC/DC adapter provided to the main display unit and plug into to the wall power outlet

NOTE: The AC/DC adapter connection is required for backlight control functions. If the main unit operates solely on the battery power, the backlight control will be disabled.

- When placing the main unit on the table or other horizontal surface, attach the table stand

- When mounting the main unit on the wall or vertical surface, remove the table stand and use the mounting hardware provided

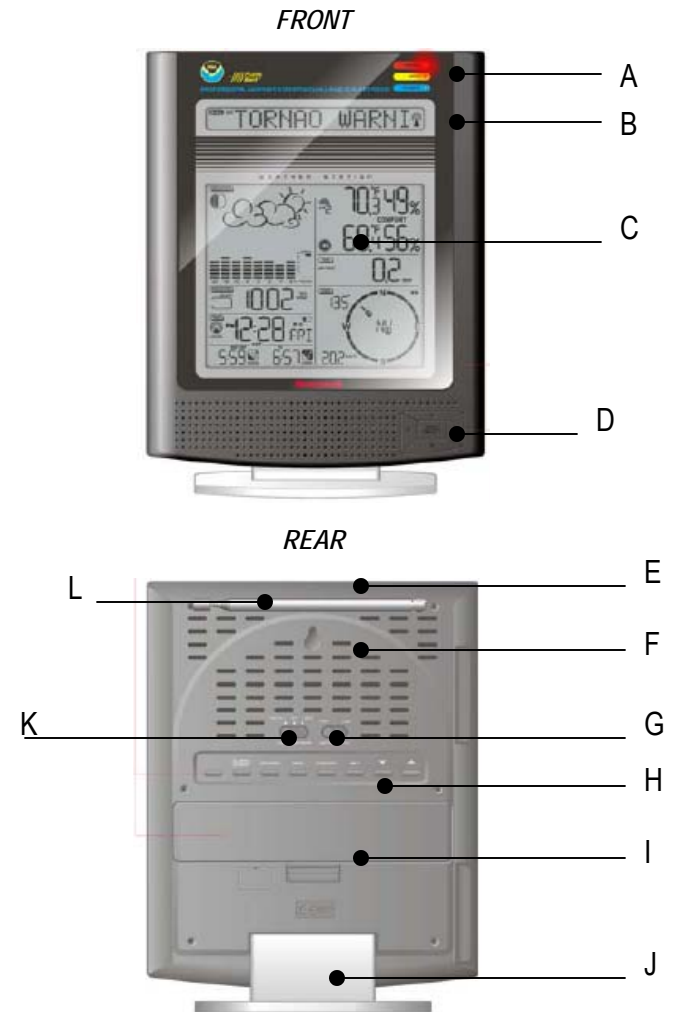

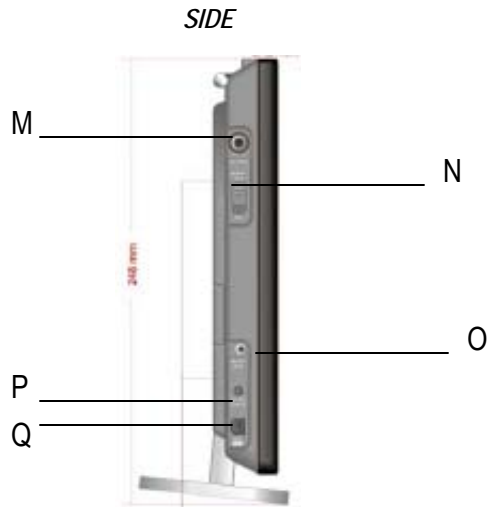

MAIN DISPLAY UNIT OVERVIEW

A. WARNING, WATCH, ADVISORY	Weather Radio events indicators – Warning (Red), Watch (Orange) and Advisory (Yellow) Flash for 60 seconds when alert is received
B. RADIO DISPLAY	Reflects Weather Radio modes selection and radio signal reception status
C. WEATHER STATION DISPLAY	Reflects the Weather Station Windows
D. RADIO CONTROLS PANEL	Allows programming and navigating through the Weather Radio modes Adjusts the Weather Radio volume levels
E. WEATHER/SNOOZE	Activates Weather Radio audio for listening to the broadcast Activates a backlight for 5 seconds Snoozes alarms
F. WALL MOUNT RESSESSED OPENING	Keeps the main unit on the wall
G.SENSITIVITY HIGH/LOW	Adjusts the level of light sensor sensitivity
H. WEATHER STATION CONTROLS PANEL	Allows programming and navigating through the Weather Station modes

15

I. BATTERY COMPARTMENT	Accommodates 6 (six) UM-3 or AA 1.5 batteries
J. REMOVABLE TABLE STAND	Keeps the main unit in upright position on the flat surface
K. LIGHT SENSOR AUTO/ON/OFF SWITCH	Toggles the main unit's light sensor to Automatic, ON or OFF position
L. EXTENDABLE RADIO ANTENNA	Improves reception of the Weather Radio
M. EXTERNAL ANTENNA SOCKET	Improves reception of the Weather Radio when additional antenna is connected through an optional adapter cable (not included)
N. ALERT ON/OFF SWITCH	Enables or disables audible Weather Radio alerts
O. ALERT OUT PORT	Allows connecting Weather Radio to a compatible external alerting device
P. POWER ADAPTER PORT	Allows connecting Weather Radio to AC power outlet through AC adapter (included)
Q. USB PORT	Allows connecting Weather Station to the PC through USB cable (included)

WEATHER RADIO CONTROLS PANEL

A. MENU/SELECT	Allows toggling between auto and manual radio modes Allows programming all radio modes
B. UP	Selects the following mode
C. DOWN	Selects the previous mode
D. RIGHT	Allows displaying and changing FIPS codes
E. LEFT	Allows exiting from the programming mode

16

WEATHER STATION CONTROLS PANEL

A. UP	Selects the next available mode clockwise Increases parameters Activates manual search for atomic time signal Enables or disables time alarms (W) and (S) and Ice Warning Alarm
B. DOWN	Selects the next available mode anti-clockwise Decreases parameters Activates manual search for signals from the remote weather sensors when depressed and held for 5 sec.
C. SET	Toggles display between different modes If depressed and held, activates programming mode or changes unit of selected parameter Confirms programmed parameters
D. CHANNEL	Recalls a different temperature and humidity channel from 1 to 5 Activates the remote temperature and humidity channels auto-scan feature
E. MEM	Allows displaying the memory records of the moon phase, temperature, humidity, rainfall and wind data If depressed and held, clears memory of collected records Activates a searching mode of the sunrise and sunset history records
F. HISTORY	Allows displaying the SEA LEVEL pressure history
G. ALARM/CHART	Allows displaying all available alarms – for time, temperature, rainfall and wind. If depressed and hold, allows entering into the alarm programming mode for selected parameter When depressed and hold in pressure/forecast mode, allows viewing of the temperature and humidity history charts

PLACEMENT

- For best **Weather Radio** reception place the main unit where it can receive **NWS** signals and you can hear the weather broadcast – do not place it near

- any large obstructions or surfaces such as refrigerators, metal cabinets, etc
- For best **Weather Station** reception make sure that the main unit is locating within the operating range of all remote weather sensors
- Ideally the remote weather sensors should be mounted within the line of sight from the main unit
- Transmission range may be affected by trees, metal structures and electronic appliances
- Test reception before permanently mounting all remote weather sensors

Avoid placing the main unit in the following areas:

- Direct sunlight and surfaces emitting and radiating heat, such as heating ducts or air conditioners
- Areas with interference from the wireless devices (such as cordless phones, radio headsets, baby listening devices) and electronic appliances

OPERATION

Once the main unit is powered, the **Weather Station** display will show all available LCD segments for 2 seconds.

The **Weather Radio** display line will remain blank for 2 seconds, then **SIGNAL LOSS** statement with RF reception symbol will appear and radio will start scanning through all 7 NOAA channels. If the reception is successful, it will detect and lock on the available channel.

IMPORTANT: All of the **Weather Station** display functions will be locked, allowing setting pressure parameters and local altitude. The locked display will show the pressure icon and abbreviation “inHg” flashing in **Pressure Window**, indoor temperature and humidity readings in **Temperature/Humidity Window**, default time in **Time Window** and a default sunset/sunrise time in the **Sunrise/Sunset Window**.

If pressure and altitude are not configured during this time, the Weather Station will self-calibrate in a few minutes and show the default settings for the pressure and altitude (sea level) and then all remote weather sensors readings.

To set the pressure & altitude units and program your altitude, use the main unit control panel, located on the back.

NOTE: When adjusting altitude in feet or meters, be noted that the last small digit is not a decimal but a whole number.

Example: “**350**” feet means 350 feet (three hundred fifty feet).

WEATHER RADIO

ABOUT THE NATIONAL WEATHER RADIO SYSTEM

The National Weather Service (**NWS**) is a government agency within the National Oceanic and Atmospheric Administration (**NOAA**) that operates the nationwide radio network known as NOAA Weather Radio (**NWR**). NWR is a nationwide radio stations network continuously broadcasting information about all types of hazardous events both environmental and technological. NWR works with the Federal Communications Commission's (**FCC**) Emergency Alert System (**EAS**), and considered to be a single source of all weather and emergency information.

As a nationwide network, the NWR consists of more than 940 transmitters in all 50 US states, adjacent coastal waters, Puerto Rico, the US Virgin Islands and US Pacific Territories. This network also includes a Weatheradio Canada which is a part of Meteorological Service of Canada (**MSC**).

Routine broadcast consisting of local weather forecast, regional conditions and marine forecasts is repeated every few minutes. During emergencies, routine broadcasts are interrupted to report specific warnings.

When the NWR broadcasts specific warning, a digital code of Specific Area Message Encoding (**SAME**) is included as part of the message. The SAME code consists of specific information containing the geographical area affected, the expiration time of the message and the message itself.

Your **Weather Radio** has been designed to receive and decode warning, watch or non-emergency messages that are broadcast in digital SAME code by the National Weather service. A SAME broadcast will be heard as very brief tone burst resembling chirps. Once received, the message will be presented visually and by voice announcement. The SAME code contains the type of message, county(s) affected, and message expiration time. Your radio should provide reception for up to 40 miles distant from the NWR transmitter depending on terrain and man made structures, either of which can reduce that distance.

To receive SAME messages about events occurring only in your specific area you can use the **FIPS** (Federal Information Processing Standard) codes and program up to nine (9) specific locations. The FIPS codes you have entered will be automatically saved into the radio memory.

NOTE: For customizing your Weather Radio use the Weather Radio Control Panel buttons located on the front of the main unit.

CUSTOMIZING YOUR WEATHER RADIO

Weather Radio allows selecting and programming of several different features, including the weather radio channel, country, language of the events (alerts), alerts, location, signal reminder and alert mode.

CHANNEL SEARCH

There are two options available for searching of NWR channels – an **auto** and **manual**. The default channel search mode is **auto**.

If an **auto search** is selected, leave the **Weather Radio** in the default mode after the main unit has been powered. Then the **Weather Radio** will scan automatically through all 7 NOAA frequencies (channels) and lock on the strongest available channel.

When an **auto search** is selected and reception is successful, the **Weather Radio** will display the number of the received channel (for example: **CHANNEL 7**).

If no channel is detected at this time, the message **NO CHANNEL AVAILABLE BACK TO CHANNEL X** will be displayed.

If a **manual search** is selected, follow this programming procedure:

- Press **MENU/SELECT** button until message **MANUAL** is displayed
- Press **MENU/SELECT** once entering into the channel search programming mode – a channel number will be displayed
- Press **▲** or **▼** adjusting the desired channel number - 1 through 7
- Press **WEATHER/SNOOZE** button on the main unit to listen a NWR broadcast – the icon **NOAA** will be displayed next to the reception status icon
- Press **◀** to exit

NOTE: If your Weather Radio is receiving a NWR broadcast on more than one channel, the one with the best reception may not be the best option for your location. Contact NWS for information regarding broadcasting stations locations. To contact the NWS by telephone, dial 1-888-NWR-SAME (1-888-697-7263)

To obtain NWS radio channels and SAME codes on Internet:

www.nws.noaa.gov/nwr/indexnw.htm

COUNTRY SELECTION

- Press **MENU/SELECT** button entering into the programming mode until **SELECT CH** message is displayed
- Press **▲** button until the **SET COUNTRY** message is displayed
- Press **MENU/SELECT** button entering into the country programming mode
- Press **▲** or **▼** selecting US or Canada
- Press **MENU/SELECT** button to confirm – the unit will beep once confirming the country selection
- Press **◀** to exit

LANGUAGE SELECTION

- Press **MENU/SELECT** button entering into the programming mode until **SELECT CH** message is displayed
- Press **▲** or **▼** buttons until the **SET LANGUAGE** message is displayed

- Press **MENU/SELECT** button entering into the language programming mode
- Press **▲** or **▼** selecting English, Spanish or French
- Press **MENU/SELECT** button to confirm – the unit will beep once confirming the language selection
- Press **◀** to exit

ALERTS SELECTION

Your **Weather Radio** contains all NWR events (alerts) pre-programmed; many of them are set to **ON** by default.

There are three events (alerts) categories may be displayed – **Advisory**, **Watch** or **Warning**

Advisory- an advisory is issued when a hazardous weather or hydrologic event is occurring, imminent or likely. Advisories are for less serious conditions than warnings, which cause significant inconvenience and if caution is not exercised, could lead to situations that may threaten life or property.

Watch – alerts you to potential severe weather approaching your area. It does not mean severe weather occur, but that the right conditions exist which could lead to severe storms. You should be prepared for the weather to deteriorate rapidly.

Warning – states the severe weather is imminent or present in your vicinity. You should immediately take precautions to protect yourself and your family.

Please see page 59 for a list of NWS events (alerts) and decide what events you would like to receive and what you would like to disable.

Use this procedure for programming **Weather Radio** alerts:

- Press **MENU/SELECT** button entering into the programming mode until **SELECT CH** message is displayed
- Press **▲** or **▼** button until the **SET ALERTS?** message will be displayed
- Press **MENU/SELECT** button entering into the alerts programming mode
- Press **▲** or **▼** selecting **ADVISORY**, **WATCH** or **WARNING**
- Press **MENU/SELECT** button to select the event type – the first specific event will be scrolling on the display
- Press **▲** or **▼** button selecting **ALERT ON** or **ALERT OFF**
- Press **MENU/SELECT** button to select and confirm the setting
- Press **◀** to exit

PROGRAMMING YOUR LOCATION

The NWR radio channels work the same as regular radio.

Your **Weather Radio** is pre-programmed with seven NOAA broadcast frequencies (channel1-7):

1	2	3	4	5	6	7
162.400MHz	162.425MHz	162.450MHz	162.475MHz	162.500MHz	162.525MHz	162.550MHz

After the strongest available channel has been detected by your **Weather Radio**, all FIPS codes specific for your location (state and county) are automatically pre-set. You have an option to program events that are happening in your surrounding area by programming or deleting of SAME (FIPS) codes.

WARNING: Your **Weather Radio** has an option of changing FIPS codes, however prior to changing any of the pre-programmed codes; you must verify its correction with the NWS (National Weather Service).

- Press **MENU/SELECT** button entering into the programming mode until **SELECT CH** message is displayed
- Press **▲** or **▼** button until the **LOCATION** message will be displayed
- Press **MENU/SELECT** button entering into the location programming mode
- Press **▲** or **▼** selecting **ALL**, **SINGLE** or **MULTIPLE**

ALL option allows receiving all of the existing SAME alerts within a 50 mile radius. There is no location for editing.

- Press **MENU/SELECT** button to confirm selected location
- Press **◀** to exit

Single option allows receiving a SAME alert signals for only one programmed location.

Multiple option allows receiving a SAME alert signals only for pre-programmed locations (up to 9).

In **Multiple** or **Single** option:

- Press **MENU/SELECT** button to confirm selected location
- Press **MENU/SELECT** button – the message **EDIT?** will be displayed. You can edit this single location FIPS code
- Press **▲** or **▼** button selecting between messages: **EDIT?** or **DELETE?**
- Press **MENU/SELECT** button to select **EDIT** or **DELETE**. If you want to edit the SAME county code, press **▶** after county name is displayed.
- Press **▲** or **▼** button selecting new state and county
- Press **MENU/SELECT** button to select and confirm the setting
- Press **◀** to exit
- Press **▲** or **▼** button selecting **EMPTY** location or a location to edit
- Press **MENU/SELECT** button to confirm your selection
- Press **◀** to exit \

NOTE: The Weather Radio may miss alerts while being programmed. When selecting an empty location after adding a specific county or area to the memory, press ◀ once to select a county from a previously selected state. Press ◀ again to select another state.

Based on entered FIPS code, the Weather Radio will update the name of the location. If the new entered FIPS code does not match any county or area, the message NOT FOUND will be displayed instead of the county name. If ◀ pressed when the cursor is at the farthest left digit of the FIPS code, your change will not be saved.

SIGNAL LOSS REMINDER

- Press **MENU/SELECT** button entering into the programming mode until **SELECT CH** message is displayed
- Press ▲ or ▼ button until the **SIG REMINDER** message is displayed
- Press **MENU/SELECT** button to activate it or deactivate the signal loss reminder - the unit will beep and display when activated and when deactivated.
- Press ◀ to exit

NOTE: If the signal is lost, the SIGNAL LOSS message will appear with the reception icon flashing. The WARNING, WATCH and ADVISORY indicators will periodically flash. If the signal has been detected and lost within 10 minutes, no signal loss reminder will sound.

MISSED ALERT REMINDER PROGRAMMING

When the missed alert reminder is set for a **TONE** mode, your Weather Radio will beep every 30 seconds after the end of the alert broadcast, until the effective time of the alert will expire.

When missed alert reminder is set for a **VOICE** mode, a voice alert will broadcast for up to 5 minutes. Then radio will beep every 30 seconds until the effective time of the alert will expire.

- Press **MENU/SELECT** button entering into the programming mode until **SELECT CH** message is displayed
- Press ▲ or ▼ button until the **ALT REMINDER** message is displayed
- Press **MENU/SELECT** button to activate it or deactivate the alert loss reminder – the unit will beep and display a flashing speaker icon in upper left to the right of “NOAA” when activated and a speaker icon with a line through it midway between top and bottom, just to the left of letter “A” when deactivated
- Press ◀ to exit

NOTE: Press any button to mute the missed alert reminder

ALERT MODE SELECTION

There are two options available for the alert type – voice or tone.

If the **VOICE** option is selected, the alert sounds for 10 seconds and then the weather broadcast will turn on automatically for five (5) minutes. The **Weather Radio** display will reflect alert description and duration.

If the **TONE** option is selected, the alert tone will sound for five (5) minutes. The **Weather Radio** display will reflect an alert description and duration.

To mute the alert tone sooner, press **WEATHER/SNOOZE** button on the top of the main unit.

- Press **MENU/SELECT** button entering into the programming mode until **ALERT MODE** message is displayed
- Press ▲ button until the **ALERT MODE** message is displayed
- Press **MENU/SELECT** button entering into the alert type programming mode
- Press ▲ or ▼ selecting tone or voice
- Press **MENU/SELECT** button to confirm – the unit will beep once confirming the alert type selection
- Press ◀ to exit

ACTIVATING OR DEACTIVATING AUDIBLE ALERTS

For activating audible alerts slide the **ALERT ON/OFF (N)** switch to **ON** position.

When alert is received, it will sound and the alert speaker sound icon will appear on the display.

For deactivating audible alerts slide the **ALERT ON/OFF (N)** switch to **OFF** position – the radio will beep twice and the speaker icon with a line through it will appear.

NOTE: If the switch ALERT ON/OFF is in OFF position before unit is powered, the radio will still operate in ALERT ON mode until you slide ALERT ON/OFF to ON position and OFF again.

CONNECTING YOUR WEATHER RADIO TO AN EXTERNAL ALERTING DEVICES

The main unit is equipped with an **ALERT OUT** connector which enables your radio to activate different external alerting devices, such as pillow shakers, flashers and etc. These compatible special needs devices are not included with the Weather Information Station and have to be purchased separately.

The switch closure provides capability of handling of up to 200mA current, which is suitable for activating most common alerting devices.

NOTE: The output signal will change when alert is received or expired.

TESTING YOUR WEATHER RADIO

Every Wednesday between 11 AM and 1PM the NWS broadcasts a weekly test alert in the United States. To find out the specific test schedule in your area, contact your local NOAA or NWS office. On your Weather Radio these alerts are turned off. To change your alert settings, please see *ALERT SELECTION* section. For a list of NWS alerts see **APPENDIX 2**.

WEATHER STATION

NAVIGATING THROUGH THE MODES


The **Weather Station** (larger area of the main unit's display) has seven (7) different modes (**Windows**) each displaying a separate data category. When a specific mode is selected the corresponding icon will start flashing.

Press **UP** button on the **back** of the main unit to cycle through the modes clockwise or **DOWN** anti-clockwise.

WEATHER WINDOW

Displays:

- Moon phase
- Weather forecast
- History bar chart for pressure; temperature or humidity on Channel 1

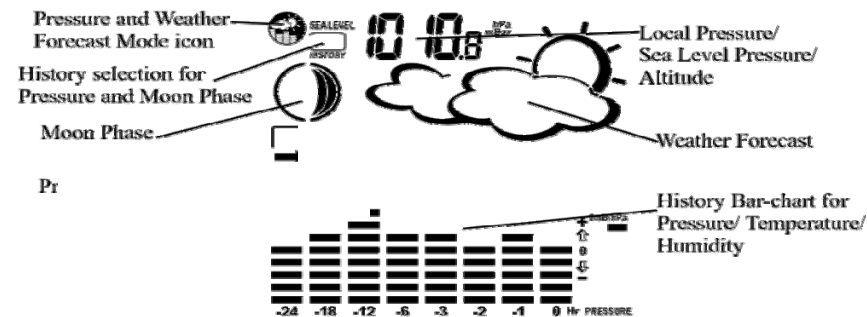

PRESSURE WINDOW

Displays:

- **SEA LEVEL** or **LOCAL** pressure value
- **SEA LEVEL** pressure history for the past 24 hours

TIME WINDOW

Displays:


- Time and calendar
- Single alarm, weekday alarm and ice warning alarm (pre-alarm)



SUNRISE/SUNSET WINDOW

Displays:


- Sunrise and sunset times
- Longitude and Latitude

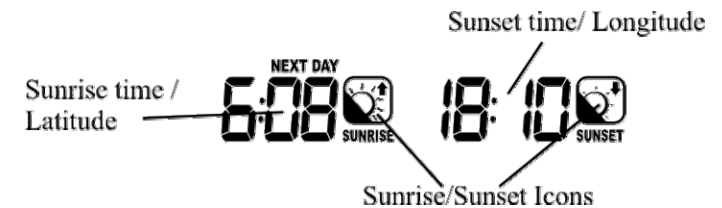

TEMPERATURE AND HUMIDITY WINDOW

Displays:

- Temperature and humidity readings for indoor and selected channel
- Comfort level indication
- Dew point temperature
- High and Low temperature alerts
- Remote Thermo-Hygrometer sensor battery status

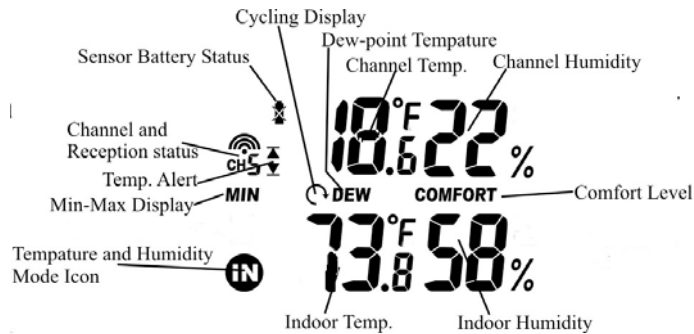

RAIN WINDOW

Displays:

- Current amount of precipitation as well as for the last hour, last day, yesterday, last week and last month
- Rainfall alert
- Remote rain gauge battery status



WIND WINDOW

Displays:

- Wind Chill temperature
- Temperature at place of anemometer
- Wind direction
- Wind speed
- Wind gust speed
- Alert for wind speed and wind gust
- Remote anemometer battery status



27

CUSTOMIZING YOUR WEATHER STATION

It is required to program:

- The pressure parameters during Initial Setup (See **Weather and Pressure Windows** P28)
- The time, the date and the weekday language (**Time Window**: P32)
- The location data (**Sunrise/Sunset Window**: P36)

Optional:

- The time alarms (**Time Window**: P32)
- The temperature alarms (**Temperature and Humidity Window** P38)
- Daily rainfall alarms (**Rain Window** P40)
- Wind alarms (**Wind Window**: P41)

BACKLIGHT

The main unit backlight can be turned on, off or automatically toggled depending on the light conditions of the environment. Use the light sensor switch at the back of the main unit to select a desired backlight setting.

For the automatic backlight control, the sensitivity of the light sensor can be adjusted to high or low using the switch, located on the back panel.

NOTE: For an automatic control function the main unit must be plugged into the wall power outlet via the AC/DC adaptor provided.

CONNECTING WEATHER STATION TO A PERSONAL COMPUTER

To collect and manipulate data from your weather station you may connect the main unit to the computer via USB cable.

Proceed in the following order:

- Make sure all sensors have batteries installed and the main unit is plugged in to the wall power outlet through the AC/DC adapter provided
- Insert the CD-ROM into available drive and install the software following instructions of the installation wizard.
- Connect the main unit to the computer USB port using the USB cable provided.
- Open installed software package: double-click the icon on the computer desktop

You may customize software screen by selecting the weather parameters to be displayed, units for these weather parameters, location and other user-definable elements.

When determining data transfer interval from the main unit to your computer consider the time duration for each data point. For example if you select 5 minutes, each point on the graph will be placed every 5 minutes. If you will select 3 hours, then the graph trend will take at least 24 hours to show 8 data points.

You can use Print Screen option to create pictures and send them by E-Mail and use them on your website

28

If you want to use collected weather data in other applications, the software allows storing data on your computer hard drive in text file called RECORDS.txt. This file can be exported to Excel. This file location is: C:/Program Files/WeatherCapture.

NOTE: Check our website www.honeywellweatherstations.com periodically for useful tips and the latest software versions

USING DIFFERENT WEATHER STATION WINDOWS

WEATHER and PRESSURE WINDOW

- **Weather Window** indicates the moon phase status, the weather forecast and a number of historical statistics in pressure/ temperature/ humidity history bar-chart
- **Pressure Window** indicates barometric pressure value for **LOCAL** or **SEA LEVEL** and **SEA LEVEL** pressure for the past 24 hours.
- **Pressure Window** indicates pressure units displayed in inHg, hPa/mBar or mmHg, and altitude in meters or feet.

IMPORTANT: There are two options available for barometric pressure viewing – **SEA LEVEL** or **LOCAL**. It is suggested to select and program only one option.

If you wish to know pressure changes at your **specific location (house)**, then **LOCAL** barometric pressure should be selected. In this case, the local altitude/elevation must be programmed according to the GPS readings, Internet, etc.

If you wish to know pressure changes in your **surrounding metro area**, then **SEA LEVEL** barometric pressure option should be selected. In this case, the **SEA LEVEL** barometric pressure value can be adjusted according to the local metro area weather information. (Sources – local TV or radio station, etc.)

ACCESSING WEATHER AND PRESSURE WINDOWS

Press **UP** or **DOWN** buttons on the back of the main unit until the **WEATHER** and **PRESSURE** icons will start flashing on the upper left side of the display.

Programming Pressure & Altitude Parameters

During initial power up, the weather station won't operate (first 2 minutes), until the pressure and/or altitude parameters are not configured. The Pressure and Weather Forecast Window will show the pressure icon and abbreviation "inHg" flashing.

If no values are entered within first 2 minutes the unit will self-adjust to the default settings – inHg (inches of Mercury) for pressure units and 33 feet for altitude.

To set the pressure and/or altitude units and program the altitude or adjust the sea level

pressure during these 2 minutes:

- Press **UP** or **DOWN** arrow button selecting the pressure in inHg(inches of mercury), hPa (hectoPaskal)/mBar(millibars) or mmHg(millimeters of mercury)
- Press **SET** button to confirm and store selection. Then unit will advance to the altitude unit selection
- Press **UP** or **DOWN** arrow button selecting the altitude unit in feet or meters.

NOTE: When adjusting altitude, be noted that the last small digit is not a decimal but a whole number.

Example: "350" feet means 350 feet (three hundred fifty feet).

- Press **SET** button to confirm and store your selection. Unit will advance to the altitude programming
- Press **UP** or **DOWN** arrow button to adjust the altitude value. Press and hold either button for the advanced setting.
- Press **SET** to confirm the selected altitude value.
- Wait for about 15 seconds until unit will calculate and display adjusted pressure

VIEWING PRESSURE AND ALTITUDE INFORMATION

To view a pressure or altitude information, press **SET** button rotating between the sea level pressure, local pressure and local altitude screens.

PROGRAMMING SEA LEVEL PRESSURE

- Press **SET** button until the sea level pressure with "SEA LEVEL" is displayed
- Press and hold **SET** until the pressure digits are flashing
- Set the sea level pressure by pressing **UP** or **DOWN** buttons. Press and hold either button for the quick digits advance
- Press **SET** to confirm selection

PROGRAMMING PRESSURE AND ALTITUDE UNIT

- Press **SET** until the local pressure with the word "LOCAL" is displayed
- Press and hold **MEM** until the pressure unit is flashing
- Set the local pressure units by pressing the **UP** or **DOWN** buttons to adjust the pressure value
- Press **MEM** to confirm your selection
- Press **SET** button until the local altitude value will be displayed
- Press and hold **MEM** until the altitude unit is flashing
- Set the altitude unit in meters or feet by pressing the **UP** or **DOWN**
- Press **MEM** to confirm your selection
- Press **SET** until the sea level pressure with the word "SEA LEVEL" is

displayed

- Press and hold **MEM** until the pressure unit is flashing
- Set the sea level pressure unit by pressing **UP** or **DOWN**
- Press **MEM** to confirm your selection

VIEWING SEA LEVEL PRESSURE HISTORY

- In any mode press **HISTORY** button entering the sea level pressure display
- When the **SEA LEVEL** is displayed, press **HISTORY** repeatedly viewing the sea level pressure history for the past 24 hours in 1 hour intervals
- If no buttons are pressed for 5 seconds, the unit will automatically return to the default Pressure and Weather Forecast Mode

VIEWING PRESSURE, TEMPERATURE AND HUMIDITY BAR CHARTS




The bar chart in **Weather Window** can be configured to display a historical data for the sea level pressure and temperature or humidity for channel 1.




- Select the **Weather Window** by pressing **UP** or **DOWN**
- Press and hold **ALARM/CHART** button - the bar chart will display either - sea level pressure with a word "**PRESSURE**" displayed at the right bottom corner; temperature with a thermometer icon and "**CH1**" and a humidity with "**RH**" icon and "**CH1**"

VIEWING MOON PHASE HISTORY AND WEATHER FORECAST

- After selecting the **Weather Window**, press **MEM**, so "+ 0 days" is flashing
- Press **UP** or **DOWN** selecting from today's date a future (+) or past (-) days and the corresponding moon phase will be displayed. Press and hold either button for a quick advance
- To exit, press **MEM** button

UNDERSTANDING WEATHER FORECAST ICONS

Display	Weather Forecast
	Sunny
	Partly Cloudy
	Cloudy

	Rainy
	Unstable Weather
	Snow

Note: The weather forecast accuracy is approximately 70%.

Display shows forecasted, not current conditions. The SUNNY icon indicates clear weather, even when displayed during the night-time.

UNDERSTANDING MOON PHASE ICONS



TIME WINDOW

The main unit can be manually set to display the time, calendar or UTC time. There are three time alarms available on the main unit: Weekday alarm (**W**), Single alarm (**S**) and Ice Warning Alarm (**Pre-AI**).

- If **Weekday** alarm is activated, it will sound at the set time and the alarm icon will flash Mondays through Fridays
- If **Single** day alarm is activated, it will sound at the set time and the alarm icon will flash only for this specific day and will not activate on subsequent days
- The **Ice Warning Alarm** is activated at programmed time interval (from 15 to 90 minutes) before the weekday or single alarm, if channel 1 temperature falling to freezing and below.

Note: Ice Warning Alarm can be set only if one or both - Weekday or Single alarm are programmed.

The snooze duration for listed alarms can also be programmed up to 15 minutes.

ACCESSING TIME WINDOW

Press **UP** or **DOWN** until the **TIME** icon will flash.

PROGRAMMING YOUR LOCATION

IMPORTANT: There are two options available for programming a location – an **auto** and **manual**.

In case of an **auto programming**, select the closest city code from the codes list programmed in the unit, then all necessary location data (longitude, latitude, time zone and daylight savings time adjustment) will be set automatically.

In case of the **manual programming**, select the code **USR (user)** from the city codes list, then you would need to enter all location data (longitude, latitude, time zone and daylight savings time adjustment) manually.

AUTO-PROGRAMMING

- In the **Time Window**, press and hold **SET** button until the day of week language abbreviation "**ENG**" will flash
- Press the **UP** or **DOWN** selecting the day of the week in English, German, French, Italian, Spanish or Dutch
- Press **SET** to confirm selection
- Select the city code closest to your area by pressing **UP** or **DOWN**. Refer to P. for a list of available codes
- Press **SET** to confirm the selection and enter to the year, calendar and time setting mode
- Press the **UP** or **DOWN** selecting the current year, date, month, time format, hour and minutes
- Press **SET** every time to confirm each selection and move to the next

MANUAL PROGRAMMING

- In the **Time Window**, press and hold **SET** button until the day of week language abbreviation "**ENG**" will flash
- Press the **UP** or **DOWN** selecting the day of the week in English, German, French, Italian, Spanish or Dutch
- Press **SET** to confirm selection
- Select the code **USR** by pressing **UP** or **DOWN**
- Press **SET** to confirm selection and enter to the latitude and longitude setting mode (the degrees of latitude will flash)
- Press **UP** or **DOWN** to adjust the latitude (degrees, minutes and direction).

Press and hold either button for quick digits advance

- Press **SET** to confirm selection
- Continue setting the longitude (degrees, minutes and direction) using the same technique
- Press **SET** to confirm the selection – **0:00 + tz** will flash prompting to enter the Time Zone setting mode (the Time Zone data is provided on P.)
- Set the Time Zone by pressing **UP** or **DOWN** to adjust the time in 30 min intervals. Press and hold either button for quick digits advance
- Press **SET** to confirm selection – the **DST no** will flash prompting to set the Daylight Savings Time option
- Press **UP** to enable and **DOWN** to disable the DST option
- Press **SET** to confirm selection and the year digits will flash
- Continue setting the year, month, day, calendar format (day/month or month/day), time format (12 or 24 hours), local hour and minutes, using the same technique

After programming is complete the display will return to the default **Time Window**.

Note: Press and hold **SET** anytime during the setup to return to the default **Time Window** and all previous settings will be cancelled.

DIFFERENT CLOCK AND CALENDAR MODES

In the **Time Window** press **SET** selecting either:

- Hour and Minutes with the Day of the week
- Hour and Minutes with the City code
- Hour and Minutes with the Seconds
- Month with the day and a year
- Hour and Minutes for UTC (Coordinated Universal Time)

ACTIVATING OR DEACTIVATING ALARMS

- Press the **ALARM/CHART** to display the Weekday Alarm (**W**), Single Alarm (**S**) or Ice Warning Alarm (**Pre-AL**) time. If these alarms are not set, the abbreviation **OFF** will be displayed
- To enable or disable any of these alarms, press **UP** or **DOWN**

Note: Press **SET** anytime during alarm selection mode to return to the default clock display.

PROGRAMMING ALARMS

- In the **Time Window**, press the **ALARM/CHART** selecting the desired alarm- **W, S** or **PRE-AL**
- Press and hold **ALARM/CHART** button until the hour digit will flash

- Set the alarm hour using the **UP** or **DOWN**. Press and hold either button for quick digit advance.
- Press **ALARM/CHART** to confirm selection
- Set the alarm minutes using **UP** or **DOWN**. Press and hold either button for quick digit advance
- Press **ALARM/CHART** to confirm selection – the snooze interval digits will flash
- Set a Snooze interval (all three alarms share same snooze time duration) using **UP** or **DOWN**. Press and hold either button for quick digit advance
- Press **ALARM/CHART** to confirm your selection

After programming is completed, the display will return to the alarm selection screen.

NOTE: Ice Warning Alarm (**PRE-AL**) cannot be set if weekday alarm (**W**) or single alarm(**S**) is not enabled.

ACTIVATING OR DEACTIVATING SNOOZE

To enable a snooze function press **LIGHT/SNOOZE** button.

NOTE: Alarm will automatically enter the snooze mode if no buttons are pressed after the alarm sounds for 2 minutes. This will occur for a maximum of three times.

To disable alarm(s):

Press **ALARM/CHART** entering into a specific alarm mode and press **ALARM/CHART** again to disable this alarm.

NOTE: For weekday alarm (**W**), pressing **ALARM/CHART** will only disable the alarm for the current day. The alarm will activate again on the next day, Monday through Friday.

WWVB RADIO CONTROLLED TIME

The NIST (National Institute of Standards and Technology) radio station (WWVB) is located in Ft. Collins, Colorado. It transmits an exact time signal continuously throughout the most of the continental United States at 60 KHz frequency. The Atomic Time Clock in your Weather Station can receive this WWVB signal through the internal antenna from up to 2,000 miles away. Due to the nature of the Earth's ionosphere, reception can be limited during the daylight hours. The radio controlled clock will search for an alternate station that receives the atomic time signal from the NIST Atomic clock in Boulder, Colorado.

The WWVB tower icon on the unit's display will flash indicating a radio signal reception from the WWVB station. If the tower icon is not fully lit, or if the time and date are not set automatically, please consider the following:

- During night-time hours, atmospheric disturbances are typically less severe and radio signal reception may improve. A single daily reception is sufficient enough to keep the clock accuracy within 1 second.

- Make sure the unit is positioned at 8 feet (2 meters) distance from any interference source such as a TV, computer monitor, microwave, etc.
- Within concrete wall rooms such as basements or office buildings, the received signal may be weakened. Always place the Projection Clock near the window for better reception.

Once the atomic time signal is received, the date and time will be set automatically, and the [🗼] icon will appear.





After the clock is set manually, place the main unit by the window for the better reception.

The atomic clock receiver is programmed that it will continue to search for the atomic time signal daily for every hour between 1:00 am and 4:30 am.

Once the time signal has been successfully received, the time and date will be updated automatically.

To enable or disable the atomic time receiver:

- Press and hold **UP** - if atomic time reception is activated, a triangular tower icon will start flashing next to the clock icon. If reception is disabled, the triangular tower icon will disappear.

Icon	Atomic Time Reception Strength
 (Flashing)	Undefined data
	Reception failed for the past 24 hours
	Weak signal, but can be decoded
	Strong signal

SUNRISE/SUNSET WINDOW



The main unit is able to calculate the sunrise and sunset times depending on the user defined location. The location data contains the longitude, latitude, time zone and DST (Daylight Saving Time).

If the closest city code is selected, the main unit will automatically generate all of the correct data for specified location.

If you cannot find the closest city code or would like to enter your specific location, select "**USR**" as the city code during the setup.

A search function is also available. It allows viewing the sunrise/sunset times for different dates.

ACCESSING SUNRISE/SUNSET WINDOW

Press **UP** or **DOWN** until the sunrise and sunset icons   on the lower left of the display will start flashing.

PROGRAMMING YOUR LOCATION

- In **Sunrise/Sunset Window**, press and hold **SET** until the city code in the **Time Window** will flash entering the location programming mode.
- Select the city code closest to your area by pressing the **UP** or **DOWN**. Refer to P. for a list of available codes. The corresponding longitude and latitude will be displayed in Sunrise/Sunset Window along with the city code.
- If you wish to enter the geographical coordinates yourself, select the “**USR**” (user) as a city code.
- Press **SET** to confirm your selection and enter into the geographical coordinates programming mode – the latitude degrees will flash

PROGRAMMING LATITUDE, LONGITUDE, TIME ZONE AND DST

- Press **UP** or **DOWN** to adjust the digits. Press and hold either button for fast advance.
- Press **SET** to confirm your selection.
- Repeat above procedure to set latitude and longitude minutes, longitude degrees, time zone, and DST selection.
- Once programming is completed, the display will return to the Sunrise/Sunset Window.

VIEWING LOCATION DATA

In **Sunrise/Sunset Window** press **SET** selecting either:

- Time and sunrise/sunset times
- Calendar and sunrise/sunset times
- Calendar and longitude/latitude

VIEWING SUNRISE/SUNSET TIMES FOR DIFFERENT DATES

- In **Sunrise/Sunset Window**, press **MEMORY** until the date in the **Time Window** will flash
- Press **UP** or **DOWN** selecting the desired date. Press and hold either button for fast digits advance
- The corresponding sunrise and sunset times will be displayed for the selected date
- Press **MEMORY** or **SET** to return display to the **Sunrise/Sunset Window**

UNDERSTANDING OF SUNRISE/SUNSET INFORMATION

The sunrise time displayed in the morning will be different from the one displayed in the afternoon/night:

For the period from 12 am to 12 pm the unit will display the sunrise time for a current day

For the period from 12 pm to 12am the unit will display a sunrise time for the next day with the “**NEXT DAY**” icon

At some locations, especially with high latitudes, sunrise and sunset events may not occur within 24 hours.

Display	Sunrise status	Display	Sunset status
FULL	Sunrise for the previous day	FULL	Sunset on the following day or later
----	No sunrise for the whole day	----	No sunset for the whole day

TEMPERATURE AND HUMIDITY WINDOW

The **Weather Station** supports up to 5 remote thermo hygrometers, corresponding to a separate channel of the temperature and relative humidity display. The temperature can be displayed in Celsius (°C) or Fahrenheit (°F).

The main unit carries the temperature and humidity sensor and uses this data to calculate an indoors comfort level - **Wet**, **Comfort** or **Dry**.

A temperature alert function is available for each channel. It can be programmed to sound if the channel temperature exceeds or falls below the pre-set upper and lower limits. The limits are the same for all remote channels.

Thermo-Hygrometer remote battery status is monitored on the main unit.

Note: The temperature alarms have a 0.5 °C deviation to prevent them from sounding due to small temperature fluctuations that are close to the set alarm value. This means that after the temperature reaches the alarm temperature, it will have to fall below the alarm temperature plus the deviation (0.5°C) to activate the alarm.

COMFORT LEVEL INDICATION

The main unit is capable of detecting and displaying the current indoor comfort levels of surrounding environment. The comfort level based on the combination of the current indoor temperature and humidity readings. The following comfort levels may be displayed: **COMFORT** (comfortable); **WET** (wet) and **DRY** (dry).

Indicator displayed	Temperature Range	Humidity Range	Shows current condition
COMFORT	20°C to 25°C (68°F to 77°F)	40%RH- 70%RH	Ideal for both relative humidity and temperature
WET	-5°C to 50°C (23°F to 122°F)	OVER 70%RH	Contains excess moisture
DRY	5°C to 50°C (23°F to 122°F)	BELOW 40%RH	Contains inadequate moisture

ACCESSING TEMPERATURE AND HUMIDITY WINDOW


Press **UP** or **DOWN** until the **IN** icon  on the upper right will flash.

VIEWING REMOTE (CHANNEL) TEMPERATURE AND HUMIDITY

Static Display:

In **Temperature and Humidity Window**, press the **CHANNEL** button to recall a different channel.

Channel Auto-Scan Display:

To enable automatic scan of the different channels, press and hold **CHANNEL**, until the  icon is displayed. Each valid channel will be alternately displayed with a 5 seconds delay.

NOTE: The channel Auto-scan feature can be active only if there **are more than one** remote sensors operating and are set to different channels.

RECALLING TEMPERATURE AND DEW POINT INFORMATION

In **Temperature and Humidity Window** press **SET** button recalling either:



- Temperature and relative humidity
- Dew point and relative humidity

PROGRAMMING TEMPERATURE IN CELSIUS OR FAHRENHEIT

In **Temperature and Humidity Window**, press and hold **SET** to toggle the temperature in Celsius (°C) or Fahrenheit (°F).



ACTIVATING OR DEACTIVATING ALARMS

In **Temperature and Humidity Window**, press the **ALARM/CHART** to recall a current

temperature for the corresponding channel, the upper temperature alert with  icon (if disabled, displays **OFF**), or lower temperature alert with  icon (if disabled, displays **OFF**).

Once the above alerts are displayed, press the **UP** or **DOWN** to enable or disable the corresponding alert.

PROGRAMMING ALARMS

- In the **Temperature and Humidity Window**, press **ALARM/CHART** selecting the desired alarm.
- Press and hold **ALARM/CHART** button until the remote temperature and  or  icon starts flashing.
- Adjust the temperature digits for the Temperature Alarm using the **UP** or **DOWN**. Press and hold either button for fast digits advance
- Press the **ALARM/CHART** to confirm selection and return to the temperature alarm selection screen

VIEWING REMOTE TEMPERATURE AND HUMIDITY MAX/MIN READINGS

In the **Temperature and Humidity Window** press the **MEM** button recalling:




- Current temperature and humidity
- Minimum temperature and humidity
- Maximum temperature and humidity at the remote location.

RESETTING REMOTE TEMPERATURE AND HUMIDITY MEMORY

In the **Temperature and Humidity Window**, press and hold **MEM** button to clear memory for all channels.

REMOTE SENSOR STATUS

The wave icon above the current channel number shows the connection status of the corresponding remote sensor:

Icon	Status
	Searching for the signals from the remote sensor
	Corresponding remote sensor signal received successfully
	No signals received for over 15 minutes

ALL REMOTE SENSORS SIGNAL ACTIVATION

The main unit can be manually activated to search for the signals from remote sensors by pressing and holding **DOWN** button.

RAIN WINDOW

The **Weather Station** records a current the total amount of the rainfall for the last hour, 24 hours, past day, past week and the past month. The rainfall can be displayed in **inches** or **mm**.

The daily rainfall can be programmed to alert you if the rainfall exceeds a pre-programmed limit.

ACCESSING RAIN WINDOW

Press **UP** or **DOWN** until the **RAIN** icon on the display starts flashing.

VIEWING RAIN STATISTICS

In the **Rain Window** press either **SET** or **MEM** button to recall:

- Current rainfall
- Rain for the last hour
- Rain for the last 24 hours,
- Yesterday rain
- Last week
- Last month.

Tip: For the rain rate estimate the **Last Hour** rainfall value is understood as “inch/hr” or “mm/hr”.

PROGRAMMING RAINFALL AMOUNT UNITS

In the **Rain Window**, press and hold **SET** button to program the rainfall units in mm or inches.

RESETTING RAIN STATISTICS MEMORY

In the **Rain Window**, press and hold **MEM** to reset all rainfall statistics.

ACTIVATING OR DEACTIVATING RAIN ALARM

- In the **Rain Window** press **ALARM/CHART** button to display either the current rainfall or the daily rainfall alarm (with “**ALARM HI**” displayed)
- If the rain alarm is disabled, the abbreviation “**OFF**” will be displayed; otherwise the rainfall alarm amount will be shown
- When the rainfall alarm amount is displayed, press **UP** to activate or **DOWN** to deactivate

PROGRAMMING DAILY RAINFALL ALARM

- In the **Rain Window**, press **ALARM/CHART** to display the rainfall alarm
- Press and hold **ALARM/CHART** until the “**ALARM HI**” will flash
- Set the desired amount for the rainfall alarm using **UP** or **DOWN** buttons. Press

and hold either button for fast digits advance.

- Press **ALARM/CHART** to confirm selection and the unit will return to the rainfall alert display.

WIND WINDOW

The front portion of the **Wind Window** shows wind direction in animated compass display. The wind direction can be displayed as compass point (i.e. NW) or in bearing starting from the North (i.e. 22.5°).

The upper left section of the **Wind Window** can be programmed to display either a temperature at the place of anemometer or the temperature adjusted to the wind chill factor.

The lower left section of the **Wind Window** indicates the average wind speed for the past 10 minutes, as well as gust, high wind speed and gust alarm information. It can also show records of the maximum wind speed and wind gust collected during the day.

The wind speed and gust can be programmed to alert you if the wind speed or gust exceeds a pre-set limit. The wind speed can be displayed in km/h, mph, m/s or knots.

ACCESSING WIND MODE

Press **UP** or **DOWN** until the **WIND** icon on the **Weather Station** display starts flashing.

OPERATING WIND WINDOW

In the **Wind Window** press the **SET** button to recall:

- Wind chill temperature with wind direction in bearings
- Wind chill temperature with a wind direction in compass points
- Temperature at anemometer and wind direction in compass points
- Temperature at anemometer and wind direction in bearings

PROGRAMMING WIND SPEED UNITS

In the **Wind Window**, press and hold **SET** to set the wind speed units in km/h, mph, m/s or knots.

VIEWING WIND STATISTICS

In the **Wind Window**, press the **MEM** button to recall:

- Current wind speed
- Daily maximum wind speed with “**DAILY MAX**” displayed
- Wind gust speed with a “**GUST**” displayed
- Daily maximum gust speed with a “**GUST DAILY MAX**” displayed

RESETTING WIND STATISTICS MEMORY

In the **Wind Window**, press and hold **MEM** to reset all wind statistics memory.

ACTIVATING OR DEACTIVATING ALARMS

In the **Wind Window** press **ALARM/CHART** to recall

- Current wind speed
- Wind speed alarm with the “**ALARM HI**” displayed
- Wind gust alarm with the “**GUST ALARM HI**” displayed
- Daily maximum wind speed with “**DAILY MAX**” displayed

If the specific alarm is disabled, “**OFF**” will be displayed; otherwise the alarm value will be shown.

When the wind alarm is displayed, press the **UP** or **DOWN** to activate or deactivate it.

PROGRAMMING HIGH WIND ALARM

- In the **Wind Window**, press **ALARM/CHART** to select the desired alarm (wind speed or wind gust speed)
- Press and hold **ALARM/CHART** button until speed digit will flash.
- Set the alarm using the **UP** or **DOWN**. Press and hold either button for fast digits advance.
- Press **ALARM/CHART** to confirm your selection and return to the high wind alarm selection screen.

MAINTANANCE

CHANGING BATTERIES

The battery status of each weather sensor is checked every hour. If the low battery indicator lights up, replace the batteries in the corresponding unit.

CHANGING BATTERIES IN THE MAIN UNIT

- First connect the AC/DC adaptor provided to the main unit to avoid losing any data
- Remove the battery compartment door on the back and replace all batteries. Do not mix old and new batteries
- Replace the battery compartment door

CHANGING BATTERIES IN REMOTE SENSORS

- Replace the batteries following the setup instructions for the corresponding sensor
- When the batteries are properly installed, the remote weather sensor will resume sending signals to the main unit
- To enforce an immediate remote signals search, press and hold **DOWN** on the main unit.

CLEANING

The main unit and outer casings of the remote weather sensors can be cleaned with a damp cloth. Small parts can be cleaned with a cotton tip or pipe-cleaner.

Never use any abrasive cleaning agents and solvents. Do not immerse any units with electronic parts in water or under running water.

ANEMOMETER

Check if the wind vane and wind cups can spin freely and are free from dirt, debris and spider webs.

RAIN GAUGE

Checking and cleaning the rain sensor in a timely manner will maintain an accuracy of the precipitation measurements.

- Detach the protective screen and lid
- Clean with soapy water and a damp cloth, removing dirt, leaves or debris
- Clean small holes and parts with Q-tips or pipe-cleaner
- Watch out for spiders or insects that might have crawled into the funnel
- Clean the swinging mechanism with a damp cloth

TROUBLESHOOTING

Check here before contacting customer service

Issue source	Symptom	Solution
Main unit - Radio	Multiple FIPS codes are stored, but radio responds only to alerts for one area	Make sure your radio location mode is set to MULTIPLE option
Main unit - Radio	CHECK OP message is displayed	1 Move unit close to the window as it lost NOAA reception 2. Make sure when during the SAME radio programming you selected "SINGLE" or "MULTIPLE" location and completed counties programming
Main unit - Radio	WEATHER/SNOOZE is pressed, but there is no broadcast	Make sure the telescopic antenna is fully extended and the radio is set to the NOAA channel in your area
Main unit - Radio	Radio did not receive the TEST signal from NOAA on Wednesday	Enable the TEST alert in your radio, as it is disabled by default
Main unit - Weather Station	US Atomic Time signal is not received	Place unit by the window and keep it there at least overnight
Main unit - Weather Station	The weather readings weather station are different from the TV, radio or official weather reports	The weather data may vary considerably due to different environmental conditions and placement. Check the placement tips included in this manual to site your weather sensors in the best possible way.
Remote sensor (anemometer, rain gauge or temperature/humidity sensor)	Cannot locate remote sensor	Check batteries
		Check location
	Cannot change the	Press and hold DOWN (▼) button on the Weather Station control panel to search for the signal from the remote sensor Press " RESET " after setting the

	channel	channel
	Cannot change the C° to F° and back	Press " RESET " after setting C/F
	Data does not match data on the main unit	Initiate manual sensor search (Press and hold DOWN (▼) button on the Weather Station control panel

PRECAUTIONS

This product is engineered to give you years of satisfactory service if handled carefully. Here are a few precautions:

- Do not immerse the units in water.
- Do not clean the units with abrasive or corrosive materials. They may scratch the plastic parts and corrode the electronic circuits.
- Do not subject the product to excessive force, shock, dust, temperature, or humidity, which may result in malfunctions, shorter lifespan, damaged batteries, and damaged parts.
- Do not tamper with the product's internal components. Doing so will invalidate the warranty and may cause damage. The product contains no user-serviceable parts.
- Use only fresh batteries. Do not mix new and old batteries.
- Read the user's manual thoroughly before operating the product.

APPENDIX 1 – CITY CODES

US and Canadian Cities

City	Cod	Zone	DST
Atlanta, Ga.	ATL	-5	SU
Austin, TX	AUS	-6	SU
Baltimore, Md.	BWI	-5	SU
Birmingham, Ala.	BHM	-6	SU
Boston, Mass.	BOS	-5	SU
Calgary, Alba.,	YYC	-7	SU
Chicago, IL	CGX	-6	SU
Cincinnati, Ohio	CVG	-5	SU
Cleveland, Ohio	CLE	-5	SU
Columbus, Ohio	CMH	-5	SU
Dallas, Tex.	DAL	-6	SU
Denver, Colo.	DEN	-7	SU
Detroit, Mich.	DTW	-5	SU
El Paso, Tex.	ELP	-7	SU
Houston, Tex.	HOU	-6	SU
Indianapolis, Ind.	IND	-5	NO
Jacksonville, Fla.	JAX	-5	SU
Las Vegas, Nev.	LAS	-8	SU
Los Angeles,	LAX	-8	SU
Seattle, Wash.	SEA	-8	SU
St. Louis, Mo.	STL	-6	SU
Tampa, Fla.	TPA	-5	SU
Toronto, Ont.,	YTZ	-5	SU

City	Cod	Zone	DST
Memphis, Tenn.	MEM	-6	SU
Miami, Fla.	MIA	-5	SU
Milwaukee, Wis.	MKE	-6	SU
Minneapolis, Minn.	MSP	-6	SU
Montreal, Que., Can.	YMX	-5	SU
Nashville, Tenn.	BNA	-6	SU
New Orleans, La.	MSY	-6	SU
New York, N.Y.	NYC	-5	SU
Oklahoma City, Okla.	OKC	-6	SU
Omaha, Neb.	OMA	-6	SU
Ottawa, Ont., Can.	YOW	-5	SU
Philadelphia, Pa.	PHL	-5	SU
Phoenix, Ariz.	PHX	-7	NO
Pittsburgh, Pa.	PIT	-5	SU
Portland, Ore.	PDX	-8	SU
San Antonio, Tex.	SAT	-6	SU
San Diego, Calif.	SAN	-8	SU
San Francisco, Calif.	SFO	-8	SU
San Jose, Calif.	SJC	-8	SU
Vancouver, B.C., Can.	YVR	-8	SU
Washington, D.C.	DCA	-5	SU
Vancouver, Canada	VAC	-8	SU

World Cities

City	Cod	Time	DST
Addis Ababa,	ADD	3	NO
Adelaide,	ADL	9.5	SA
Algiers, Algeria	ALG	1	NO
Amsterdam,	AMS	1	SE
Ankara, Turkey	AKR	2	SE
Asunción,	ASU	-3	sp
Athens, Greece	ATH	2	SE

City	Cod	Time	DST
Cairo, Egypt	CAI	2	sg
Calcutta, India (as	CCU	5.5	NO
Cape Town, South Africa	CPT	2	NO
Caracas, Venezuela	CCS	-4	NO
Chihuahua, Mexico	CUU	-6	SU
Copenhagen, Denmark	CPH	1	SE
Córdoba, Argentina	COR	-3	NO

Bangkok,	BKK	7	NO
Barcelona, Spain	BCN	1	SE
Beijing, China	BEJ	8	NO
Belgrade,	BEG	1	SE
Berlin, Germany	BER	1	SE
Birmingham,	BHX	0	SE
Bogotá, Colombia	BOG	-5	NO
Bordeaux, France	BOD	1	SE
Bremen,	BRE	1	SE
Brisbane,	BNE	10	NO
Brussels, Belgium	BRU	1	SE
Bucharest,	BBU	2	SE
Budapest,	BUD	1	SE
Buenos Aires,	BUA	-3	NO
Kinshasa, Congo	FIH	1	NO
Kuala Lumpur,	KUL	8	NO
La Paz, Bolivia	LPB	-4	NO
Lima, Peru	LIM	-5	NO
Lisbon, Portugal	LIS	0	SE
Liverpool,	LPL	0	SE
London, England	LON	0	SE
Lyon, France	LYO	1	SE
Madrid, Spain	MAD	1	SE
Manila,	MNL	8	NO
Marseille, France	MRS	1	SE
Melbourne,	MEL	10	SA
Mexico City,	MEX	-6	SU
Milan, Italy	MIL	1	SE
Montevideo,	MVD	-3	SM
Moscow, Russia	MO	3	SK
Munich, Germany	MUC	1	SE
Nairobi, Kenya	NBO	3	NO
Nanjing	NKG	8	NO
Naples, Italy	NAP	1	SE
New Delhi, India	DEL	5.5	NO
Odessa, Ukraine	ODS	2	SE
Osaka, Japan	KIX	9	NO

Dakar, Senegal	DKR	0	NO
Dublin, Ireland	DUB	0	SE
Durban, South Africa	DUR	2	NO
Frankfurt, Germany	FRA	1	SE
Glasgow, Scotland	GLA	0	SE
Guatemala City,	GUA	-6	NO
Hamburg, Germany	HAM	1	SE
Havana, Cuba	HAV	-5	SH
Helsinki, Finland	HEL	2	SE
Hong Kong, China	HKG	8	NO
Irkutsk, Russia	IKT	8	SK
Jakarta, Indonesia	JKT	7	NO
Johannesburg, South	JNB	2	NO
Kingston, Jamaica	KIN	-5	NO
Oslo, Norway	OSL	1	SE
Panama City, Panama	PTY	-5	NO
Paris, France	PAR	1	SE
Perth, Australia	PER	8	NO
Prague, Czech Republic	PRG	1	SE
Rangoon, Myanmar	RGN	6.5	NO
Reykjavik, Iceland	RKV	0	NO
Rio de Janeiro, Brazil	RIO	-3	sb
Rome, Italy	ROM	1	SE
Salvador, Brazil	SSA	-3	NO
Santiago, Chile	SCL	-4	sc
São Paulo, Brazil	SPL	-3	sb
Shanghai, China	SHA	8	NO
Singapore, Singapore	SIN	8	NO
Sofia, Bulgaria	SOF	2	SE
Stockholm Arlanda,	ARN	1	SE
Sydney, Australia	SYD	10	SA
Tokyo, Japan	TKO	9	NO
Tripoli, Libya	TRP	2	NO
Vienna, Austria	VIE	1	SE
Warsaw, Poland	WA	1	SE
Zürich, Switzerland	ZRH	1	SE

DST (Daylight Savings Time) definitions:

- SA** = Australian DST.
- SB** = South Brazilian DST - changes annually.
- SC** = Chile DST
- SE** = Standard European DST.
- SG** = Egypt DST
- SH** = Havana, Cuba DST
- SI** = Iraq and Syria DST
- SK** = Irkutsk & Moscow DST
- SM** = Montevideo, Uruguay DST
- SN** = Namibia DST
- SP** = Paraguay DST
- SQ** = Iran DST maybe changed annually.
- ST** = Tasmania DST
- SU** = Standard American DST.
- SZ** = New Zealand DST
- NO DST** = no = Places that do not observe DST;
- ON** = Always add 1 hour to the local standard time

APPENDIX 2 – NWR ALERT MESSAGES

Event Code	Level	Default
Administrative Message	Advisory	Off
Avalanche Watch	Watch	On
Avalanche Warning	Warning	On
Biological Hazard Warning	Warning	On *
Boil Water Warning	Warning	On
Blizzard Warning	Warning	On
Child Abduction Emergency	Advisory	On
Civil Danger Warning	Warning	On *
Civil Emergency Message	Warning	On *
Costal Flood Watch	Watch	On
Costal Flood Warning	Warning	On
Chemical Hazard Warning	Warning	On *
Contaminated Water Warning	Warning	On *
Dam Watch	Watch	On
Dam Break Warning	Warning	On *
Contagious Disease Warning	Warning	On *
Practice/Demo	Advisory	Off
Dust Storm Warning	Warning	On
Emergency Action Notification	Warning	On *
Emergency Action Termination	Advisory	On *
Earthquake Warning	Warning	On *
Immediate Evacuation	Warning	On *
Evacuation Watch	Watch	On
Food Contamination Warning	Warning	On *
Flash Flood Watch	Watch	On
Flash Flood Statement	Advisory	On
Flash Flood Warning	Warning	On
Flood Watch	Watch	On
Flood Statement	Advisory	On
Flood Warning	Warning	On
Fire Warning	Warning	On

Event Code	Level	Default
Flash Freeze Warning	Warning	On
Freeze Warning	Warning	On
Hurricane Statement	Advisory	On
Hazardous Materials Warning	Warning	On *
Hurricane Watch	Watch	On
Hurricane Warning	Warning	On *
High Wind Watch	Watch	On
High Wind Warning	Warning	On
Iceberg Warning	Warning	On
Industrial Fire Warning	Warning	On *
Local Area Emergency	Advisory	On *
Law Enforcement Warning	Warning	On *
Land Slide Warning	Warning	On *
National Audible Test	Advisory	Off
National Information Center	Advisory	Off
Network Notification Message	Advisory	Off
National Periodic Test	Advisory	Off
National Silent Test	Advisory	Off
Nuclear Power Plant Warning	Warning	On *
Power Outage Advisory	Advisory	On
Radiological Hazard Warning	Warning	On *
Required Monthly Test	Advisory	Off
Required Weekly Test	Advisory	Off
Special Marine Warning	Warning	On
Special Weather Statement	Advisory	On
Shelter In-Place Warning	Warning	On *
Severe Thunderstorm Watch	Watch	On
Severe Thunderstorm Warning	Warning	On
Severe Weather Statement	Advisory	On
Tornado Watch	Watch	On
911 Telephone Outage Emergency	Advisory	On
Tornado Warning	Warning	On *

Event Code	Level	Default
Tropical Storm Watch	Watch	On
Tropical Storm Warning	Warning	On *
Tsunami Watch	Watch	On *
Tsunami Warning	Warning	On *
Transmitter Backup On	Advisory	Off
Transmitter Carrier Off	Advisory	Off
Transmitter Carrier On	Advisory	Off
Transmitter Primary On	Advisory	Off
Volcano Warning	Warning	On *
Wild Fire Watch	Watch	On
Wild Fire Warning	Warning	On *
Winter Storm Watch	Watch	On
Winter Storm Warning	Warning	On
Unrecognized Watch	Watch	On
Unrecognized Emergency	Advisory	On
Unrecognized Statement	Advisory	On
Unrecognized Warning	Warning	On *

NOTE: *Alert is permanently **ON** and cannot be changed

SPECIFICATIONS

Weather Station

Radio Frequency: 433 MHz

RF Reception range: 100-328 feet (30 -100 m)

Barometric Pressure

Measuring Range: 14.75 inHg to 32.44 inHg (500 Hpa to 1100Hpa); (374.5 mmHg to 823.8 mmHg)

Resolution: 0.003 inHg (0.1 Hpa, 0.08 mmHg)

Accuracy: 0.015 inHg (0.5 Hpa; 0.38 mmHg)

Sampling interval: 20 minutes

Altitude Compensation Range: -657 ft to 16404 ft (-200m to +5000 m)

Temperature (Indoor)

Operating Range: 14.2°F to 140°F (-9.9°C to 60°C)

Resolution: 0.2°F (0.1°C)

Accuracy: 2°F (1°C)

Sampling Interval: 10 seconds

Temperature (remote)

Range: -40°F to 176°F (-40°C to 80°C)

Resolution: 0.2°F (0.1°C)

Accuracy: 2°F (1°C)

Transmitting Interval: around 47 seconds

Humidity (Indoor)

Operating Range: 0% to 99%

Resolution: 1%

Accuracy: 5%

Sampling Interval: 10 seconds

Humidity (Outdoor)

Operating Range: 0% to 99%

Resolution: 1%

Accuracy: 5%

Sampling Interval: 10 seconds

Transmitting Interval: around 47 seconds

Sunrise and Sunset

Accuracy: 1min (latitude within 50°)

Wind Direction

Range: 0° to 360°

Resolution: 22.5°

Accuracy: 11.25°

Starting Threshold: 3mph (4.8 Km/h)

Transmitting interval: 33 seconds

Wind Speed

Range: 0 to 100 mph (160 Km/h, 86.897 Knots)

Resolution: 0.1mph (0.16 Km/h)

Accuracy: (2mph + 5%)

Starting Threshold: 3mph (4.8 Km/h)

Wind/Gust Speed Display Update Interval: 33 seconds

Wind/Gust Sampling Interval: 11 seconds

Rainfall

1h/24h/yesterday range: 0 to 78.73 inch (0 to 1999.9 mm)

Last week/ last month range: 0 to 787.3 inch (0 to 19999 mm)

Resolution: 0.03 inch (0.6578 mm)

Accuracy: +/- 5% +/- 0.03 inch (+/-5%mm +/-0.6875)

Transmitting Interval: 183 seconds

Hardware Requirement for Weather Capture PC software

Operating System: Windows 98 or above

Memory size: Ram 128 MB or more

Hard disk size: 100 MB free space or more

Optical Device: 2 x CD-Rom drive

Weather Radio

Radio Frequency Band: from 162.400MHz to 162.500MHz

Operating Range: about 40 miles (65 km) radius

Channels: Digital PLL tuning for 7 NOAA channels

SAME programming: All, MULTIPLE (for 9 counties) or SINGLE

Volume: 16 levels

Receiving Sensitivity: 100 dB μ V/m

FIPS/CLC Codes Sensitivity: 0.5 μ V

Signal to Noise Ratio: 45 dB

Channel Selectivity: +/- 25 kHz, 50dB

Alert out port rating: 200mA, pin positive

Power

Main unit: 6 x UM-3 or AA 1.5V battery; 9V AC/DC power adaptor (300mA; center pin positive)

Remote Thermo Hygrometer: 2 x UM-3 or AA 1.5V battery

Remote Anemometer: 2 x UM-3 or AA 1.5V battery

Remote Rain Gauge: 2 x UM-3 or AA 1.5V battery

Battery life (alkaline)

Main unit: around 24 hours

Thermo-Hygrometer: over 12 months

Anemometer: 2 years

Rain Gauge: 2 years

Weight (without batteries)

Main unit: 1.55lbs (703g)

Remote Thermo-Hygrometer: 2.29oz (65g)

Remote Anemometer: 11.12oz (315g)

Remote Rain gauge: 10.24oz (290g)

Dimensions

Main unit: 7.32 (L) x 9.76 (H) x 1.42 (D) inches / 186 (L) x 248 (H) x 36 (D) mm

Remote Thermo - Hygrometer: 2.37(L) x 4(H) x 1(D) inches / 60(L) x 101(H) x 25(D) mm

Remote Anemometer: 19.16(L) x 19.16(H) x 15.35(D) inches / 486.6(L) x 486.6(H) x 390(D) mm

Remote Rain gauge: 6.49(L) x 6.89(H) x 4.72(D) inches / 165(L) x 175(H) x 119(D) mm

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment had been tested and found to comply with the limits for a Class B Digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment, installed and used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to improve or correct turning the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DECLARATION OF CONFORMITY

We

Name: Hideki Electronics, Inc.

Address: 7945 SW Mohawk, Tualatin, OR 97062

Telephone No.: 1 503 612 8395

declare that the product

Product No.: TN924W

Product Name: Honeywell Weather Information Station

Manufacturer: Hideki Electronics Ltd.

Address: Unit 2304-06, 23/F Riley House, 88 Lei Muk Road, Kwai Chung, New Territories, Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

The information above is not to be used as a contact for support or sales. Please call our customer service (refer to the Standard Warranty Information) for all injuries instead.

STANDARD WARRANTY INFORMATION

This product is warranted from manufacturing defects for **one year** from the date of retail purchase. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and repair.

Note that online product registration is required to ensure valid warranty protection.

To register your product, go to our Company website at:

www.honeywellweatherstations.com. Click Online Product Registration under the Customer Service menu.

Should you require assistance with this product and its operation, please contact our Customer Service **1(866) 443 3543**.

Please direct all returns to the place of the original purchase. Should this not be possible, contact Hideki Customer Service for assistance and to obtain a Return Merchandise Authorization (**RMA**). Returns without a return authorization will be refused. Please retain your original receipt as you may be asked to provide a copy for proof of purchase.

Hideki Electronics, Inc. reserves the right to repair or replace the product at our option. Copyright (2007) Hideki Electronics Inc. All Rights Reserved. The Honeywell Trademark is used under license from Honeywell Intellectual Properties Inc.

Honeywell International Inc. makes no representations or warranties with respect to this product.

All user manual contents and information are subject to change.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>